

[manuals.plus](#) /› [Miele](#) /› **Miele Duoflex HX1 Cordless Bagless Stick Vacuum Cleaner Instruction Manual****Miele 12556610**

Miele Duoflex HX1 Cordless Bagless Stick Vacuum Cleaner Instruction Manual

MODEL: DUOFLEX HX1 (12556610)

1. Introduction

Thank you for choosing the Miele Duoflex HX1 Cordless Bagless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference. The Miele Duoflex HX1 is designed for powerful and flexible cleaning performance across various surfaces. Its digital efficiency motor delivers high suction power, while the lightweight and adaptable design ensures ease of use for comprehensive home cleaning.



Figure 1: Miele Duoflex HX1 Cordless Stick Vacuum Cleaner, showcasing its sleek design and primary configuration.

2. Setup and Assembly

Your Miele Duoflex HX1 features a modular design, allowing for versatile configurations to suit different cleaning needs. Follow these steps for initial setup and assembly.

2.1 Unboxing and Component Identification

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present. Familiarize yourself with the main unit, extension wand, MultiFloor Electrobrush, and included accessories.



Figure 2: The Miele Duoflex HX1 main unit, extension wand, and MultiFloor Electrobrush, illustrating its adaptability for various cleaning tasks.

2.2 Charging the Battery

Before first use, fully charge the lithium-ion battery. The battery can be charged while attached to the vacuum or independently using the additional charger (if included with your model). A full charge takes approximately 3.5 hours and provides up to 55 minutes of running time on power level 1 without the electrobrush.



Long Running Time

Up to 55 minutes on
MIN level without electrobrush.

*Valid for power level 1 without connected electrobrush.

Figure 3: The LED indicator on the Miele Duoflex HX1 displays the battery charge level, with three bars indicating a full charge.

2.3 Assembling the Vacuum

Connect the main unit to the extension wand, and then attach the MultiFloor Electrobrush. Ensure all connections click securely into place. The modular design allows for quick transitions between stick and handheld modes.

Your browser does not support the video tag.


Video 1: Explore the Miele Duoflex HX1 Extra. This video demonstrates the flexible setup options and key features of the Miele Duoflex HX1 Extra vacuum cleaner.

3. Operating Instructions

The Miele Duoflex HX1 offers intuitive controls and adaptable performance for various cleaning scenarios.

3.1 Power Settings

The vacuum features multiple power levels. Use lower settings for light cleaning and extended battery life, and higher settings for stubborn dirt. The Digital Efficiency Motor provides powerful suction comparable to conventional Miele vacuums.

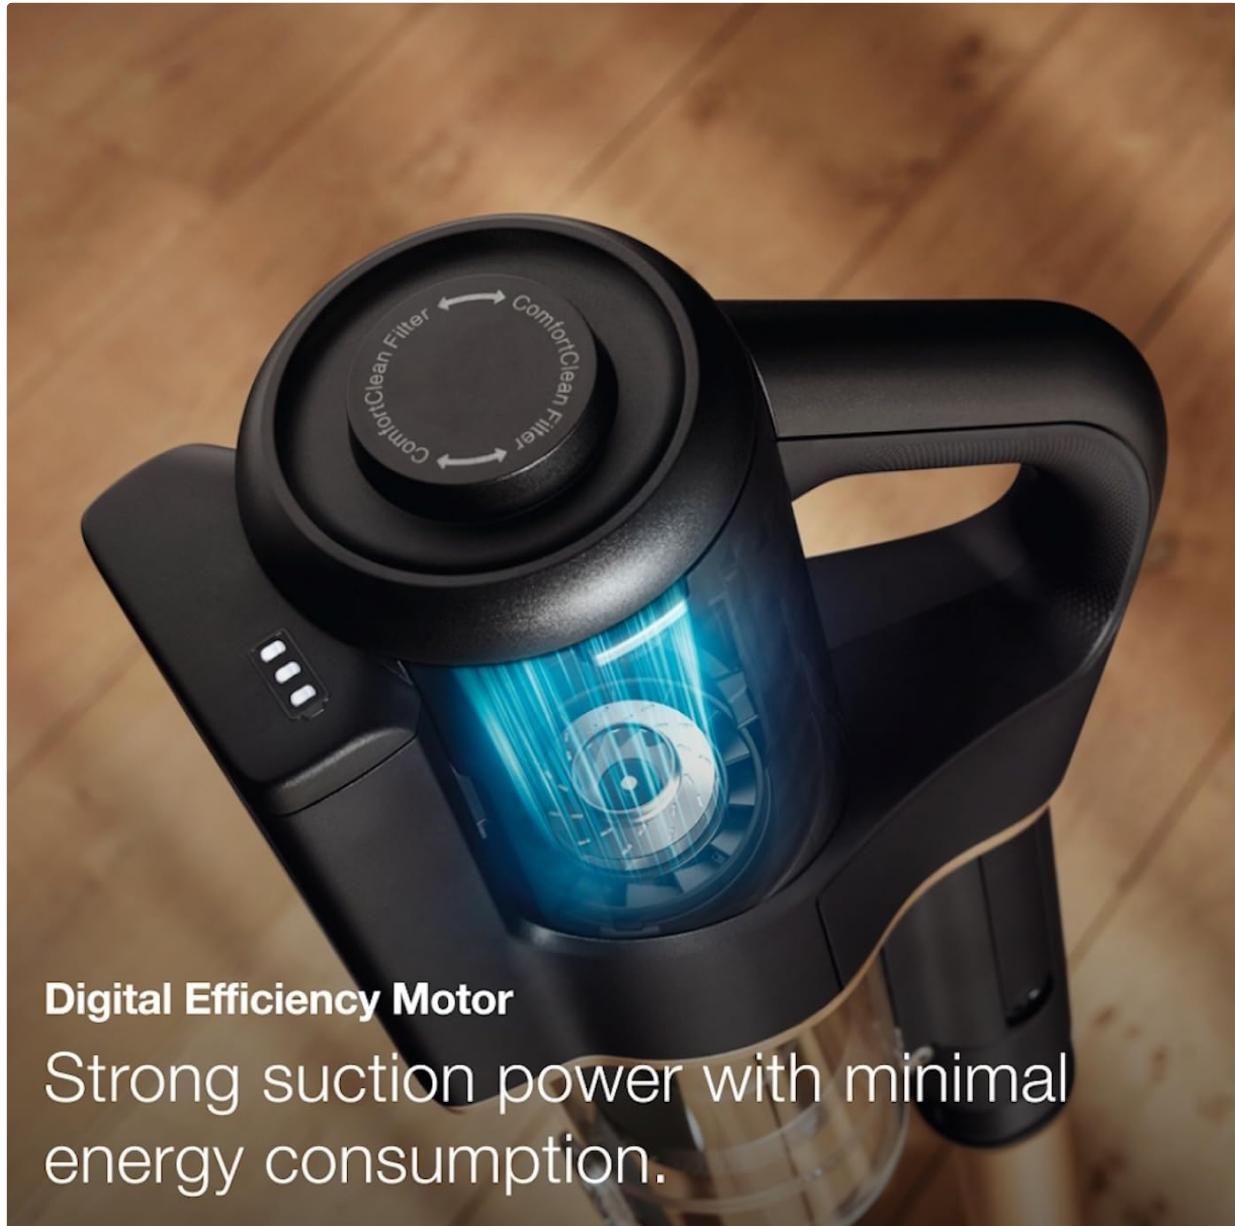

Digital Efficiency Motor

Strong suction power with minimal energy consumption.

Figure 4: The Digital Efficiency Motor of the Miele Duoflex HX1 ensures powerful cleaning performance.

3.2 MultiFloor Electrobrush

The Intelligent MultiFloor Electrobrush automatically adjusts its power and glides seamlessly between hard floors and carpets, optimizing cleaning performance without manual intervention.




Multifloor Electrobrush

Automatically detecting different floor types and adjusting to them.

Figure 5: The MultiFloor Electrobrush automatically adapts to different floor types for continuous cleaning.


3.3 Flexible Use and Accessories

The Duoflex HX1 can be configured as a full-size stick vacuum or a compact handheld unit. Use the handheld mode with included accessories like the crevice tool, dusting brush, and upholstery nozzle for cleaning furniture, tight spaces, and high-up areas.

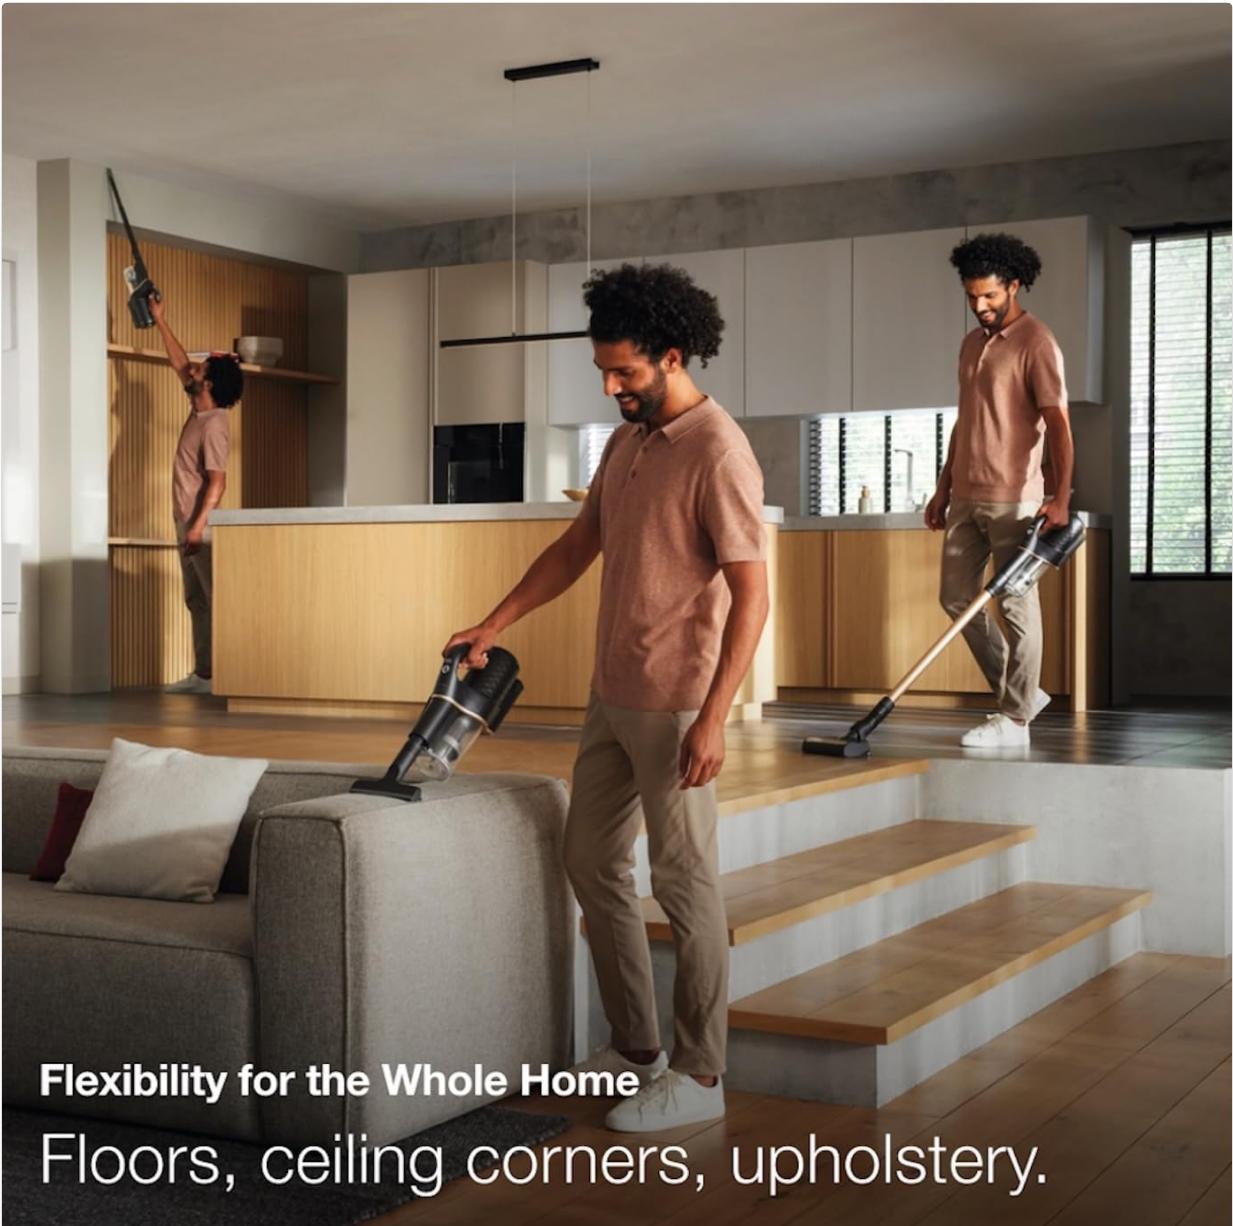

Flexibility for the Whole Home
Floors, ceiling corners, upholstery.

Figure 6: The Miele Duoflex HX1 in handheld mode, ideal for cleaning upholstery and hard-to-reach areas.

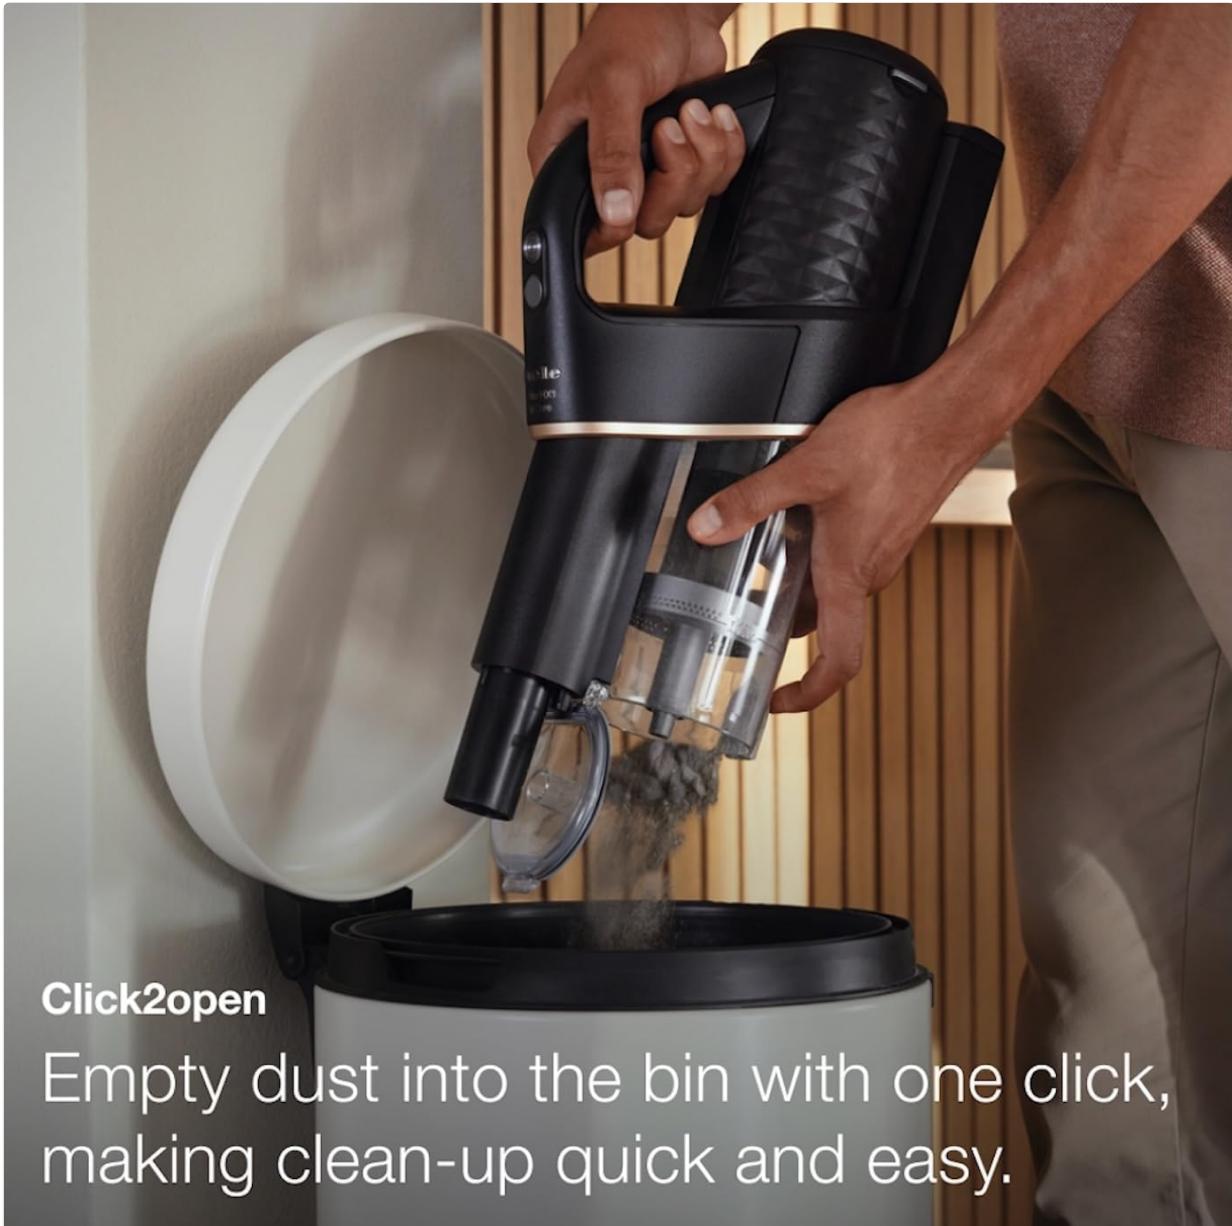

Click2open

Empty dust into the bin with one click, making clean-up quick and easy.

Figure 7: The flexible design allows the vacuum to lie flat, enabling easy cleaning under low furniture.

4. Maintenance

Regular maintenance ensures optimal performance and longevity of your Miele Duoflex HX1.

4.1 Emptying the Dust Bin

The bagless design allows for quick and hygienic emptying. Simply use the Click2open function to release the dust from the container directly into a waste bin.



Figure 8: Emptying the dust bin is quick and convenient with the Click2open mechanism.

4.2 Filter Cleaning

The Duoflex HX1 includes a hygiene filter that captures 99.99% of fine particles and allergens. Regularly check and clean the filter according to the instructions provided in the full user manual to maintain filtration efficiency.



Hygiene Filter

99.99%* vacuum filtration.

*acc. to IEC 62885-4

Figure 9: The hygiene filter ensures high-efficiency vacuum filtration for cleaner air.

4.3 Brush Roll Maintenance

Periodically inspect the MultiFloor Electrobrush for tangled hair or debris. Remove any obstructions to ensure the brush rotates freely and maintains effective cleaning.

5. Troubleshooting

If you encounter issues with your Miele Duoflex HX1, refer to the following common troubleshooting tips:

- **No Power:** Ensure the battery is fully charged and correctly inserted. Check the power outlet if charging independently.
- **Reduced Suction:** Empty the dust bin. Check and clean the hygiene filter. Inspect the brush roll and all attachments for blockages.
- **Brush Roll Not Rotating:** Check for tangled hair or debris in the brush roll. Ensure the MultiFloor Electrobrush is correctly attached.
- **Unusual Noise:** Turn off the vacuum and check for any foreign objects in the brush roll, hose, or dust bin.

For more detailed troubleshooting or persistent issues, please consult the comprehensive user manual or contact Miele customer support.

6. Specifications

Brand	Miele
Model Name	Duoflex Vacuum Cleaner
Item Model Number	12556610
Color	Brilliant White / Space Grey / Nordic Blue
Power Source	Battery Powered
Battery Type	Lithium-Ion
Battery Life	Up to 55 minutes (Power level 1, without electrobrush)
Charging Time	3.5 Hours
Wattage	260 watts
Motor Horsepower	210 Watts
Capacity	0.3 Liters
Filter Type	Non-washable Hygiene Filter (99.99% filtration)
Item Weight	6.9 pounds
Product Dimensions	11.4" L x 7.6" W x 29.9" H
Special Features	Bagless, Compact, Cordless, Lightweight, Portable, Digital Efficiency Motor, MultiFloor Electrobrush

7. Warranty and Support

Miele products are known for their durability, reliability, and ease of use. For specific warranty information, please refer to the warranty card included with your product or visit the official Miele website. For customer support, service, or to order replacement parts, please contact Miele directly through their official channels. Miele is committed to providing high-quality appliances and excellent customer service. Should you require assistance, their team is available to help.