

[Manuals.plus](#) /

› [Diecast Masters](#) /

› 1/6 RC Ski-doo Snowmobile MXZ Blizzard RTR Instruction Manual

Diecast Masters 30601

1/6 RC Ski-doo Snowmobile MXZ Blizzard RTR

INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for purchasing the Diecast Masters 1/6 RC Ski-doo Snowmobile MXZ Blizzard. This remote-controlled snowmobile is an officially licensed replica designed for exhilarating adventures on various terrains, including snow and dry ground. It features a 2.4GHz full-function radio control system, working lights, a detailed rider figure, and a functional suspension system. Please read this manual thoroughly before operating your snowmobile to ensure safe and optimal performance.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always operate the snowmobile in open areas away from people, pets, and obstacles.
- Do not operate near public roads or in areas with vehicle traffic.
- Keep fingers, hair, and loose clothing away from moving parts such as the track and skis.
- Do not immerse the snowmobile or remote control in water.
- Adult supervision is recommended for children under 14 years of age.
- Use only the provided battery and charger. Improper use can lead to fire or injury.
- Do not attempt to modify or disassemble the snowmobile or its components.

3. PACKAGE CONTENTS

Please ensure all items listed below are present in your package:

- 1/6 RC Ski-doo Snowmobile MXZ Blizzard

- 2.4GHz Remote Control
- Rechargeable Lithium Battery (for snowmobile)
- USB Charging Cable
- Interchangeable Pair of Skis (with/without wheels)



Image: The RC Ski-doo Snowmobile MXZ Blizzard as packaged in its retail box, showing the product and accessories.

4. SETUP

4.1 Charging the Snowmobile Battery

1. Locate the battery compartment on the snowmobile.
2. Connect the rechargeable Lithium Battery to the snowmobile's power port.
3. Connect the USB Charging Cable to the battery and then to a standard USB power adapter (not included) or computer USB port.
4. The charging indicator light on the USB cable will show charging status (refer to charger instructions for specific light patterns).
5. Charge until fully charged (approximately 2-3 hours for first use). Do not overcharge.

4.2 Installing Remote Control Batteries

- The remote control requires 2x AA batteries (not included).
- Open the battery compartment on the back of the remote control.
- Insert the batteries, ensuring correct polarity (+/-).
- Close the battery compartment securely.

4.3 Attaching Interchangeable Skis

The snowmobile comes with two sets of skis: one for snow and one with wheels for dry ground. Choose the appropriate set for your play environment.

1. Align the pins on the skis with the corresponding holes on the snowmobile's front suspension.
2. Gently push the skis into place until they click securely.
3. To remove, press the release tabs (if present) and pull the skis off.



Image: The RC Ski-doo Snowmobile displayed with its remote control and the two sets of interchangeable skis, one with wheels and one without.

4.4 Pairing the Remote Control

1. Ensure both the snowmobile and the remote control are powered off.
2. Turn on the snowmobile. The indicator light on the snowmobile will blink.
3. Turn on the remote control. The indicator light on the remote will blink.
4. Within a few seconds, both lights should become solid, indicating successful pairing. If not, turn both off and repeat the process.



Image: The 1/6 scale RC Ski-doo Snowmobile MXZ Blizzard with its accompanying remote control, ready for operation.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

- **Forward/Backward:** Push the left joystick forward to move the snowmobile forward, and pull it backward to move backward.
- **Turn Left/Right:** Push the right joystick left to turn the snowmobile left, and right to turn right.
- **Headlights:** The snowmobile features working headlights. These typically activate automatically when the snowmobile is powered on.



Image: A front view of the RC Ski-doo Snowmobile, highlighting its detailed design and headlights.



Image: A side view of the RC Ski-doo Snowmobile, showcasing its working rubber track and suspension system.

5.2 Operating Environment

- The snowmobile is designed for both indoor and outdoor play.
- For outdoor use, ensure the area is clear of debris, large obstacles, and deep water.
- The 2.4GHz radio control system provides a range of approximately 35 meters. Operating beyond this range may result in loss of control.
- Avoid operating in extreme temperatures or heavy precipitation.

6. MAINTENANCE

- **Cleaning:** After use, especially outdoors, gently wipe down the snowmobile with a damp cloth to remove dirt, snow, or debris. Do not use harsh chemicals or immerse in water.
- **Battery Care:** Always disconnect the battery from the snowmobile when not in use. Store the battery in a cool, dry place. If storing for extended periods, charge the battery to approximately 50% capacity.
- **Storage:** Store the snowmobile and remote control in a dry, cool environment, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check the track, skis, and suspension for any damage or wear. Ensure all connections are secure.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Snowmobile does not turn on.	Battery not charged or connected; Power switch off.	Ensure battery is fully charged and properly connected. Turn on the snowmobile's power switch.
Remote control not responding.	Remote control batteries low or incorrectly installed; Not paired.	Replace remote control batteries. Check polarity. Re-pair the remote control with the snowmobile.
Short operating range or intermittent control.	Low batteries in snowmobile or remote; Interference; Obstacles.	Charge snowmobile battery and replace remote batteries. Move to an area with less interference. Ensure clear line of sight.
Snowmobile moves slowly or track is stuck.	Low battery; Debris in track.	Recharge snowmobile battery. Clear any debris from the track and suspension system.

8. SPECIFICATIONS

Feature	Detail
Model Number	30601
Scale	1:6 Scale
Battery Type	Lithium-Ion (Rechargeable)
Material	Plastic
Colour	Neo Yellow

Feature	Detail
Product Dimensions	50.42 x 20.35 x 20.17 cm
Product Weight	2.6 kg
Recommended Age	8 years and up
Radio Control Frequency	2.4GHz
Control Range	35 meters

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact Diecast Masters directly. Keep your proof of purchase for any warranty claims.

Manufacturer: DIECAST MASTERS

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question