

[Manuals.plus](#) /

› [EZ-HEAT](#) /

› EZ-HEAT MTBNT-12 Mini Fireplace Space Heater User Manual

EZ-HEAT MTBNT-12

EZ-HEAT MTBNT-12 Mini Fireplace Space Heater User Manual

Model: MTBNT-12

1. INTRODUCTION

Thank you for purchasing the EZ-HEAT MTBNT-12 Mini Fireplace Space Heater. This compact and efficient heater is designed to provide warmth and a realistic 3D flame effect, enhancing the ambiance of your living space. For your safety and to ensure optimal performance, please read this manual thoroughly before operating the device and retain it for future reference.



Figure 1.1: The EZ-HEAT MTBNT-12 Mini Fireplace Space Heater in operation, showing the realistic 3D flame effect and warm air distribution.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please observe the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors. This heater is intended for indoor use only.

- This heater is not intended for use in bathrooms, laundry areas, or similar humid indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has a built-in tip-over switch that automatically shuts off the power if the unit is accidentally knocked over.
- An overheat protection sensor is included, which automatically shuts off the heater in the event of excessive heat.
- The body of the heater is designed to remain cool to the touch during operation, allowing for safe handling and movement.



Figure 2.1: Overview of the intelligent safety features including tip-over switch, overheat protection, cool-touch body, and ETL certification.

3. PRODUCT OVERVIEW

The EZ-HEAT MTBNT-12 is a compact electric fireplace heater featuring a realistic 3D flame effect and two heat settings. It is designed for portability and safety.

Add a Cozy Ambience to your Home

With **3D Fireplace Effect**



Figure 3.1: Front view of the heater, highlighting the realistic 3D flame and ember effects.

4. PACKAGE CONTENTS

- EZ-HEAT MTBNT-12 Mini Fireplace Space Heater Unit
- User Manual

5. SETUP

The EZ-HEAT MTBNT-12 Mini Fireplace Space Heater comes ready to use with no assembly required. Simply follow these steps:

1. Remove the heater from its packaging.
2. Place the heater on a firm, level surface, ensuring it is at least 3 feet (0.9 m) away from any walls, furniture, or other combustible materials.

3. Ensure the power cord is not obstructed or covered.
4. Plug the power cord into a standard 120V AC electrical outlet.

6. OPERATING INSTRUCTIONS

The heater features intuitive controls located on the top panel for easy operation.

Instant & Powerful Heat



Figure 6.1: Top panel controls for the EZ-HEAT MTBNT-12 heater.

6.1 Power On/Off and Heat Settings

1. **To Turn On:** Rotate the main control knob from the 'Off' position to either 'Low' or 'High' heat setting. The power indicator light will illuminate.
2. **Low Heat Setting:** Select 'Low' for a steady, warming airflow (approximately 600 Watts).
3. **High Heat Setting:** Select 'High' for a powerful current of warm air (approximately 1200 Watts).

4. **To Turn Off:** Rotate the main control knob back to the 'Off' position.



Figure 6.2: The two available heat settings: 600W (Low) and 1200W (High).

6.2 Flame Effect Operation

The realistic 3D flame effect can be operated independently of the heat function.

- **To Activate Flame Effect:** With the heater plugged in, rotate the 'Flame' knob. The flame effect will illuminate.
- **Adjust Flame Brightness:** Continue rotating the 'Flame' knob to adjust the brightness of the flame effect.
- **Flame Effect Without Heat:** You can use the flame effect without activating the heat by ensuring the main control knob is in the 'Off' position while the 'Flame' knob is adjusted.

7. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your heater.

- **Cleaning:** Always unplug the heater from the power outlet and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust vents.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- Do not attempt to open or repair the heater yourself. Refer all servicing to qualified service personnel.

8. TROUBLESHOOTING

If you experience issues with your EZ-HEAT MTBNT-12 heater, please consult the following table:

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit. Tip-over switch activated. Overheat protection activated.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker. Ensure the heater is on a flat, stable surface. If it was tipped, stand it upright and wait a few minutes before restarting. Unplug the heater, allow it to cool for 30 minutes, then plug it back in. Ensure vents are not blocked.
No heat, but flame effect works.	Heat setting is off or too low.	Ensure the main control knob is set to 'Low' or 'High' heat.
Flame effect does not work.	Flame knob is off or too low. Unit is unplugged.	Rotate the 'Flame' knob to increase brightness. Ensure the heater is plugged into a power outlet.
Heater makes unusual noise.	Normal fan operation. Obstruction in fan.	A slight fan noise is normal during operation. Unplug the unit and check for any visible obstructions in the vents. Do not attempt to disassemble.

9. SPECIFICATIONS

Detailed technical specifications for the EZ-HEAT MTBNT-12 Mini Fireplace Space Heater:

Feature	Specification
Brand	EZ-HEAT
Model Name	MTBNT-12 (Item Model Number: 32562)
Power Source	Corded Electric
Power Consumption	1200 Watts (High), 600 Watts (Low)

Feature	Specification
Heat Output	4095 British Thermal Units
Product Dimensions (D x W x H)	9.35" x 9.35" x 9.36"
Item Weight	4.3 Pounds
Material	Plastic
Finish Type	Polished
Installation Type	Freestanding
Special Features	Adjustable Flame, Flame Effect, Overheat Protection, Portable, Safety Shut Off
Room Type	Bedroom, Dining Room, Home Office, Living Room
Ventilation Type	Vent Free
UPC	810087325626



Figure 9.1: Dimensions of the EZ-HEAT MTBNT-12 Mini Fireplace Space Heater.

10. WARRANTY INFORMATION

This EZ-HEAT MTBNT-12 Mini Fireplace Space Heater is covered by a **Limited Warranty**. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for any warranty claims.

11. CUSTOMER SUPPORT

For technical assistance, warranty claims, or general inquiries regarding your EZ-HEAT MTBNT-12 Mini Fireplace Space Heater, please contact:

- **Brand:** EZ-HEAT
- **Manufacturer:** Mr. Brands, LLC.

Please have your model number (MTBNT-12) and purchase information ready when contacting customer support.