

WHALL KST076AU

WHALL 4-Slice Smart Toaster User Manual

Model: KST076AU

- Overview
- Safety Instructions
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. PRODUCT OVERVIEW

The WHALL 4-Slice Smart Toaster (Model KST076AU) is designed for efficient and customizable toasting. It features a color touchscreen, dual independent controls for simultaneous toasting of different items, and extra-wide slots to accommodate various bread types. With 6 smart modes and 6 browning levels, this toaster offers precise control for optimal results. Additional features include a silent mode, memory function, auto shut-off for safety, and a removable crumb tray for easy cleaning.



Image 1.1: The WHALL 4-Slice Smart Toaster, showcasing its sleek design and touchscreen interface.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the toaster and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a risk of fire or electric shock.

- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate unattended.
- Bread may burn. Therefore, toasters must not be used near or below curtains and other combustible materials. They must be supervised when in use.

3. SETUP AND FIRST USE

3.1 Unpacking

- Carefully remove the toaster and all packaging materials from the box.
- Remove any protective films or stickers from the toaster's surfaces, especially the touchscreen.
- Ensure all components, including the crumb tray, are present and undamaged.

3.2 Placement

- Place the toaster on a stable, flat, heat-resistant surface.
- Ensure there is adequate clearance (at least 6 inches) around the toaster, especially above and behind it, to prevent fire hazards from heat and steam.
- Do not place the toaster near curtains, walls, or other flammable materials.

3.3 Power Connection

- Unwind the power cord completely.
- Plug the power cord into a standard 120V AC electrical outlet. The touchscreen display will illuminate.

3.4 Initial Use (Seasoning)

Before toasting food for the first time, operate the toaster without bread for a few cycles to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal.

1. Set the browning level to a medium setting (e.g., 3 or 4).
2. Lower the levers without bread in the slots.
3. Allow the cycle to complete. Repeat 2-3 times in a well-ventilated area.

4. OPERATING INSTRUCTIONS

4.1 Loading Bread

Place up to four slices of bread, bagels, pastries, or waffles into the extra-wide slots. Ensure items fit without forcing them.

EASY TO OPERATION



Image 4.1: Step 1 - Placing bread into the toaster slots.

4.2 Dual Independent Controls

The toaster features two independent control panels, allowing you to toast different items simultaneously with separate settings.

- To use one side: Pull down the control lever for that side to activate its display.
- To use both sides: Set one side first by pulling down its lever. Then, use the left or right arrow icons on the touchscreen to select the other side for setting.

DUAL INDEPENDENT CONTROL PANELS

Set one side first, pull down the control lever to start, then click left or right to choose the other side for setting.



Image 4.2: The dual independent control panels, allowing separate settings for each pair of slots.

4.3 Selecting Bread Type and Browning Level

After placing bread and activating a side, use the touchscreen to select your desired settings.

1. **Choose Bread Type:** Tap the icon corresponding to your bread type (Bread, Bagel, Pastry, Waffle, English Muffin, Grain). The toaster will adjust its cycle for optimal results.
2. **Adjust Browning Level:** Use the left and right arrow icons (← →) to select a browning shade from 1 (lightest) to 6 (darkest). The display will show the selected shade and a countdown timer.

SUITABLE FOR A VARIETY OF BREAD

Nutritious breakfast, homemade delicious.



LEVEL 1



LEVEL 2



LEVEL 3



LEVEL 4



LEVEL 5



LEVEL 6



Image 4.3: Various bread types that can be toasted, including bread, bagels, pastries, waffles, English muffins, and grain bread.

4.4 Special Functions

The toaster includes dedicated functions for specific needs:

- **Defrost:** Press the 'Defrost' icon to add extra time for frozen items. This function automatically extends the toasting cycle to thaw and toast.
- **Reheat:** Press the 'Reheat' icon to warm up previously toasted items without further browning.
- **Cancel:** Press the 'Cancel' icon to stop the toasting cycle at any time.

5 BASIC FUNCTIONS



Image 4.4: Overview of the toaster's basic functions: Defrost, Bread Type, Reheat, Left Cancel, and Right Cancel.

4.5 Starting and Completing the Cycle

1. Once settings are chosen, push the control lever down until it locks into place. The toasting cycle will begin, and the countdown timer will display.
2. When the cycle is complete, the toast will automatically pop up.
3. Use the high-lift lever feature to safely remove smaller items.

4.6 Convenience Features

- **Silent Operation:** Long-press the 'Mute' icon (often integrated with a cancel button) to silence the toaster's beeps.
- **Memory Function:** The toaster remembers your last used settings for convenience.
- **Auto Shut-off:** For safety, the toaster will automatically shut off after a period of inactivity or if a malfunction is detected.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

5.1 Cleaning the Crumb Tray

The removable crumb tray collects crumbs and should be emptied frequently to prevent fire hazards.

- 1. Ensure the toaster is unplugged and completely cool.
- 2. Locate the crumb tray at the bottom of the toaster.
- 3. Pull the tray out, discard crumbs, and wipe the tray clean with a damp cloth.
- 4. Dry thoroughly before reinserting the tray.

DUAL INDEPENDENT CONTROL PANELS



Set left side first, pull down the control lever to start.



Set one side first, pull down the control lever to start, then click left or right to choose the other side for setting.



Set right side first, pull down the control lever to start.

Image 5.1: The toaster with its removable crumb tray, highlighting the ease of cleaning.

5.2 Cleaning the Exterior

- Unplug the toaster and allow it to cool.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- For stubborn spots, a mild detergent can be used, followed by wiping with a clean, damp cloth and drying thoroughly.
- Do not spray cleaners directly onto the toaster.

5.3 Storage

- Ensure the toaster is clean and dry before storing.
- The power cord can be wrapped around the cord storage area at the base of the toaster for neat storage.
- Store the toaster in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your WHALL 4-Slice Smart Toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your home's circuit breaker.

Problem	Possible Cause	Solution
Bread does not toast or toasts unevenly.	Incorrect browning level selected; bread type not selected; crumb tray full; foreign object in slot.	Adjust browning level. Select appropriate bread type. Empty crumb tray. Ensure slots are clear of obstructions (after unplugging and cooling).
Smoke or burning smell.	Crumbs in toaster; food stuck in slots; high sugar content in food.	Immediately press 'Cancel' and unplug. Allow to cool. Empty crumb tray. Carefully remove any stuck food (do not use metal). For high-sugar items, use a lower browning setting.
Lever does not stay down.	Toaster not plugged in; no power; internal mechanism issue.	Ensure the toaster is plugged in and receiving power. If the issue persists, contact customer support.
Touchscreen is unresponsive.	Temporary software glitch; power cycle needed.	Unplug the toaster for 30 seconds, then plug it back in. If the problem continues, contact customer support.

If the problem persists after trying these solutions, please contact WHALL Customer Support.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	WHALL
Model Number	KST076AU
Color	Silver
Material	Stainless Steel
Product Dimensions (D x W x H)	13.7" x 14.41" x 7.8"
Item Weight	5.8 pounds
Wattage	1500 watts
Voltage	120 volts
Slot Count	4
Browning Levels	6
Toast Modes / Programs	6 (Bagel, Bread, Pastry, Waffle, Defrost, Reheat)
Display Type	LED Touchscreen
Special Features	Touchscreen, Dual Independent Control, Extra-Wide Slots, Silent Operation, Memory Function, Auto Shut-off, Removable Crumb Tray

Feature	Detail
Included Components	Toaster

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The WHALL 4-Slice Smart Toaster is backed by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Typically, this product includes a 365-day worry-free guarantee covering manufacturing defects.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your WHALL toaster, please contact our customer support team. Contact information can usually be found on the product packaging, the official WHALL website, or the warranty card. When contacting support, please have your model number (KST076AU) and proof of purchase readily available.

© 2026 WHALL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question