

wisekoti P11, S7 Bundle

Wisekoti P11 Automatic Foaming Soap Dispenser and S7 Automatic Mouthwash Dispenser User Manual

Model: P11, S7 Bundle | Brand: Wisekoti

1. INTRODUCTION

This user manual provides detailed instructions for the safe and efficient use of your Wisekoti P11 Automatic Foaming Soap Dispenser and S7 Automatic Mouthwash Dispenser. Please read this manual thoroughly before installation and operation, and retain it for future reference. This bundle is designed to enhance your daily hygiene routine with touchless convenience.

2. PRODUCT OVERVIEW

The Wisekoti P11 and S7 dispensers offer a comprehensive hygiene solution for your home. Both units feature touchless operation, promoting cleanliness and reducing contact. The P11 provides foamed soap for handwashing, while the S7 dispenses mouthwash for oral hygiene.



Image: P11 Key Features. Key features of the P11 dispenser include touchless operation, adjustable foam density, a rechargeable battery with power indicator, and durable design.



Image: S7 Automatic Mouthwash Dispenser. The S7 dispenser automatically provides mouthwash when a cup is placed on its tray, ensuring a touchless and convenient oral hygiene routine.

3. SETUP INSTRUCTIONS

3.1 P11 Automatic Foaming Soap Dispenser Setup

1. **Charging:** Before first use, fully charge the P11 dispenser using the provided USB cable. The power indicator will show charging status.
2. **Filling with Soap:**
 - Open the soap reservoir.
 - If using **liquid soap**, dilute it with water at a 1:3 ratio (1 part soap to 3 parts water). Shake gently to mix.
 - If using **foaming soap**, pour it directly into the reservoir.

- **Note:** Viscous hand sanitizer must be diluted with 3 times the amount of water and shaken well to form foam. Undiluted viscous liquids may cause malfunction.

3. **Placement:** Place the dispenser on a flat, stable surface near a sink. Ensure the sensor area is clear.



Image: P11 Soap Dilution Guide. For optimal foaming, dilute liquid soap with water at a 1:3 ratio. Foaming soap can be poured directly into the dispenser. Viscous hand sanitizer requires dilution to prevent malfunction.

3.2 S7 Automatic Mouthwash Dispenser Setup

1. **Mounting:** The S7 dispenser is designed for wall mounting. Choose a suitable location in your bathroom, ensuring it is at a convenient height and away from direct water spray. Use the provided mounting hardware to securely attach the dispenser to the wall.
2. **Filling with Mouthwash:** Open the mouthwash reservoir and carefully pour your preferred mouthwash into it. Do not overfill.
3. **Magnetic Cups:** The S7 comes with three magnetic cups. These cups can be stored inverted on the dispenser's base, where they will magnetically attach, allowing them to dry and remain organized.

3 MAGNETIC CUPS CATER TO FAMILY NEEDS

- ✓ **Inverted adsorption on the bottom**
Easier to Organize and Keeps Dry Quickly for The Next Use
- ✓ **Reusable**
No More Wasted Paper Cups
- ✓ **Different Color Markings**
Make It Easy To Distinguish Your Cups



Image: S7 Magnetic Cups. The S7 includes three reusable magnetic cups that adhere inverted to the dispenser, promoting hygiene and easy organization. Different color markings help distinguish individual cups.

4. OPERATING INSTRUCTIONS

4.1 P11 Automatic Foaming Soap Dispenser Operation

1. **Power On/Off:** Press and hold the power button (usually located on top) to turn the dispenser on or off.
2. **Automatic Dispensing:** Place your hand under the nozzle. The infrared sensor will detect your hand and automatically dispense a pre-set amount of foam.
3. **Adjusting Foam Volume:** Use the volume adjustment button (often indicated by a gear or level icon) to cycle through the available foam dispensing levels. The P11 typically offers four levels: 0.5g, 1.5g, 2.4g, and 3.2g. Select the amount that suits your preference.



Image: P11 Foam Volume Settings. The P11 allows users to select from four distinct foam dispensing volumes to customize their handwashing experience.



Image: P11 Dispensing Foam. The P11 dispenser automatically releases a rich foam when a hand is placed beneath its sensor.

4.2 S7 Automatic Mouthwash Dispenser Operation

1. **Power On/Off:** Use the designated power button to turn the S7 dispenser on or off.
2. **Automatic Dispensing:** Place one of the magnetic cups (or any suitable cup) onto the dispensing tray. The sensor will detect the cup and automatically dispense mouthwash.
3. **Adjusting Dispensing Volume:** Use the gear adjustment button to select your desired mouthwash volume. The S7 typically offers three levels: 10ml (0.34 oz), 20ml (0.68 oz), and 30ml (1.01 oz). The current selection is usually displayed on the unit.

3 ADJUSTABLE DISPENSING LEVELS

3 Different Amounts Cater to Everyone in the Family



Image: S7 Mouthwash Volume Settings. The S7 offers three adjustable mouthwash dispensing volumes (10ml, 20ml, 30ml) controlled by a gear adjustment button, with a clear sensing area for activation.

5. MAINTENANCE

5.1 P11 Automatic Foaming Soap Dispenser Maintenance

- **Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not immerse the unit in water. Avoid abrasive cleaners.
- **Refilling:** When the soap level is low, refill the reservoir following the instructions in Section 3.1.
- **Nozzle Cleaning:** If the nozzle becomes clogged, gently wipe it with a damp cloth. Do not use sharp objects to clear the nozzle.

5.2 S7 Automatic Mouthwash Dispenser Maintenance

- **Cleaning:** Clean the exterior of the S7 dispenser with a soft, damp cloth. The mouthwash reservoir can be rinsed with water periodically. Ensure the unit is dry before refilling. Do not immerse the main unit in water.

- **Refilling:** Refill the mouthwash reservoir as needed, following instructions in Section 3.2.
- **Cup Care:** The magnetic cups are reusable. Rinse them after each use and place them inverted on the dispenser for hygienic drying.

6. TROUBLESHOOTING

If you encounter issues with your Wisekoti dispensers, please refer to the following common solutions:

Problem	Possible Cause	Solution
Dispenser not activating (P11/S7)	Low battery; Sensor obstructed; Unit off.	Charge the unit; Clean sensor area; Turn unit on.
P11 not producing foam or foam is weak	Soap not diluted correctly; Reservoir empty; Nozzle clogged.	Dilute liquid soap 1:3 with water; Refill reservoir; Clean nozzle.
S7 not dispensing mouthwash	Reservoir empty; Cup not placed correctly; Dispensing mechanism obstructed.	Refill reservoir; Ensure cup is centered on tray; Check for obstructions.
Incorrect dispensing volume (P11/S7)	Volume setting incorrect.	Adjust the volume setting using the respective adjustment button.

7. SPECIFICATIONS

Feature	Detail
Brand	Wisekoti
Models	P11 (Foaming Soap Dispenser), S7 (Mouthwash Dispenser)
ASIN	B0DCJDN87
Material	Plastic
Color	Black (Note: Product images may show silver for P11 and white for S7)
Shape	Round (P11)
Number of Sets	2 (One P11, One S7)
P11 Foam Volume Levels	0.5g, 1.5g, 2.4g, 3.2g
S7 Mouthwash Volume Levels	10ml (0.34 oz), 20ml (0.68 oz), 30ml (1.01 oz)
First Available Date	August 8, 2024

8. WARRANTY AND SUPPORT

Wisekoti products are manufactured to high-quality standards. For warranty information, product support, or to report any issues, please contact Wisekoti customer service through the retailer where the product was purchased or visit the official Wisekoti website. Please have your product model and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question