

[Manuals.plus](#) /

› [NUTRIFROST](#) /

› NUTRIFROST 30" Top Freezer Refrigerator 17.6 Cu.Ft User Manual

NUTRIFROST MAUS-NF-FC2-66FS

NUTRIFROST 30" Top Freezer Refrigerator User Manual

Model: MAUS-NF-FC2-66FS

Capacity: 17.6 Cubic Feet

1. PRODUCT OVERVIEW

The NUTRIFROST 30" Top Freezer Refrigerator is designed for efficient food preservation with a total capacity of 17.6 cubic feet. This appliance features a top-mounted freezer and a spacious refrigerator compartment, making it suitable for various environments including kitchens, offices, commercial spaces, and garages. Key features include a reversible door design for flexible placement, an adjustable thermostat for precise temperature control, and a two-way airflow system for consistent cooling.





Image 1.1: Front view of the NUTRIFROST 30" Top Freezer Refrigerator.

The refrigerator includes two clear plastic crisper drawers with humidity control, designed to keep fruits and vegetables fresh. The interior is illuminated by bright LED lighting, and glass shelves are removable and adjustable for customized storage. The appliance operates quietly and features an automatic defrost system in both compartments, ensuring low maintenance and energy efficiency.

2-DOOR REVERSIBLE DESIGN

17.6CU.FT Capacity



Freezer
4.2 cu.ft



Fridge
13.4cu.ft



Image 1.2: Interior layout of the refrigerator, highlighting the freezer (4.2 cu.ft) and fridge (13.4 cu.ft) capacities.

2. SAFETY INFORMATION

Please read all safety instructions carefully before operating the appliance to prevent injury or damage.

- **Electrical Safety:** Ensure the refrigerator is connected to a grounded 110-volt outlet. Do not use extension cords or ungrounded adapters.
- **Ventilation:** Maintain adequate clearance around the appliance for proper ventilation. Blocked vents can lead to overheating and reduced efficiency.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside or near the refrigerator.
- **Child Safety:** Supervise children near the appliance. Do not allow them to play with or inside the refrigerator.
- **Disposal:** When disposing of the appliance, remove the doors to prevent accidental entrapment of children. Dispose of the unit according to local regulations for refrigerants.
- **Service:** Do not attempt to repair or modify the appliance yourself. Refer all servicing to qualified personnel.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the refrigerator for any shipping damage. Keep packaging materials until you are satisfied with the product.

3.2 Placement

Choose a location with a solid, level floor that can support the weight of the refrigerator when fully loaded. Avoid direct sunlight or heat sources. Ensure there is sufficient space for the doors to open fully (approximately 30.8 inches depth and 27.7 inches width, with 66.9 inches height).

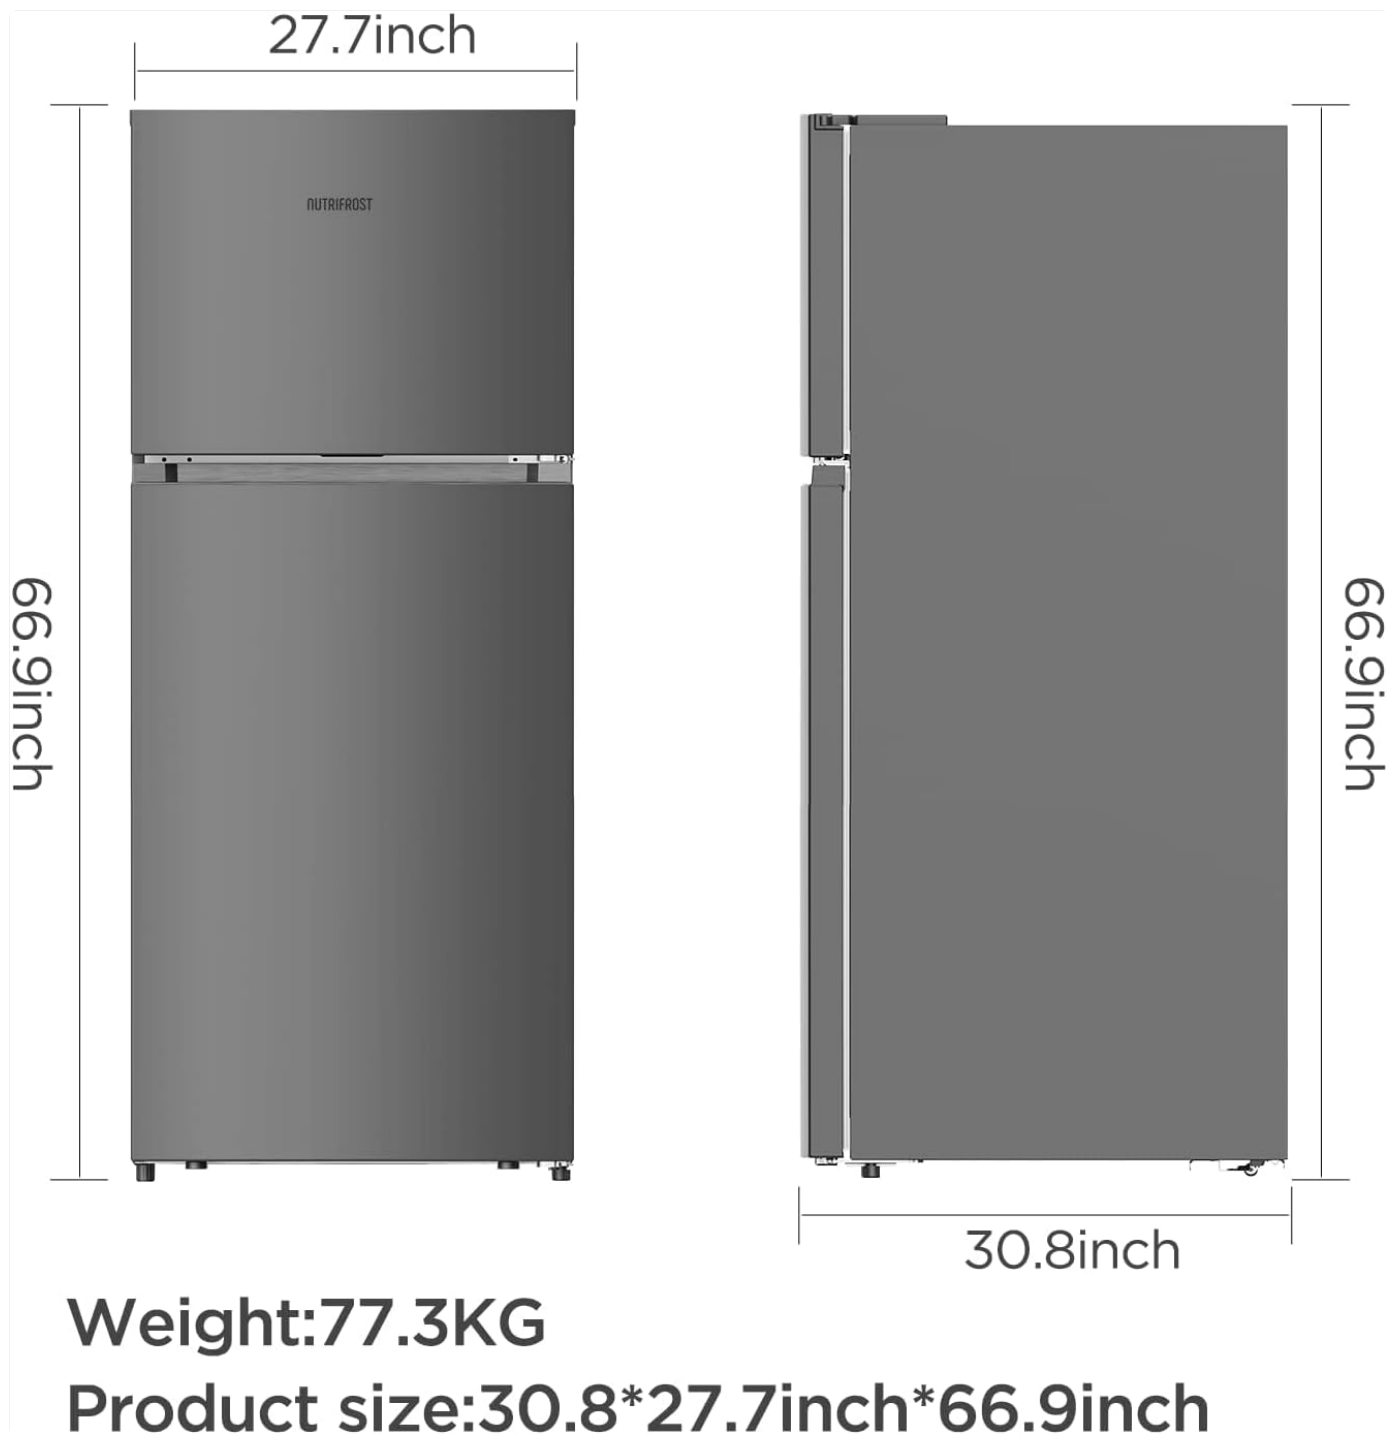


Image 3.1: Product dimensions for proper placement.

3.3 Leveling

The refrigerator must be level for optimal performance. Adjust the leveling feet at the bottom of the unit by turning them clockwise to raise or counter-clockwise to lower. Use a spirit level to ensure the appliance is perfectly balanced.

3.4 Door Reversal

This model features reversible doors, allowing you to change the hinge side to suit your space. Refer to the detailed instructions in the included 'Manul' (manual) for the step-by-step process of reversing the doors. This typically involves removing hinges and reattaching them on the opposite side.

3.5 Power Connection


Plug the refrigerator into a dedicated 110-volt, 60 Hz, grounded electrical outlet. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator is equipped with an adjustable electrical thermostat. The temperature control dial is typically located inside the fresh food compartment. Turn the dial to adjust the cooling intensity. Higher numbers or 'colder' settings indicate lower temperatures. Allow several hours for the temperature to stabilize after making adjustments.

17.6 CU.FT REFRIGERATOR

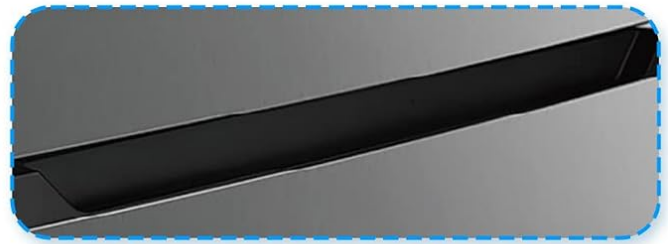

New Designed Handle



Electronic Interface



Electronic Temperature Control



Adjustable Glass Shelving

Image 4.1: Electronic interface and temperature control.

4.2 Storage Compartments

- **Freezer Compartment:** Located at the top, ideal for frozen foods.
- **Refrigerator Compartment:** The main lower section for fresh foods.
- **Crisper Drawers:** Two humidity-controlled drawers at the bottom of the refrigerator compartment, designed for fruits and vegetables.
- **Glass Shelves:** Adjustable and removable for flexible storage configurations.

4.3 Two-Way Airflow System

The integrated two-way airflow system ensures even distribution of cold air throughout both the freezer and refrigerator compartments. This helps maintain a consistent temperature, which is crucial for food preservation and energy efficiency.

NUTRIFROST

Image 4.2: Illustration of the two-way airflow system.

5. MAINTENANCE AND CARE

5.1 Cleaning

Regular cleaning helps maintain hygiene and efficiency. Unplug the refrigerator before cleaning. Use a soft cloth with a mild detergent and warm water to clean interior and exterior surfaces. For glass shelves and drawers, they can be removed and washed separately. Avoid abrasive cleaners or harsh chemicals.

5.2 Defrosting

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting in both the freezer and fresh food compartments. If ice buildup occurs, it may indicate an issue with the door seal or temperature setting.

5.3 Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain internal temperature for as long as possible. Food can remain frozen for several hours depending on the ambient temperature and how full the freezer is.

5.4 Moving the Appliance

When moving the refrigerator, ensure it is empty and unplugged. Secure all loose parts like shelves and drawers with tape. Lift the appliance carefully to avoid damage to the floor or the unit itself.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power, tripped circuit breaker, or unplugged.	Check power cord connection, circuit breaker, or fuse.
Temperature is not cold enough.	Temperature setting too high, door left open, or excessive food load.	Adjust thermostat to a colder setting. Ensure doors are closed properly. Avoid overloading.
Unusual noises.	Appliance not level, items vibrating inside, or normal operating sounds.	Level the refrigerator. Rearrange items. Gurgling or humming sounds are normal.
Water on floor or inside.	Drain tube clogged, or door not sealing properly.	Clear drain tube. Check door gasket for proper seal.
Door does not close completely.	Door gasket dirty/damaged, or items blocking closure.	Clean or replace gasket. Rearrange items inside.

7. SPECIFICATIONS

Detailed specifications for the NUTRIFROST 30" Top Freezer Refrigerator.

Feature	Specification
Brand Name	NUTRIFROST
Model Info	MAUS-NF-FC2-66FS
Item Weight	173 pounds
Product Dimensions (D x W x H)	32 x 28 x 66.9 inches
Capacity	17.6 Cubic Feet
Annual Energy Consumption	360 Kilowatt Hours
Refrigerator Fresh Food Capacity	13.4 Cubic Feet
Freezer Capacity	4.2 Cubic Feet
Installation Type	Freestanding
Form Factor	Freezer Top
Special Features	Frost Free
Color	Grey
Voltage	110 Volts
Number of Racks	3
Crispers/Drawers	2
Defrost System	Automatic
Door Hinges	Reversible
Door Material Type	Stainless Steel
Shelf Type	Glass
Number of Shelves	2
Number of Doors	2

ENERGYGUIDE

Refrigerator-Freezer

- Automatic Defrost
- Top-Mounted Freezer
- No Through-the-Door Ice Service

NUTRIFROST

Models: MAUS-NF-FC2-66FS

Capacity: 17.6 Cubic Feet

Compare ONLY to other labels with yellow numbers.
Labels with yellow numbers are based on the same test procedures.

Estimated Yearly Energy Cost

\$48

Cost Ranges

Models with
similar features

\$43

\$59

All models

\$34

\$73

400 kWh

Estimated Yearly Electricity Use

- Your cost will depend on your utility rates and use.
- Both cost ranges based on models of similar size capacity.
- Models with similar features have automatic defrost.
- Estimated energy cost based on a national average electricity cost of 12 cents per kWh.

ftc.gov/energy

Image 7.1: EnergyGuide label for the refrigerator, indicating an estimated yearly energy cost of \$48.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This NUTRIFROST refrigerator comes with a **1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact NUTRIFROST customer support. Refer to the contact information provided with your purchase documentation or visit the official NUTRIFROST website for support details.

You can also find general customer support information via the Amazon product page [Amazon Product Page](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question