

[Manuals.plus](#) /

› [LIFERUN](#) /

› LIFERUN HL-1500R8 Ceramic Fan Heater User Manual

LIFERUN HL-1500R8

LIFERUN HL-1500R8 Ceramic Fan Heater User Manual

Brand: LIFERUN | Model: HL-1500R8

1. INTRODUCTION

Thank you for purchasing the LIFERUN HL-1500R8 Ceramic Fan Heater. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new heater. Please read this manual thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has a **65°C Overheat Protection** system and a **45° Tip-Over Protection** switch, which automatically

shut off the unit if it overheats or is accidentally knocked over.

- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

3. PACKAGE CONTENTS

- LIFERUN HL-1500R8 Ceramic Fan Heater
- Remote Control
- User Manual

4. PRODUCT OVERVIEW

The LIFERUN HL-1500R8 is a compact and efficient ceramic fan heater designed for indoor use. It features multiple heating modes, a 12-hour timer, 90-degree oscillation, and a unique 3D flame light effect.



Figure 4.1: LIFERUN HL-1500R8 Ceramic Fan Heater with remote control.

CERAMIC FAN HEATER



OSCILLATION 90°



NET WEIGHT 2.36kg



TOUCH CONTROL



PORTABLE HANDLE



Figure 4.2: Product dimensions (Height: 35cm, Width: 18.5cm, Depth: 17.5cm).

Control Panel and Display

UNIQUE FLAME ATMOSPHERE LIGHT

Create a warm and cozy atmosphere, children's favorite



1500W



20m²



Figure 4.3: Heater control panel and remote control.

The heater features a touch control panel on the top and an LCD digital display that shows the current ambient temperature and settings. A remote control is also included for convenient operation.

5. SETUP

1. **Unpack:** Carefully remove the heater and all accessories from the packaging. Retain packaging for storage or future transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 m) of clear space around the heater to allow for proper airflow and prevent fire hazards. Do not place it on soft surfaces like carpets or rugs that might block the air intake.
3. **Power Connection:** Plug the power cord (1.8 meters long) directly into a standard 220V AC electrical outlet. Do not use extension cords or power strips.

6. OPERATING INSTRUCTIONS

The heater can be operated using the touch control panel on the unit or the included remote control.

6.1 Power On/Off

- Press the **Power** button (🔌) on the control panel or remote to turn the heater ON or OFF.

6.2 Mode Selection

The heater offers four operating modes:

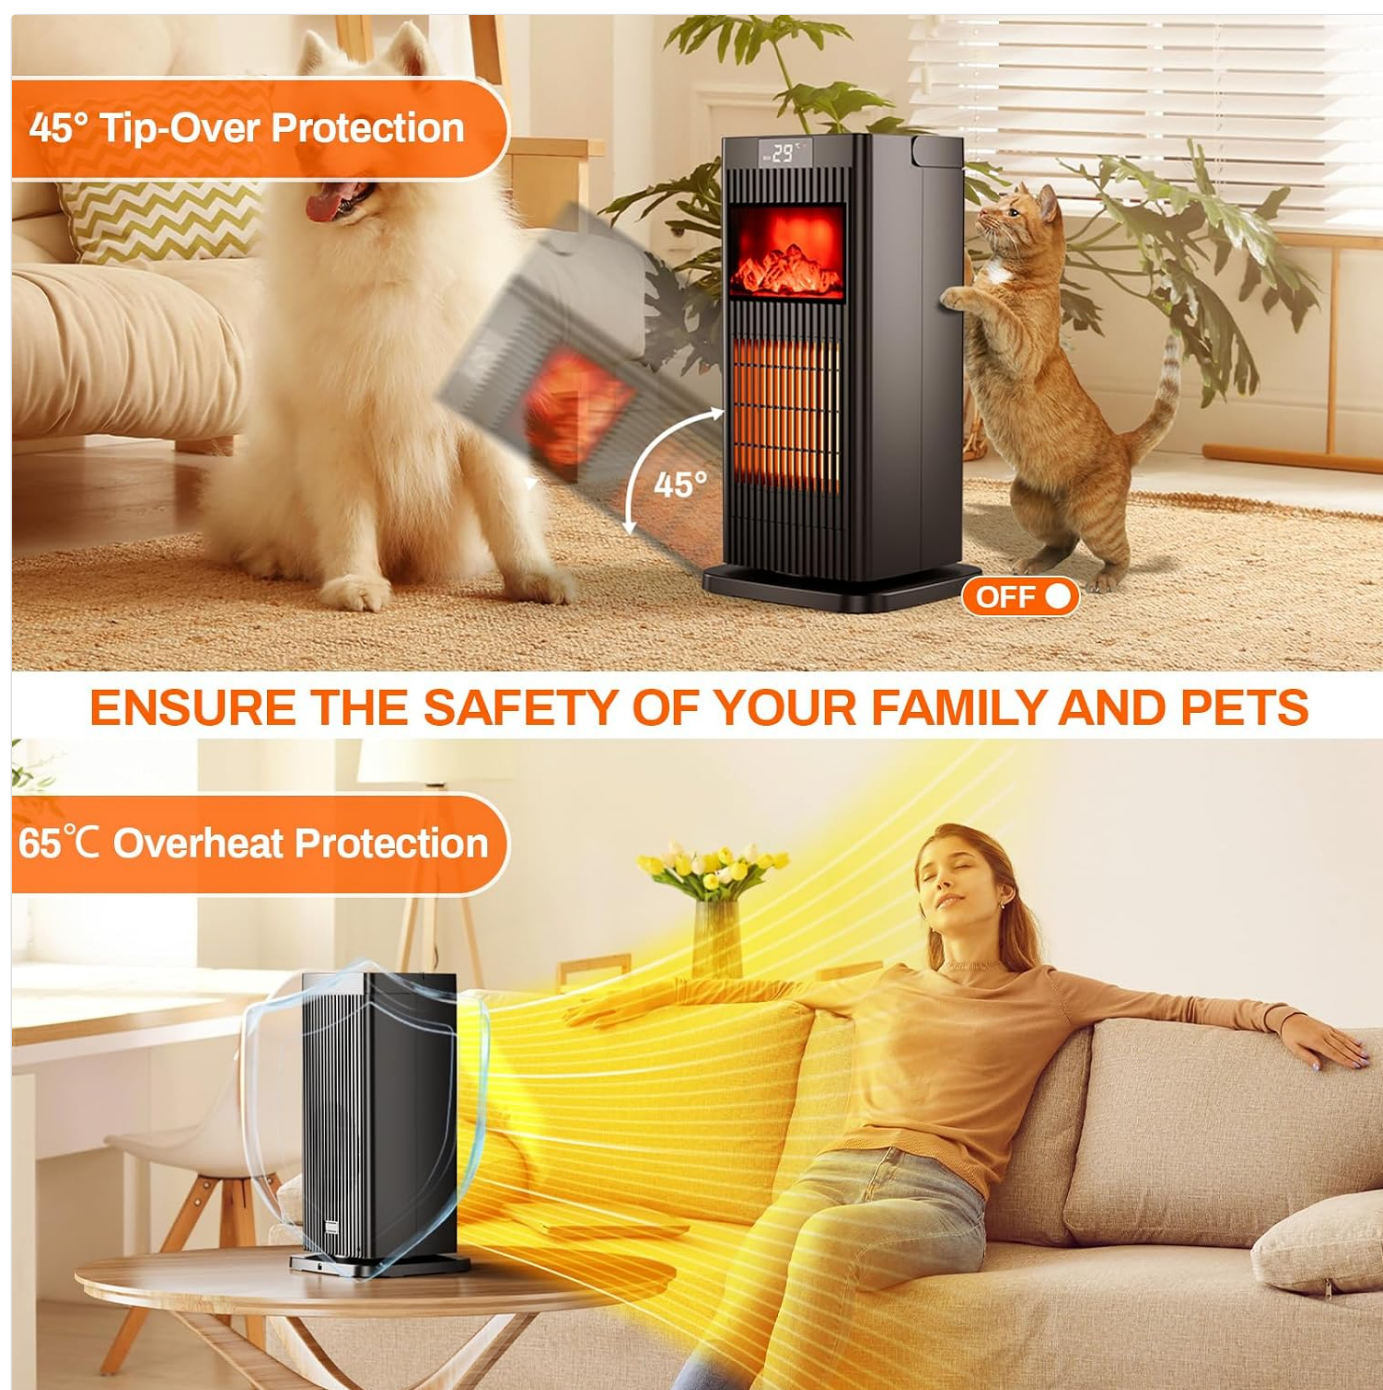


Figure 6.1: Illustration of different operating modes.

- Press the **MODE** button (🔌) repeatedly to cycle through the following modes:
 - **Strong Warm Wind (1500W)**: Provides maximum heating output.
 - **Weak Warm Wind (900W)**: Provides moderate heating output.

- **ECO Mode:** Automatically adjusts heating power (900W or 1500W) to maintain the set temperature, optimizing energy consumption.
- **Natural Wind (Fan Only):** Operates as a fan without heating, suitable for warmer weather.

6.3 Temperature Adjustment

- In Strong Warm, Weak Warm, or ECO mode, use the **Temp Up (+)** and **Temp Down (-)** buttons on the control panel or remote to set the desired temperature between 15°C and 45°C. The display will show the set temperature.

6.4 Timer Function

- Press the **TIMER** button (🕒) to set an automatic shut-off time from 1 to 12 hours. Each press increases the timer by one hour. The display will show the remaining time.
- To cancel the timer, press the **TIMER** button repeatedly until '00' is displayed, or turn the heater off.

6.5 Oscillation Function

MULTIPLE ADJUSTABLE MODES

PTC ceramic high-efficiency heating

 ECO Mode for Energy Saving	 900W Low Heat Air	 1500W High Heat Air	 Natural Wind (no heating)
--	---	---	---



Figure 6.2: 90-degree oscillation for even heat distribution.

- Press the **OSC** button (🔄) to activate or deactivate the 90-degree oscillation function. This feature helps distribute heat evenly across a wider area.

6.6 3D Flame Light



Figure 6.3: 3D flame atmosphere light feature.

- Press the **The Flame** button (🔥) to turn the 3D flame light effect ON or OFF. This feature operates independently of the heating function.

7. REMOTE CONTROL USAGE

The remote control provides convenient access to all heater functions from a distance. Ensure the remote control has working batteries (not included, typically 2x AAA). Point the remote control directly at the heater's display panel for optimal response.

The buttons on the remote control correspond to the functions on the main control panel:

- **POWER:** Turns the heater ON/OFF.
- **MODE:** Cycles through heating modes (Strong Warm, Weak Warm, ECO, Natural Wind).
- **TIMER:** Sets the auto-off timer (1-12 hours).
- **Temp Up (+):** Increases the target temperature.
- **Temp Down (-):** Decreases the target temperature.
- **The Flame:** Turns the 3D flame light ON/OFF.
- **OSC:** Activates/deactivates 90-degree oscillation.

8. MAINTENANCE AND CLEANING

WARNING: Always unplug the heater from the power outlet and allow it to cool completely before cleaning or performing any maintenance.

8.1 Cleaning the Exterior

- Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.
- Ensure no water or liquid enters the interior of the heater.

8.2 Cleaning the Air Intake/Outlet

- Use a vacuum cleaner with a brush attachment to gently remove dust and debris from the air intake and outlet grilles.
- Regular cleaning helps maintain optimal performance and prevents overheating.

8.3 Storage

- If storing the heater for an extended period, clean it thoroughly and place it back in its original packaging.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

9. TROUBLESHOOTING GUIDE

If you experience issues with your LIFERUN HL-1500R8 heater, please refer to the following guide:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Tip-over switch activated. Overheat protection activated.	Ensure the heater is plugged into a working outlet. Place the heater on a flat, stable surface. Unplug, let cool for 10-15 minutes, then plug back in. Clear any obstructions.
No heat output.	Natural Wind (Fan Only) mode selected. Temperature setting too low.	Switch to Strong Warm, Weak Warm, or ECO mode. Increase the target temperature using the '+' button.
Oscillation not working.	Oscillation function is off.	Press the OSC button to activate oscillation.

Problem	Possible Cause	Solution
Remote control not working.	Dead batteries. Obstruction between remote and heater.	Replace batteries (2x AAA). Ensure a clear line of sight to the heater's display panel.
Heater makes unusual noise.	Dust or debris inside. Unit not on a stable surface.	Unplug and clean air intakes/outlets. If noise persists, contact support. Ensure the heater is on a flat, stable surface.

10. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	LIFERUN
Model Number	HL-1500R8
Color	Black
Product Dimensions (L x W x H)	17.5 x 18.5 x 35 cm
Item Weight	1.65 Kilograms
Voltage	220 Volts
Power Output	1500W (High Heat), 900W (Low Heat)
Number of Speeds/Modes	4 (Strong Warm, Weak Warm, ECO, Natural Wind)
Oscillation	90 degrees
Timer Function	1-12 hours
Adjustable Thermostat	15°C to 45°C
Safety Features	65°C Overheat Protection, 45° Tip-Over Protection, Automatic Shut-off
Heating Method	Convection (PTC Ceramic)
Power Source	Corded Electric
Recommended Uses	Home, Bedroom, Living Room (next to sofa), Office, Garage
Country of Origin	China

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DCJKXD XK>

More documents and user manuals: <https://manuals.plus/>