



[Manuals.plus](#) /

> [IMC Toys](#) /

> IMC Toys Young-Hee Electronic Doll (Model 925939) Instruction Manual

IMC Toys 925939

IMC Toys Young-Hee Electronic Doll (Model 925939) Instruction Manual

Your guide to setting up and operating your Young-Hee doll.

INTRODUCTION

The IMC Toys Young-Hee Electronic Doll is a detailed replica inspired by the popular series. This interactive doll features motion sensors, a rotating head, a speaker with authentic sounds, and illuminating eyes, allowing users to recreate the iconic Red Light, Green Light game.

This manual provides essential information for the safe and correct operation of your Young-Hee doll. Please read it thoroughly before use and retain it for future reference.



The Young-Hee Electronic Doll comes securely packaged, ready for unboxing.

SAFETY INFORMATION

WARNING: This product is recommended for ages 17 years and up due to adult themes and violence depicted in the source material. Adult supervision is recommended.

- Keep the doll away from water and excessive moisture.
- Do not attempt to disassemble or modify the doll, as this may cause damage or injury.
- Ensure batteries are inserted correctly and disposed of responsibly.

- Keep small parts away from young children to prevent choking hazards.

PACKAGE CONTENTS

- 1 x Young-Hee Electronic Doll
- (Batteries are NOT included and must be purchased separately)

SPECIFICATIONS

Product Dimensions	5.91 x 3.19 x 12.01 inches (15 x 8.1 x 30.5 cm)
Item Weight	7 ounces (198 grams)
Model Number	925939
Manufacturer	IMC Toys
Recommended Age	17 years and up
Batteries Required	3 AAA batteries (not included)





The Young-Hee doll stands approximately 30 cm (12 inches) tall, a detailed replica of the character.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the doll (refer to image below).
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.





The back of the doll reveals the integrated speaker for sound effects and the two motion sensors that detect movement during the game. The battery compartment is also located here.

OPERATING INSTRUCTIONS

Playing Red Light, Green Light

1. Place the Young-Hee doll on a flat, stable surface.
2. To activate the game, gently press down on the doll's head. The doll will begin to sing the "Red Light, Green Light" song and turn its head.
3. While the doll is singing and its head is turned away, players can move.
4. When the doll stops singing and turns its head to face forward, its eyes will illuminate red, and its motion sensors will activate. Players must freeze in place.
5. If the doll detects any movement while its eyes are red, it will announce "Eliminated."
6. To reset the game or turn off the doll, press its head again.



To initiate gameplay, gently press down on the doll's head. This action activates the Red Light, Green Light sequence.



A detailed view of the Young-Hee doll's face, featuring her distinctive eyes which illuminate red during gameplay when motion is detected.

Your browser does not support the video tag.

This video provides a comprehensive overview of the Young-Hee Electronic Doll, demonstrating its features and gameplay mechanics.

MAINTENANCE

- To clean the doll, wipe it with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the doll in a cool, dry place away from direct sunlight when not in use.
- Remove batteries if the doll will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doll does not activate or respond.	Low or incorrectly installed batteries.	Check battery installation and replace with fresh AAA batteries. Ensure the head is pressed firmly.
Eyes do not light up.	Low batteries or malfunction.	Replace batteries. If the issue persists, contact customer support.
Sound is distorted or absent.	Low batteries or obstructed speaker.	Replace batteries. Ensure the speaker grille on the back of the doll is not covered.
Motion sensors are not detecting movement correctly.	Obstruction or environmental factors.	Ensure the doll is placed in an open area with no obstructions near the sensors. Avoid very bright or very dark environments that might interfere with sensor operation.

WARRANTY AND SUPPORT

IMC Toys stands behind the quality of its products. For warranty information, technical support, or any inquiries regarding your Young-Hee Electronic Doll, please refer to the contact information provided on the product packaging or visit the official IMC Toys website.

Please have your model number (925939) and proof of purchase ready when contacting support.