



Manuals.plus /

› Aanyhoh /

› Aanyhoh Battery Operated Wall Sconces User Manual

Aanyhoh XKFD-DC-JS

Aanyhoh Battery Operated Wall Sconces

Model: XKFD-DC-JS
User Manual

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Keep this manual for future reference.

- **Battery Safety:** This product uses a rechargeable lithium battery. Do not expose the battery to extreme temperatures, direct sunlight, or fire. Do not disassemble, puncture, or modify the battery. Use only the provided or recommended charging cable.
- **Installation:** Ensure the mounting surface is stable and can support the weight of the sconce. Do not install in areas with high humidity or direct water exposure unless specified.
- **Cleaning:** Disconnect power (if applicable) and use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents.
- **Disposal:** Dispose of batteries and electronic components according to local regulations. Do not dispose of with household waste.
- **Children and Pets:** Keep the product and its components out of reach of children and pets to prevent accidental ingestion or injury.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 2 x Aanyhoh Wall Sconces (Gold)
- 2 x Remote Controls
- 2 x USB to Type-C Charging Cables
- Mounting Hardware (screws, wall anchors)
- User Manual

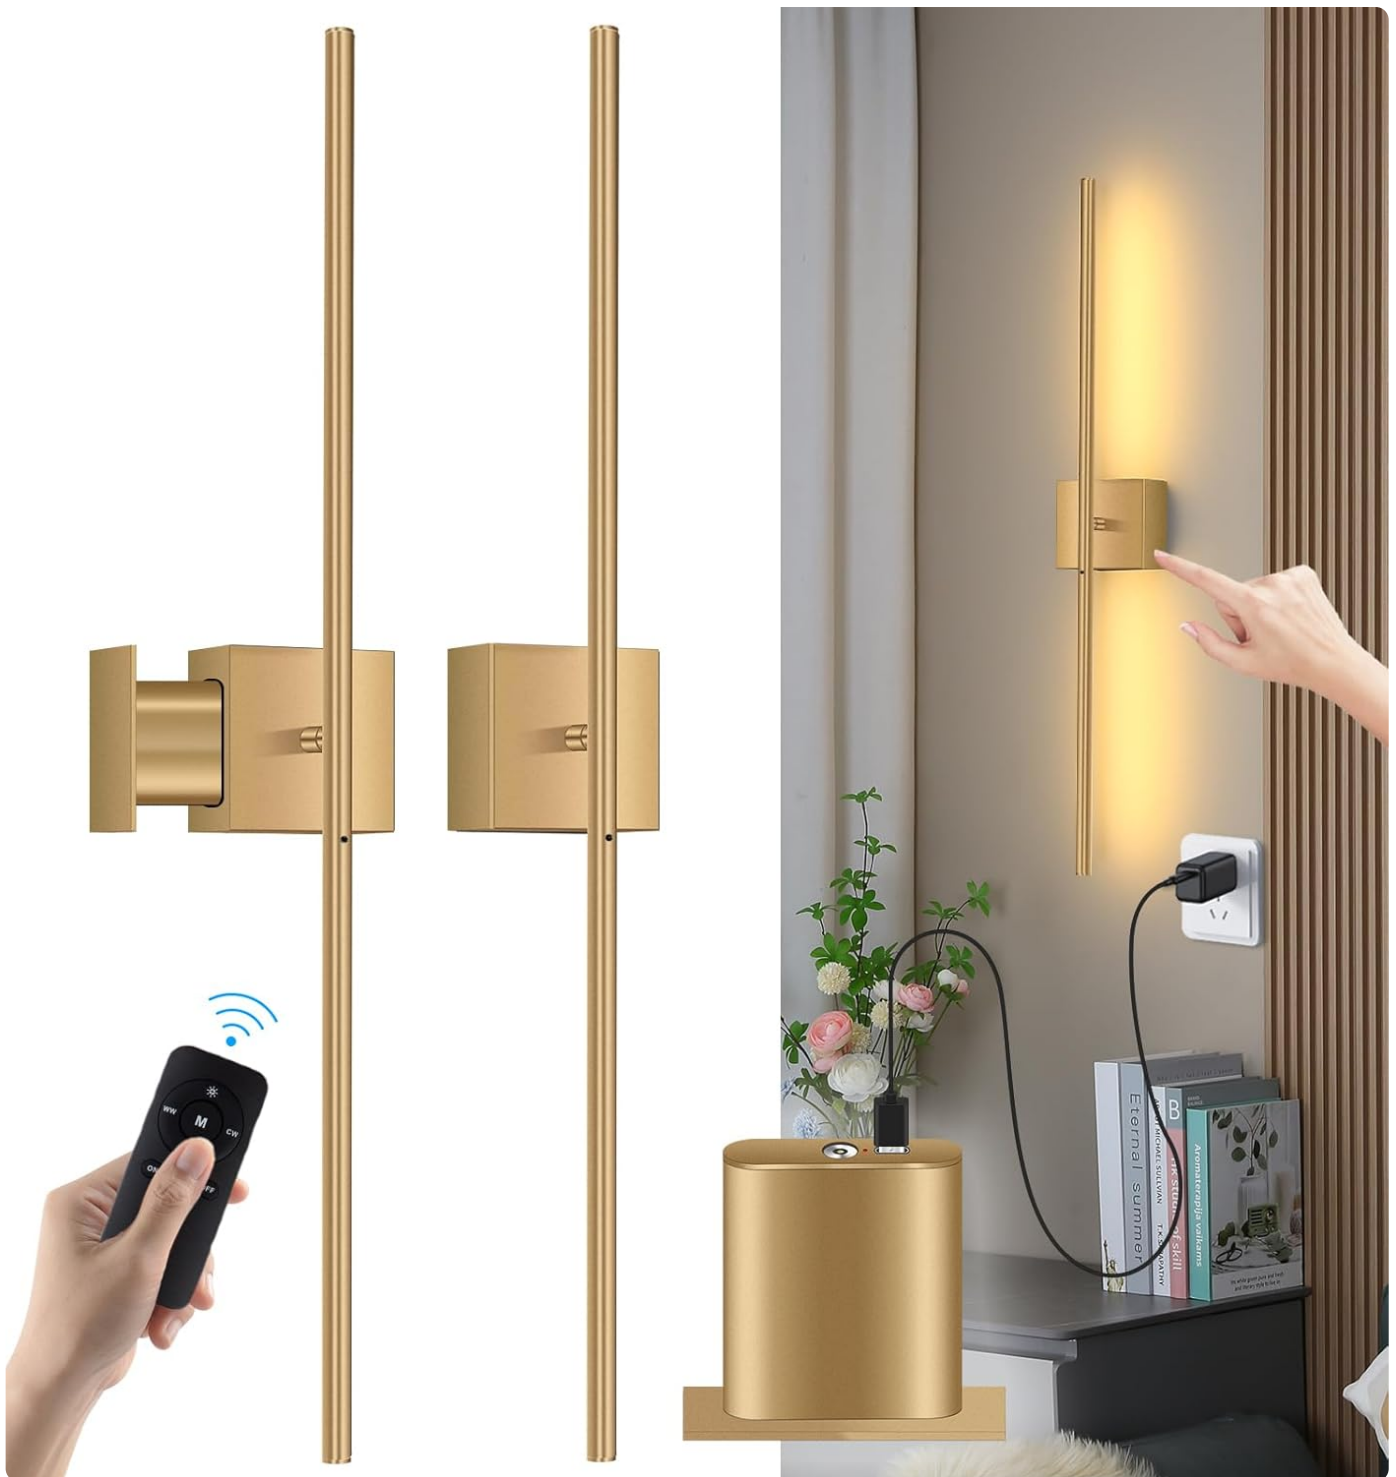 


Image: Contents of the Aanyhoh Wall Sconces package, showing two gold sconces, a remote, and a charging base.

SETUP AND INSTALLATION

The Aanyhoh Wall Sconces are designed for easy, wireless installation without the need for electrical wiring.

1. Charging the Battery

Before first use, fully charge the sconce's battery. The battery compartment is removable for convenient charging.

1. Gently slide out the battery compartment from the sconce base.
2. Connect the provided USB to Type-C charging cable to the Type-C port on the battery compartment.
3. Connect the USB end of the cable to a standard USB power adapter (not included) or a computer USB port.
4. The charging indicator light will show charging status (e.g., red for charging, green for fully charged).
5. A full charge takes approximately 3-4 hours. The 6000mAh battery provides over 15 hours of continuous light at highest

brightness.

6. Once charged, reinsert the battery compartment into the sconce base, ensuring it clicks securely into place.

Removable battery compartment

Easy to charge, no need to remove the entire wall sconce.



Image: Illustration of the removable battery compartment and the 350° rotation capability of the sconce.

2. Wall Mounting

These sconces are designed for simple wall mounting.

1. Choose a desired location on your wall. Ensure the surface is clean and dry.
2. Hold the sconce base against the wall at the desired height and mark the positions for the mounting screws.
3. Drill pilot holes at the marked positions. If mounting into drywall, insert the provided wall anchors.

4. Align the sconce base with the holes and secure it to the wall using the provided screws.
5. Ensure the sconce is firmly attached to the wall before use.

OPERATING INSTRUCTIONS

Your Aanyhoh Wall Sconce can be controlled via the included remote control or the integrated touch button.

1. Remote Control Functions

- **Power ON/OFF:** Press the **ON** or **OFF** button to turn the light on or off.
- **Brightness Adjustment (10%-100%):** Use the **+** and **-** buttons to increase or decrease brightness. Long press for stepless dimming.
- **Color Temperature Adjustment (3000K-6000K):** Use the **WW** (Warm White) and **CW** (Cool White) buttons to cycle through color temperatures (3000K, 4000K, 5000K, 6000K).
- **Night Light Mode:** Press the **Moon icon** button to activate a soft, non-blinding night light mode.
- **Memory Function:** The sconce will remember the last brightness and color temperature setting when turned off and on again.

Adjustable Color Temperature and Brightness

3000K-6000K Stepless Color Temperature



3000K



4000K



5000K



6000K

Adjustable Color Temperature and Brightness

10%~100% Stepless Dimming



10%



50%



80%



100%

Image: Visual representation of adjustable color temperature and brightness settings.

Night Light Mode

Non-direct wall sconce lighting
You can safely look around at night to find
your way around without the light being blinding



Image: The sconce operating in Night Light Mode, providing soft illumination.

2. Touch Control

The sconce features a discreet touch button on its base for basic control.

- **Short Press:** Tap the touch button to cycle through color temperatures (3000K, 4000K, 5000K, 6000K) and turn the light off.
- **Long Press:** Press and hold the touch button to adjust brightness steplessly (10%-100%). Release to set the desired brightness.

3. 350° Flexible Rotation

The light bar of the sconce can be rotated 350 degrees, allowing you to direct the light precisely where needed.

- Gently grasp the light bar and rotate it to your desired angle.
- This feature is ideal for reading, accent lighting, or task illumination.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Aanyhoh Wall Sconces.

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the sconce. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the finish or electronic components.
- **Battery Care:**
 - Recharge the battery when the light output becomes noticeably dim or when the low battery indicator (if present) activates.
 - Avoid completely draining the battery frequently, as this can reduce its lifespan.
 - If storing the sconce for an extended period, charge the battery to approximately 50% every 3-6 months to maintain battery health.
- **Storage:** Store the sconce in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Aanyhoh Wall Sconce, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Charge the battery fully.
	Remote control battery is dead or incorrectly inserted.	Replace the remote control battery (CR2025, if applicable) or ensure it's inserted correctly.
	Sconce is not properly assembled (battery compartment not fully inserted).	Ensure the battery compartment is securely clicked into place.
Remote control is not responding.	Obstruction between remote and sconce.	Ensure a clear line of sight between the remote and the sconce.
	Remote control battery is low or dead.	Replace the remote control battery.
Light is dim or flickers.	Low battery.	Recharge the sconce battery.
Battery not charging.	Faulty charging cable or adapter.	Try a different USB to Type-C cable and a different USB power adapter.
	Battery compartment not properly connected.	Ensure the battery compartment is fully inserted into the sconce.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS


Feature	Detail
Brand	Aanyhoh
Model Name	XKFD-DC-JS
Color	Gold
Material	Aluminum (body), Acrylic (lampshade)
Product Dimensions	5"L x 5"W x 32"H (approx. 12.7cm L x 12.7cm W x 81.3cm H)
Item Weight	5.57 pounds (approx. 2.53 kg)
Power Source	Battery Powered
Battery Type	Lithium Metal (included)
Battery Capacity	6000mAh
Charging Time	3-4 hours
Lighting Time (Max Brightness)	>15 hours
Light Source Type	LED
Wattage	8 watts
Brightness	450 lumens
Efficiency	90 lumens per watt
Color Temperature	3000K (Warm White) to 6000K (Cool White)
Dimmable	Yes (10%-100% stepless dimming)
Control Method	Remote Control & Touch Control
Rotation Angle	350° Flexible Rotation
Installation Type	Wall Mount
UPC	790719381988



Image: Key features of the Aanyhoh Wall Sconce compared to typical alternatives.



 
Living Room

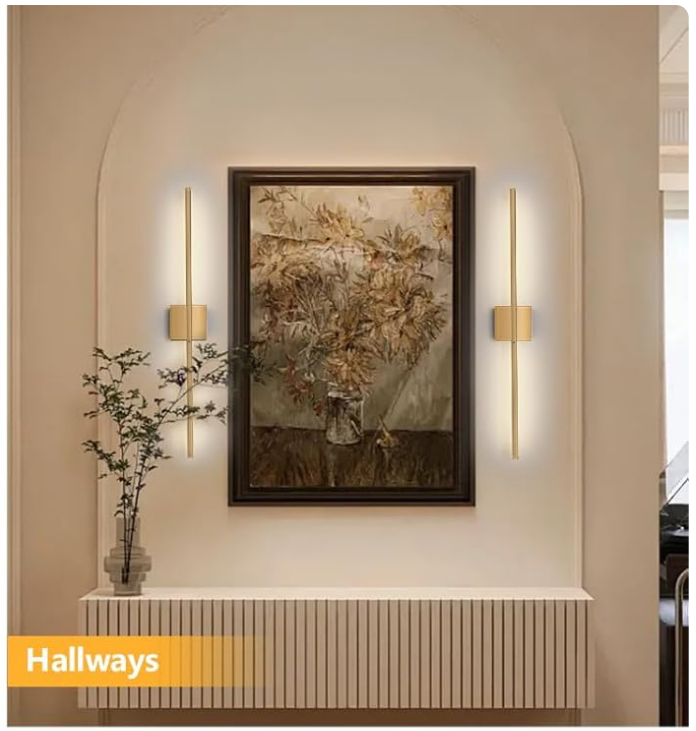

Hallways



 TV Back Wall

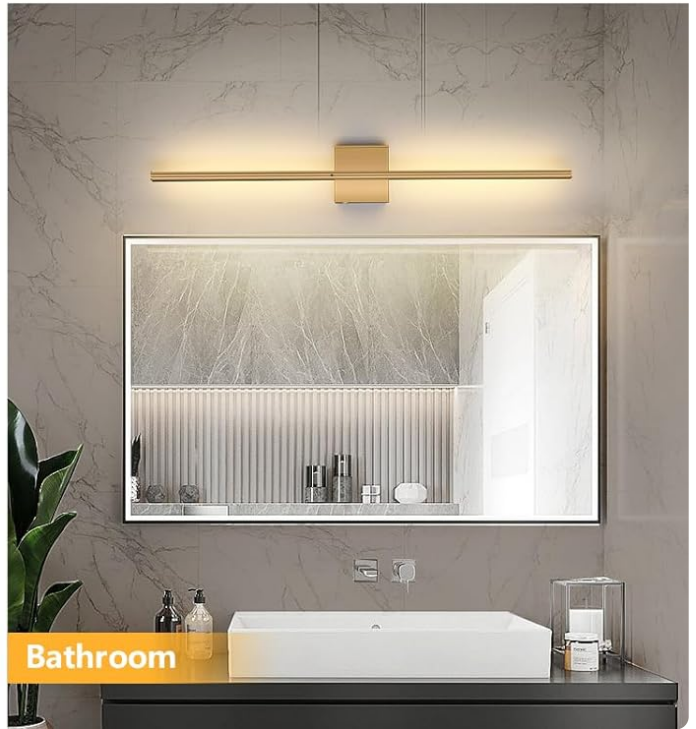

Bathroom

Image: Examples of the wall sconces in various applications within a home.

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2015 DER KOMMISSION zur Energieverbrauchskennzeichnung von Lichtquellen

Name oder Handelsmarke des Lieferanten: Aanyhoh

Anschrift des Lieferanten: eVatmaster Consulting GmbH, Raiffeisenstraße 2 B11,63110 Rodgau, Germany

Modellkennung: DCBD-0704


Art der Lichtquelle:

Verwendete Beleuchtungstechnologie:	LED	Ungebündelt oder gebündelt:	NDLS
Art des Sockels der Lichtquelle (oder andere elektrische Schnittstelle)	E27		
Netzspannung/Nicht direkt an die Netzspannung angeschlossen:	NMLS	Vernetzte Lichtquelle (CLS):	Nein
Farblich abstimmbare Lichtquelle:	Nein	Hülle:	-
Lichtquelle mit hoher Leuchtdichte:	Nein		
Blendschutzschild:	Nein	Dimmbar:	Nein

Produktparameter			
Parameter	Wert	Parameter	Wert
Allgemeine Produktparameter:			
Energieverbrauch im Ein-Zustand (kWh/1000 h), auf die nächstliegende ganze Zahl gerundet	8	Energieeffizienzklasse	E
Nutzlichtstrom (ϕ_{use}) mit Angabe, ob sich der Wert auf den Lichtstrom in einer Kugel (360°), in einem breiten Kegel (120°) oder in einem schmalen Kegel (90°) bezieht	1 100 in Kugel (360°)	ähnliche Farbtemperatur, gerundet auf die nächstliegenden 100 K, oder Spanne der einstellbaren ähnlichen Farbtemperaturen, gerundet auf die nächstliegenden 100 K	3 000
Leistungsaufnahme im Ein-Zustand (P_{on}) in W	8,0	Leistungsaufnahme im Bereitschaftszustand (P_{sb}) in W, auf die zweite Dezimalstelle gerundet	0,00
Leistungsaufnahme im vernetzten Bereitschaftsbetrieb (P_{net}) für CLS in W, auf die zweite Dezimalstelle gerundet	-	Farbwiedergabeindex, auf die nächstliegende ganze Zahl gerundet, oder Spanne der einstellbaren CRI-Werte	81
äußere Abmessungen, ggf. ohne separates Betriebsgerät, Beleuchtungssteuerungsteile und Nicht-Beleuchtungsteile (Millimeter)	Höhe	120	Spektrale Strahlungsverteilung im Bereich 250 nm bis 800 nm bei Volllast
	Breite	100	
	Tiefe	800	
Angabe zu einer gleichwertigen Leistungsaufnahme ^(a)	-	Falls ja, gleichwertige Leistungsaufnahme (W)	-
		Farbwertanteile (x und y)	0,425 0,408
Parameter für LED- und OLED-Lichtquellen:			
Wert des R9-Farbwiedergabeindex	24	Lebensdauerfaktor	1,00
Lichtstromerhalt	0,98		

^(a) „-“: nicht zutreffend;

 ^(b) „-“: nicht zutreffend;

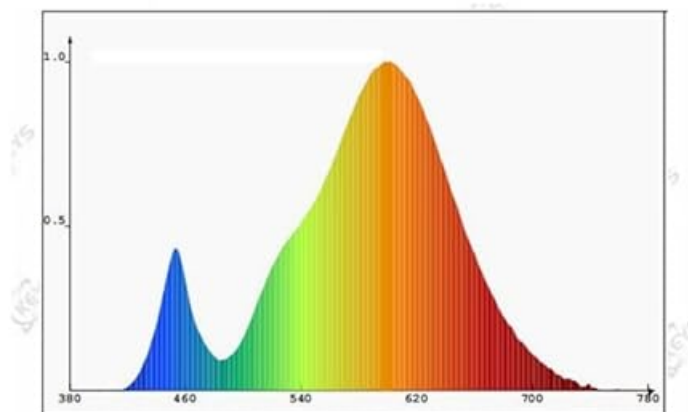

Das Modell wurde auf dem Unionsmarkt in Verkehr gebracht, und zwar ab dem 1



EPREL-Eintragungsnummer 2412879

<https://eprel.ec.europa.eu/qr/2412879>

Lieferant: Ibertrust Global S.L. (Bevollmächtigter)

Website:

Kundenbetreuung:

Name: eVatmaster Consulting GmbH

Website:

E-Mail-Adresse: contact@evatmaster.com

Telefonnummer: 06106 2699873

Anschrift:

Raiffeisenstraße 2 B11,63110 Rodgau, Germany

Image: Official Product Information Sheet. For more details, visit eprel.ec.europa.eu/qr/2412879.

Aanyhoh is committed to providing high-quality products. For warranty information, technical support, or any inquiries regarding your product, please contact our customer service team through the retailer's platform or the contact information provided with your purchase.

Please have your model number (XKFD-DC-JS) and purchase date ready when contacting support.