

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE Portable Clothes Dryer Instruction Manual](#)

FOHERE FOHERE Portable Clothes Dryers

FOHERE Portable Clothes Dryer Instruction Manual

Model: FOHERE Portable Clothes Dryers

INTRODUCTION

Thank you for choosing the FOHERE Portable Clothes Dryer. This compact and efficient appliance is designed to provide convenient and fast drying for your garments, ideal for apartments, RVs, dorms, or travel. Featuring 360° stereo air circulation, dual drying modes, and a built-in UV light, it ensures your clothes are dried thoroughly and hygienically. Please read this manual carefully before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not operate the dryer with a damaged cord or plug.
- Keep the dryer away from water and moisture. Do not immerse in water.
- Ensure proper ventilation during operation. Do not block air vents.
- Do not overload the dryer. Refer to capacity guidelines.
- Unplug the dryer when not in use or before cleaning.
- Do not dry items that have been soiled with cooking oils, flammable chemicals, or other combustible substances.
- Supervise children and pets when the appliance is in use.
- Use only as intended for drying clothes.

WHAT'S IN THE BOX

- Portable Clothes Dryer Unit
- Dry Bag (Fabric Cover)
- Instruction Manual



Image: Main components of the FOHERE Portable Clothes Dryer, showing the compact drying unit and the cylindrical dry bag for clothes.

SETUP GUIDE

- 1. Unpack Components:** Carefully remove all items from the packaging.
- 2. Assemble Dry Bag:** Unfold the dry bag (fabric cover). The dry bag is designed to attach to the main dryer unit.
- 3. Attach Dryer Unit:** Securely attach the main dryer unit to the top opening of the dry bag. Ensure it is firmly seated to prevent air leakage.
- 4. Hang the Dryer:** Hang the assembled dryer unit and dry bag in a suitable location. This can be a clothes rack, shower rod, or any sturdy bar. Ensure there is enough space around the unit for proper air circulation.
- 5. Plug In:** Connect the power cord to a standard 110V electrical outlet.

360° FULL HOT AIR DRYING

Fast drying, can also lock in moisture,
more flexible than natural air drying.



Image: The portable dryer unit is shown connected to its fabric drying bag, suspended from a clothes rack, illustrating the typical setup for operation.

OPERATING INSTRUCTIONS

Baby & Travel Portable Clothes MINI DRYER



Image: The control panel features clearly labeled buttons for Timer, On/Off, and UV light activation, along with indicator lights.

- **TIMER Button:** Press to set the drying duration.
- **ON/OFF Button:** Powers the unit on or off.

- **UV Button:** Activates or deactivates the built-in UV light for purification.

Loading Clothes

Open the zipper on the dry bag. Hang your pre-washed and spun-dry clothes inside the bag using hangers. The dryer has an extra-large capacity, holding up to 22 lbs or approximately 9 garments. Ensure clothes are spaced out for optimal air circulation and drying efficiency. Close the zipper completely before starting the dryer.

EXTRA-LARGE CAPACITY

FOHERE

Holds and dries multiple clothes.



22 Lbs Capacity



Up to 9 Clothes



Image: Multiple garments are shown hanging inside the portable dryer's fabric bag, demonstrating its capacity to dry several items simultaneously.

Drying Modes and Timer Function

The FOHERE Portable Clothes Dryer offers two drying modes and a timer function for customized drying.

- **Mode 1: Clothing Care (Gentle Drying):** Ideal for delicate fabrics such as silk, wool, and down. This mode uses lower heat to prevent damage to sensitive materials.
- **Mode 2: Fast Drying (Quick Drying):** Suitable for durable fabrics like cotton, linen, nylon, and polyester. This mode provides faster drying with higher heat.
- **UV Function:** Press the UV button to activate the built-in LED UV light for hygiene and purification during the drying cycle.



Image: Visual representation of the dryer's three operational modes: gentle clothing care with warm air, fast drying with hotter air, and UCV hygiene and purification using UV light.

Setting the Timer: Press the TIMER button to select the desired drying duration. The dryer supports settings up to 8 hours. The unit will automatically shut off once the set time has elapsed. Long press the timer button to cancel the timer function.

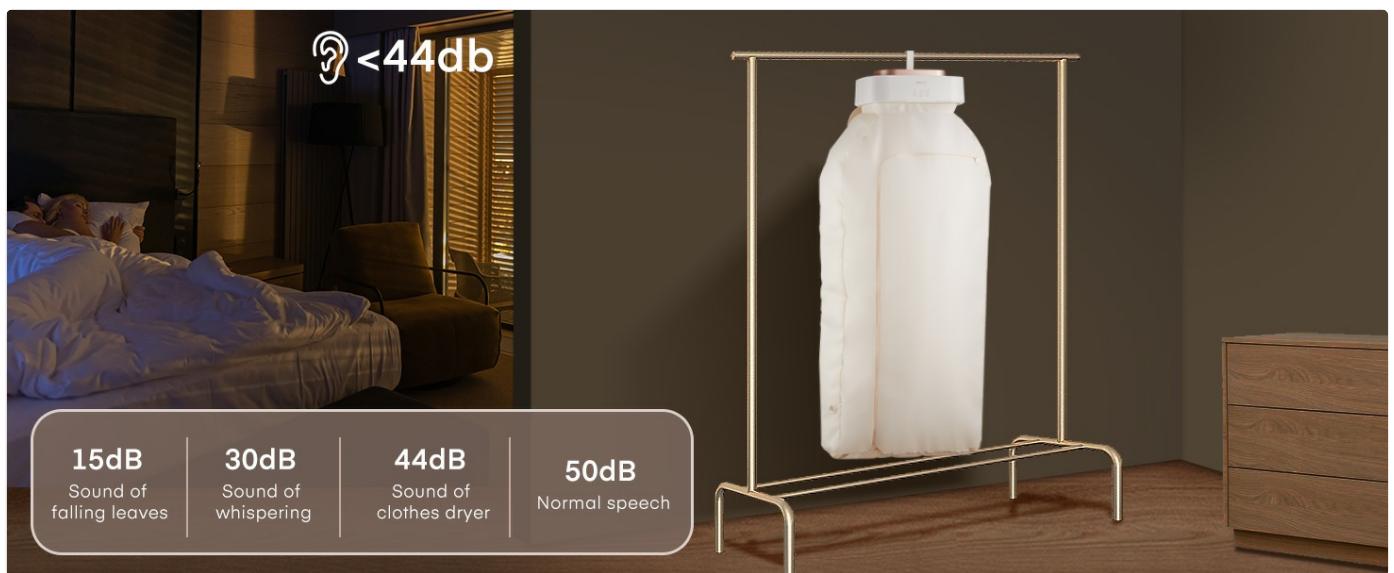


Image: A chart illustrating typical drying times for various garment types, ranging from underwear (20-30 min) to coats and towels (3-8 hours), based on physical room research.

Refer to the table below for estimated drying times:

Clothing Type	Quantity	Estimated Drying Time
Underwear	14-20 pcs	20-30 minutes
Baby Clothes	8-12 pcs	30 minutes - 1 hour
T-shirt	6-10 pcs	1.5 - 2 hours
Coat	4-5 pcs	3 - 6 hours
Towel	4-6 pcs	4 - 8 hours

Note: Drying times are approximate and may vary based on fabric thickness, moisture content, and ambient conditions.

MAINTENANCE AND STORAGE

Cleaning

- Always unplug the dryer from the power outlet before cleaning.
- Wipe the exterior of the dryer unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- The outer fabric dry bag is washable. Follow the care instructions on the bag's label for cleaning. Ensure it is completely dry before reassembly or storage.
- Regularly check the air intake and exhaust vents for lint or debris and clean as necessary to maintain optimal airflow.

Storage

The FOHERE Portable Clothes Dryer is designed for easy storage due to its compact and foldable nature. After use, allow the unit to cool down completely. Disassemble the dry bag from the main unit. The main unit can be stored in a drawer or suitcase, and the dry bag can be folded for compact storage.

Portable Dryer

DOES NOT OCCUPY SPACE
AND IS EASY TO STORE



Image: The portable dryer unit is shown being placed into a suitcase and stored in a drawer, emphasizing its compact design and ease of storage for travel or small living spaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in; Power outlet issue; Unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If problem persists, contact customer support.
Clothes are not drying completely.	Overloaded; Insufficient drying time; Poor air circulation; Clothes too wet initially.	Reduce load size. Increase drying time. Ensure dry bag zipper is fully closed and vents are clear. Pre-spin clothes thoroughly in a washing machine.
Dryer is making unusual noise.	Obstruction in fan; Unit not stable.	Unplug and check for any foreign objects near the fan. Ensure the unit is hanging stably and not vibrating against a surface.
UV light is not working.	UV function not activated; LED malfunction.	Press the UV button to activate. If it still doesn't work, contact customer support.

SPECIFICATIONS

Brand: FOHERE

Model: FOHERE Portable Clothes Dryers

Item Weight: 3.47 pounds

Product Dimensions: 11.81 x 4.17 x 8.46 inches

Form Factor: Portable

Color: White

Access Location: Top Load

Voltage: 110 Volts

Material: Plastic, Stainless Steel

Included Components: Portable Clothes Dryers, Dry Bag

Drying Power: 600W

Capacity: Up to 22 lbs / 9 garments

WARRANTY AND CUSTOMER SUPPORT

FOHERE is committed to providing high-quality products. For any questions, concerns, or warranty claims regarding your portable clothes dryer, please contact FOHERE customer support. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential service needs.

For further assistance, please visit the official FOHERE store on Amazon: [FOHERE Store](#).