

[Manuals.plus](#) /

› [Brightup](#) /

› Brightup Professional Cordless Barber Clippers and Trimmer Set (Models KS9885K & KS9886) User Manual

Brightup KS9885K, KS9886

Brightup Professional Cordless Barber Clippers and Trimmer Set

Models KS9885K & KS9886 User Manual

1. INTRODUCTION

Thank you for choosing the Brightup Professional Cordless Barber Clippers and Trimmer Set. This comprehensive kit is designed for both professional barbers and home users, offering powerful performance, precision cutting, and convenient features. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair cutting tools.

Package Contents:

- 1 x Professional Hair Clipper (Model KS9885K)
- 1 x Zero Gapped T-blade Beard Trimmer (Model KS9886)
- 2 x USB-C Charging Stands
- 2 x USB-C Charging Cables
- 8 x Metal Guide Combs for Clipper (3, 6, 9, 12, 1.5, 4.5, 16, 19mm)
- 3 x Guide Combs for Trimmer (1, 2, 3mm)
- 1 x Lubricating Oil
- 2 x Blade Cleaning Brushes
- 1 x User Manual

Professional Hair Clippers Set



Image 1.1: Complete Brightup Professional Barber Clippers and Trimmer Set with all included accessories.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Keep away from water sources. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Do not use on infants or children without adult supervision.
- Follow recommended cleaning and maintenance procedures to prevent injury from cutting blades.
- Ensure the appliance is switched off before cleaning or performing maintenance.
- Use only the charging cables and bases provided by Brightup.
- Do not operate the appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep the appliance away from heated surfaces.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being

administered.

3. PRODUCT OVERVIEW

The Brightup Professional Cordless Barber Clippers and Trimmer Set features a powerful brushless motor, ultra-sharp stainless steel blades, and an ergonomic design for comfortable and efficient use. Both units are cordless and rechargeable via USB-C, offering flexibility and convenience.

Key Features:

- **Super Powerful Brushless Motor:** Delivers 9000RPM for efficient cutting, especially for thick hair, with extended motor life.
- **Long-lasting Battery:** 2500mAh battery for the clipper (up to 4 hours runtime) and 800mAh for the trimmer (up to 2 hours runtime), with quick 2-hour full charge.
- **USB-C Charging & Charging Stands:** Offers versatile charging options for both units.
- **Hypoallergenic Stainless Steel Blades:** Precision-engineered for smooth cuts and seamless fades.
- **Adjustable Lever:** Allows for 0.8-4mm precision on the clipper for varied cutting lengths.
- **Smart LCD Display:** Shows battery life, low battery alerts, and low oil reminders.
- **Ergonomic Grip:** Dimpled handle design ensures a secure and comfortable hold.
- **Safety Clip:** Prevents accidental activation during transport.



Image 3.1: Illustration highlighting the 9000RPM brushless motor for high performance and enhanced durability.

Powerful Brushless Motor



Image 3.2: The cordless design of the Brightup hair clippers, emphasizing freedom of movement.

4. SETUP

4.1 Initial Charging

1. Before first use, ensure the safety clip (red pin) is removed from the clipper blade.
2. Place the clipper or trimmer onto its respective charging stand, ensuring the contacts align.
3. Connect the USB-C charging cable to the charging stand and a suitable USB power adapter (not included). Alternatively, you can plug the USB-C cable directly into the bottom of the clipper/trimmer.
4. The LCD display will show charging progress. Charge both units fully (100% indicated on display) before initial use. A full charge typically takes 2 hours.

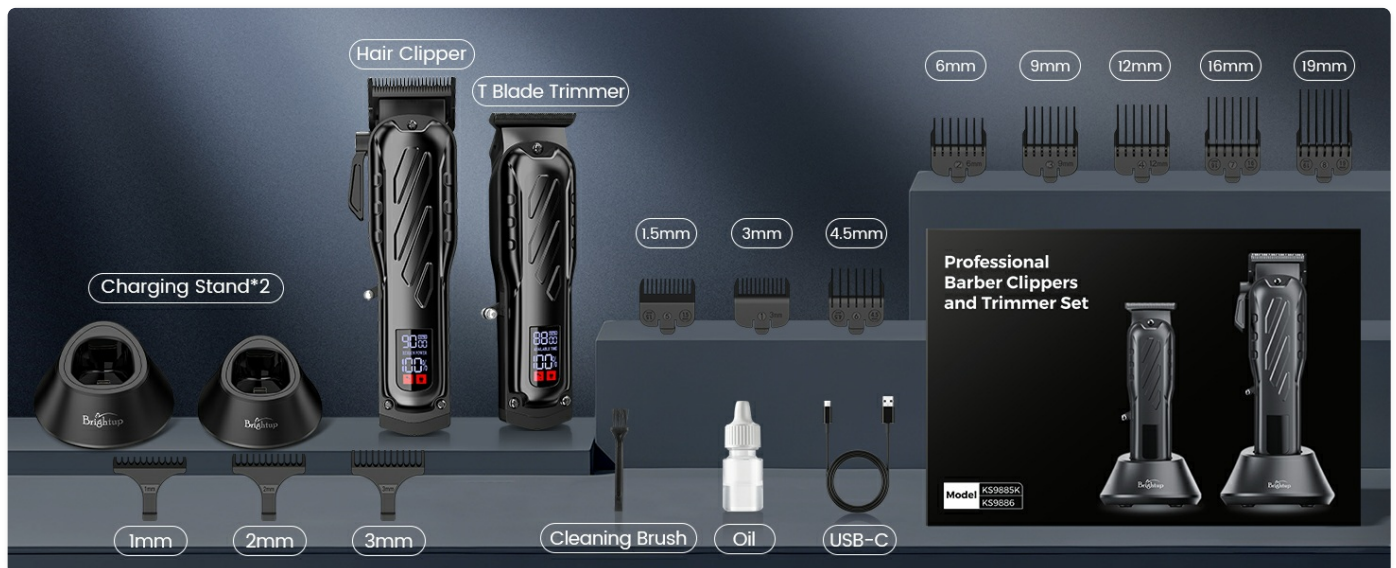


Image 4.1: The Brightup clipper and trimmer on their respective charging stands, connected via USB-C cables.

4.2 Attaching Guide Combs

1. Select the desired guide comb length. The clipper uses 8 metal guards (3, 6, 9, 12, 1.5, 4.5, 16, 19mm), and the trimmer uses 3 guide combs (1, 2, 3mm).
2. Align the guide comb with the blade of the clipper/trimmer.
3. Gently push the comb onto the blade until it clicks securely into place.
4. To remove, gently pull the comb away from the blade.



Image 4.2: The hair clipper with different guide combs, illustrating how they attach to the blade for various cutting lengths.

5. OPERATING INSTRUCTIONS

5.1 Using the Hair Clipper (Model KS9885K)

1. Ensure the clipper is fully charged and a suitable guide comb is attached (if desired).
2. Press the power button to turn on the clipper. The LCD display will show RPM and remaining power.
3. Use the adjustable lever on the side of the clipper to fine-tune the blade length between 0.8mm and 4mm for seamless fades and precise cutting.
4. Begin cutting hair against the direction of hair growth for an even cut.
5. After use, turn off the clipper and clean the blades.



Image 5.1: Close-up of the Brightup hair clipper showing the adjustable lever for precise blade length control.

5.2 Using the Zero Gapped T-blade Trimmer (Model KS9886)

1. Ensure the trimmer is fully charged and a suitable guide comb is attached (if desired).
2. Press the power button to turn on the trimmer. The LCD display will show RPM and remaining power.
3. The T-blade is designed for zero-gap trimming, ideal for detailing, outlining, beard maintenance, and hair art.
4. Carefully guide the trimmer along the desired areas for precise lines and clean finishes.
5. After use, turn off the trimmer and clean the blades.

Your browser does not support the video tag.

Video 5.2: Official Brightup video demonstrating the professional brushless motor and cutting capabilities of the clippers and trimmers.

6. MAINTENANCE

6.1 Cleaning the Blades

1. Ensure the clipper/trimmer is switched off and unplugged from any charging source.
2. Use the provided cleaning brush to remove any loose hair from the blades and the area around them.
3. For a more thorough clean, the blades can be carefully detached (refer to specific instructions for blade removal if necessary, usually by unscrewing).
4. Wipe the blades with a clean, dry cloth.

6.2 Oiling the Blades

1. After cleaning, apply 1-2 drops of the provided lubricating oil evenly across the blades.
2. Turn on the clipper/trimmer for a few seconds to allow the oil to distribute.
3. Wipe off any excess oil with a clean cloth.
4. The LCD display will provide a low oil reminder when lubrication is needed.



Image 6.1: The LCD screen on the clipper indicating a low oil alert, prompting the user to lubricate the blades.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper/Trimmer not turning on	Low battery; Safety clip not removed	Charge the unit fully; Remove the red safety clip from the blade.
Poor cutting performance	Blades are dull or dirty; Insufficient lubrication	Clean and oil the blades; Replace blades if excessively dull.
Unit gets hot during use	Prolonged use; Blades need lubrication	Allow unit to cool down; Clean and oil the blades.
LCD display not working	Unit is off; Malfunction	Turn on the unit; Contact customer support if issue persists.

8. SPECIFICATIONS

Feature	Detail
Brand	Brightup
Model Numbers	KS9885K (Clipper), KS9886 (Trimmer)
Motor Type	Brushless Motor (9000RPM)
Power Source	Battery Powered (Cordless)
Battery Type	Lithium Ion
Battery Capacity (Clipper)	2500mAh
Battery Capacity (Trimmer)	800mAh
Charging Time	Approx. 2 hours
Runtime (Clipper)	Up to 4 hours
Runtime (Trimmer)	Up to 2 hours
Charging Interface	USB-C
Blade Material	Stainless Steel
Clipper Adjustable Length	0.8mm - 4mm
Display	Smart LCD (Battery, Oil Reminder)
Color	Black
Package Dimensions	13.5 x 8.86 x 2.52 inches
Weight	2.73 Pounds

9. WARRANTY AND SUPPORT

Brightup products are manufactured with high-quality materials and undergo rigorous quality control. For specific warranty details, including coverage period and terms, please refer to the warranty card included in your product packaging or visit the official Brightup website.

If you encounter any issues with your Brightup Professional Cordless Barber Clippers and Trimmer Set, or require technical assistance, please contact Brightup Customer Support through the following channels:

- **Online Support:** Visit the Brightup official website for FAQs, troubleshooting guides, and contact forms.
- **Email Support:** Refer to your product packaging or warranty card for the customer service email address.

Please have your product model number (KS9885K / KS9886) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DCK4ZVJL>

More documents and user manuals: <https://manuals.plus/>