

## Revolution R90

# Revolution R90 Digital High-Speed 2-Slice Toaster

Model: R90

## 1. INTRODUCTION AND OVERVIEW

The Revolution R90 Digital Toaster is designed to provide a fast and consistent toasting experience for a variety of foods. Featuring InstaGLO 2.0 technology and a user-friendly touchscreen interface, this appliance offers precise control over your toasting preferences.

- **Patented Heating System:** Utilizes InstaGLO 2.0 technology for rapid heating and consistent results.
- **5 Toasting Options:** Dedicated modes for bread, bagels, waffles, English muffins, and pastries.
- **7 Toasting Shades:** Adjustable browning levels from light to dark.
- **Digital Touchscreen:** Intuitive interface for selecting food type, shade, and frozen settings.
- **Auto Lift/Lower:** Automatically lowers and raises items for convenience.
- **Removable Crumb Tray:** For easy cleaning and maintenance.
- **Toastie Press Mode:** Compatible with the optional Toastie Press accessory (sold separately) for grilled sandwiches.



Figure 1: Revolution R90 Digital Toaster highlighting key features.

## 2. IMPORTANT SAFETY INFORMATION

Please read all instructions before using the appliance. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

## 3. SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future transport or storage.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the appliance. The toaster features a handle for easy movement.
3. **Initial Cleaning:** Wipe the exterior with a damp cloth. Remove and clean the crumb tray before first use (refer to Section 5: Maintenance).
4. **First Use (Burn-Off Cycle):** Before toasting food, operate the toaster empty for two full cycles on the highest

setting (Shade 7) to burn off any manufacturing residues. Some smoke or odor may be present; this is normal. Ensure the area is well-ventilated.

## Improved Design

It's not like the rest of them. The design incorporates a tilted screen and a handle to safely pull your toaster out from under your cabinet.



Figure 2: The Revolution R90 Toaster features an integrated handle for easy placement and movement.

## 4. OPERATING INSTRUCTIONS

The Revolution R90 Toaster features a digital touchscreen for intuitive control.

1. **Powering On:** Plug the toaster into a standard electrical outlet. Press the power button (⏻) on the touchscreen to activate the display.
2. **Selecting Food Type:** On the touchscreen, select the icon corresponding to the food item you wish to toast (e.g., bread, English muffin, bagel, waffle, pastry). The toaster will automatically adjust its heating algorithm for optimal results.
3. **Selecting Toasting Shade:** Choose your desired browning level from 1 (lightest) to 7 (darkest) using the numbered circles on the touchscreen.
4. **Frozen Setting:** If your food item is frozen, press the snowflake icon (❄️) to activate the frozen setting. This will adjust the toasting cycle to properly defrost and toast the item.
5. **Starting the Cycle:** Insert your food item(s) into the toaster slots. Press the "Start" button. The toaster will automatically lower the food and begin the toasting cycle.
6. **Adjusting Time (+Time):** If you desire a slightly darker toast after a cycle completes, you can use the "+Time" button to add a short extension to the toasting duration.
7. **Canceling the Cycle:** To stop the toasting cycle at any time, press the "Cancel" button (✖️). The food will automatically rise.
8. **Using the Toastie Press (Accessory Sold Separately):** If using the optional Toastie Press, insert your sandwich into the press, then place the press into the toaster slots. Select the appropriate food type and shade, then press "Start".

## Digital Display

Perfect toast, in a tap. The bright and easy-to-use digital screen offers 5 toasting options, 7 shades, and a Toastie Press mode.



*Figure 3: Digital touchscreen interface for selecting food type and shade.*

# Revolution R90

## High-Speed Digital Toaster



- Patented heating system
- 5 custom bread modes
- Built-in handle to easily pull out
- Fresh or frozen
- Pop-out crumb tray
- Auto Lift/Lower
- Toastie press mode\*
- 7 toast shades

\* Toastie Press accessory sold separately.

Figure 4: The touchscreen displays options for different food types and browning levels.

# Make Delicious Sandwiches in Your Toaster!

The optional Revolution Toastie Press (sold separately) allows you to create perfectly toasted sandwiches (aka: "toasties"), quesadillas, melts, and more in your toaster!



Figure 5: The optional Toastie Press accessory allows for grilled sandwiches.

Your browser does not support the video tag.

Video 1: Official overview of the Revolution InstaGLO R90 High-Speed Digital Toaster, demonstrating its features and operation.

## 5. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your toaster.

1. **Unplug Before Cleaning:** Always ensure the toaster is unplugged from the power outlet and completely cooled before cleaning.
2. **Cleaning the Crumb Tray:** The toaster features an easy-click removable crumb tray located at the bottom front. Gently push the tray to release it, slide it out, and discard crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
3. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. **Interior Cleaning:** Do not attempt to clean the interior heating elements. Any food lodged inside should be carefully removed only when the toaster is unplugged and cool.

## Amazingly Convenient

Automatic slots gently lift your toast, so it's easy to grab. The easy-click removable crumb tray makes cleaning easy.



Figure 6: Removing the crumb tray for easy cleaning.

## 6. TROUBLESHOOTING

If you encounter issues with your Revolution R90 Toaster, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Toaster overheats or stops mid-cycle.	Internal safety mechanism activated due to prolonged use or high temperature.	Unplug the toaster and allow it to cool down for at least 10-15 minutes before attempting to use it again. Ensure adequate ventilation around the unit.
Food is not toasted evenly.	Incorrect food type selection or uneven thickness of food item.	Ensure the correct food type is selected on the touchscreen. For bagels, ensure the cut side faces inward as indicated on the toaster. Adjust the toasting shade as needed.
Toaster does not power on.	Not properly plugged in or power outlet issue.	Check that the power cord is securely plugged into a working electrical outlet. Try a different outlet if necessary.

## 7. SPECIFICATIONS

- **Brand:** Revolution
- **Model:** R90
- **Color:** Matte Black
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 11.93" x 7.8" x 6.87"
- **Wattage:** 1500 watts
- **Slot Count:** 2
- **Special Features:** InstaGLO Technology, Digital Touchscreen, Auto Lift/Lower, Removable Crumb Tray
- **Number of Toasting Shades:** 7
- **Number of Food Programs:** 5 (Bread, English Muffin, Bagel, Waffle, Pastry) + Toastie Press Mode
- **Included Components:** R90 Toaster

## 8. WARRANTY AND SUPPORT

The Revolution R90 Digital Toaster comes with a **2-year warranty** from the date of purchase, covering defects in materials and workmanship under normal household use.

For technical support, warranty claims, or general inquiries, please contact Revolution customer service. Refer to the official Revolution website or product packaging for the most up-to-date contact information.

**Online Support:** Visit the Revolution Cooking website for FAQs, product registration, and support resources.

