

Genérico KAP1178

KAP1178 Universal TV Box Remote Control User Manual

Model: KAP1178

INTRODUCTION

The Kapbom KAP1178 Universal TV Box Remote Control is designed to simplify your media device management. This remote offers broad compatibility with various TV boxes and other appliances, reducing the need for multiple controllers. Its ergonomic design ensures comfortable and intuitive navigation. The KAP1178 features programmable keys for personalized settings and advanced technology for reliable operation and extended range. Lightweight and portable, it integrates seamlessly into any entertainment setup.

PRODUCT OVERVIEW

Familiarize yourself with the components and layout of your KAP1178 remote control.



Figure 1: Front View of the Remote Control. This image displays the front of the Kapbom KAP1178 remote, showing all its buttons including power, volume, channel, navigation, numeric keypad, and dedicated function keys like SETUP and APP. The Kapbom logo is visible at the bottom.



Figure 2: Battery Compartment. This image shows the back of the remote control with the battery cover removed, revealing the compartment for two AAA batteries. The positive and negative terminals are clearly marked.



Figure 3: Angled View of the Remote Control. This image provides an angled perspective of the Kapbom KAP1178 remote, highlighting its ergonomic shape and the tactile feel of its buttons.



Figure 4: Product Packaging and Dimensions. This image shows the Kapbom KAP1178 remote control inside its retail packaging, with approximate dimensions (16 cm length, 5 cm width, 2 cm depth) and weight (55g) indicated, providing a sense of its compact size.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Slide the battery cover downwards and remove it.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

2. Initial Pairing / Programming (for Universal Functionality)

The KAP1178 remote is designed for broad compatibility. For optimal performance with your specific TV box or device, programming may be required. Refer to your device's manual for specific remote control codes or auto-search functions. General programming steps often involve:

- **Manual Code Entry:** Press and hold the "SETUP" button until the indicator light stays on. Enter the 3 or 4-digit code for your device (e.g., TV box brand). The indicator light should turn off, indicating successful programming.
- **Auto Code Search:** Press and hold the "SETUP" button until the indicator light stays on. Then, press the "POWER" button once. The remote will begin searching for the correct code. Point the remote at your device and wait for it to turn off. Once it turns off, immediately press any button (e.g., "OK") to save the code.
- **Programmable Keys:** Certain keys can be programmed to learn functions from your original remote. Consult the remote's specific instructions (if provided with the product) for detailed steps on key learning.

Note: The exact programming procedure may vary depending on the specific batch or firmware version of your remote. If the above steps do not work, please try alternative programming methods or consult online resources for universal remote programming.

OPERATING INSTRUCTIONS

Once programmed, the KAP1178 remote operates like a standard remote control for your TV box or compatible device.

- **Power Button (>):** Turns your device on or off.
- **TV Control Buttons (SET, TV IN, VOL-, VOL+):** These buttons are typically used for controlling basic TV functions like input selection and volume, especially if programmed to your TV.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus, select items, and confirm choices on your device's interface.
- **Home Button (⌂):** Returns to the main home screen of your TV box.
- **Back Button (←):** Goes back to the previous screen or menu.
- **Menu Button (≡):** Opens context-sensitive menus or options.
- **Numeric Keypad (0-9):** Used for direct channel entry or inputting numbers.
- **Volume Buttons (VOL-, VOL+):** Adjusts the volume level.
- **Mute Button ():** Mutes or unmutes the audio.
- **APP Button:** Often a shortcut to the applications menu or a specific app.
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions within applications or menus, as indicated on your device's screen.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of old batteries responsibly according to local regulations.

- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your KAP1178 remote, try the following solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and device. Remote not programmed correctly.	Replace batteries, ensuring correct polarity. Remove any obstructions. Reprogram the remote to your device.
Limited range or intermittent response.	Weak batteries. Interference. Remote not pointed directly at device.	Replace batteries. Ensure no strong light sources or other IR devices are causing interference. Point the remote directly at the device's IR receiver.
Certain buttons do not work.	Button malfunction. Remote not fully compatible or programmed for all functions.	Try reprogramming the remote. If specific buttons are programmable, ensure they were learned correctly. If the issue persists, the button may be faulty.
Cannot program the remote.	Incorrect programming steps. Device not supported.	Review the programming steps carefully. Try different programming methods (manual code, auto-search). Verify if your device is listed as compatible (if a code list was provided).

SPECIFICATIONS

- **Brand:** Generic (Kapbom)
- **Model:** KAP1178
- **Product Type:** Electronics - Remote Control
- **Compatible Devices:** Television, TV Boxes (Universal Compatibility)
- **Special Features:** Ergonomic, Programmable Keys
- **Power Source:** Battery Powered (AAA batteries)
- **Connectivity Technology:** Infrared (IR)
- **Number of Units:** 1
- **Product Weight:** Approximately 250 g (0.55 lbs)
- **Package Dimensions:** Approximately 16 x 11 x 11 cm (6.3 x 4.3 x 4.3 inches)
- **Maximum Supported Devices:** 18 (via programming)

WARRANTY AND SUPPORT

This product is generally sold without an explicit manufacturer's warranty. For any operational issues or questions, please refer to the troubleshooting section of this manual. If further assistance is required, please contact the retailer.

from whom you purchased the product.