

## SUPERLEX KCA

# SUPERLEX KCA 3-in-1 Electric Heated Lunch Box User Manual

Model: KCA

## INTRODUCTION

---

Thank you for purchasing the SUPERLEX KCA 3-in-1 Electric Heated Lunch Box. This device is designed to provide you with warm meals on the go, whether you are in your car, at the office, or traveling. It features a spacious stainless steel container, a separate fruit box, and multi-voltage compatibility for various power sources. Please read this manual carefully before use to ensure proper operation and maintenance.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not immerse the main heating unit in water or other liquids. Only the stainless steel container and fruit box are washable.
- Ensure the power cord is securely connected to both the lunch box and the power source.
- Do not use the appliance if the power cord or plug is damaged.
- Keep out of reach of children.
- Always unplug the lunch box before cleaning or when not in use.
- Do not heat empty containers.
- Avoid touching hot surfaces directly after heating. Use caution when opening the lid as steam may escape.
- Use only the provided power cords.
- Do not modify or attempt to repair the appliance yourself. Contact customer support for assistance.

## PACKAGE CONTENTS

---

Please check the package to ensure all items are present:

- 1 x SUPERLEX Electric Heated Lunch Box (Main Unit)

- 1 x 1.5L Food-Grade 304 Stainless Steel Container
- 1 x 0.45L Removable Fruit Box with Lid
- 1 x AC Power Cable (110V/220V for home/office use)
- 1 x DC Power Cable (12V/24V for car/truck use)
- 1 x Insulated Carry Bag
- 1 x Spoon
- 1 x Fork



This image displays the complete set of items included with the SUPERLEX electric lunch box, featuring the main heating unit, the large stainless steel food container, a smaller fruit box, two power cables (AC and DC), and a grey carry bag.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your electric lunch box:

- **Main Heating Unit:** The outer shell containing the heating element and power ports.
- **Stainless Steel Container (1.5L):** The primary food container, removable for easy cleaning.
- **Fruit Box (0.45L):** A smaller, separate container for fruits or snacks.
- **Lid with Latches:** Features four reinforced clasps and a silicone sealing ring for leak-proof transport.

- **Handle:** Integrated handle for convenient carrying.
- **Power Ports:** Separate ports for AC (home/office) and DC (car/truck) power cables.
- **Indicator Light:** Illuminates when the device is heating.



This image displays the SUPERLEX electric lunch box, highlighting its 1.5-liter main stainless steel food container and a separate 0.45-liter removable fruit box, designed for organized meal carrying.

# LEAK PROOF DESIGN

Lunch Box Features An Upgraded Lid Latch And Rubber Sealing Ring, Handle Design, No Leakage When Carrying



Handle



Upgraded Lid



The image illustrates the leak-proof features of the lunch box, including its secure handle for easy transport and an upgraded lid with reinforced latches and a silicone sealing ring to prevent spills.

## SETUP

- 1. Initial Cleaning:** Before first use, wash the stainless steel container, fruit box, spoon, and fork with warm soapy water. Rinse thoroughly and dry. Do not wash the main heating unit.
- 2. Place Food:** Put your prepared meal into the stainless steel container. If using the fruit box, place fruits or snacks inside and secure its lid.
- 3. Assemble:** Place the filled stainless steel container into the main heating unit. If using, place the fruit box next to it or on top if space allows.
- 4. Secure Lid:** Close the main lid of the lunch box and ensure all four latches are securely fastened.



This image demonstrates the versatile power options of the lunch box, featuring separate ports for AC 110V/220V use (for home/office) and DC 12V/24V use (for car/truck), allowing heating in various environments.

## OPERATING INSTRUCTIONS

Follow these steps to heat your meal:

### 1. Connect Power:

- For home or office use, connect the AC power cable to the appropriate port on the lunch box, then plug it into a standard 110V/220V wall outlet.
- For car or truck use, connect the DC power cable to the appropriate port on the lunch box, then plug it into your vehicle's 12V or 24V cigarette lighter socket.

2. **Start Heating:** Once connected, the indicator light on the lunch box will illuminate, signifying that heating has begun. The lunch box will automatically maintain a constant temperature.

3. **Heating Time:** Heating times vary depending on the food type, quantity, and ambient temperature. Generally, food will be warm in 25-30 minutes in summer and 40-60 minutes in winter. For best results, allow sufficient time for heating.

**Baby Food**  
⌚ 3-5 Mins

**Tortilla**  
⌚ 5-7 Mins

**Spaghetti**  
⌚ 10-15 Mins

**Stewed Beef**  
⌚ 20-25 Mins

**Paella**  
⌚ 25-35 Mins

**Salad**

☀️ **Summer: 25-30 mins**

❄️ **Winter: 40-60 mins**

**70W Watts**

**30 min**

An illustration showing estimated heating times for different types of food in the electric lunch box, such as baby food (3-5 mins), tortilla (5-7 mins), spaghetti (10-15 mins), stewed beef (20-25 mins), paella (25-35 mins), and salad (no heating). It also indicates faster heating in summer (25-30 mins) versus winter (40-60 mins).

4. **Enjoy Your Meal:** Once your food is heated to your desired temperature, unplug the lunch box. Carefully open the latches and remove the lid. Be cautious of steam.

## CLEANING AND MAINTENANCE

Proper cleaning ensures hygiene and extends the life of your lunch box:

1. **Unplug:** Always unplug the lunch box from the power source and allow it to cool completely before cleaning.
2. **Remove Components:** Take out the stainless steel container, fruit box, spoon, and fork.
3. **Wash Removable Parts:** The stainless steel container, fruit box, spoon, and fork are food-grade and dishwasher-safe. They can also be hand-washed with warm soapy water. Rinse thoroughly and dry completely before reassembly or storage.
4. **Clean Main Unit:** Wipe the exterior of the main heating unit with a damp cloth. Do not immerse the main unit in water or rinse it under running water. Ensure no water enters the power ports.
5. **Storage:** Store the clean and dry lunch box in a cool, dry place.

# Detachable Lunch Box Insert

**Hand washable**



**Dishwasher Safe**



This image highlights the ease of cleaning for the lunch box's removable stainless steel insert, demonstrating that it is both hand washable under running water and safe for use in a dishwasher.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Lunch box not heating.	No power connection; faulty cable; power outlet issue.	Ensure power cable is securely plugged in. Try a different power outlet or vehicle socket. Check if the indicator light is on.
Food not heating sufficiently or taking too long.	Insufficient heating time; very cold food; large food portion; low ambient temperature.	Allow more heating time. Stir food occasionally for even heating. Ensure the lid is securely latched.
Leakage from the lunch box.	Lid not properly sealed; latches not secured.	Ensure the silicone sealing ring is correctly positioned. Close all four latches firmly until they click into place. Do not overfill the container.

Problem	Possible Cause	Solution
Burning smell during heating.	Food spilled into the heating area; foreign object in heating area.	Immediately unplug the device. Let it cool. Inspect the heating area for any food residue or foreign objects and clean carefully (ensure unit is dry before next use). If the smell persists, discontinue use and contact support.

## SPECIFICATIONS

Feature	Detail
Brand	SUPERLEX
Model Number	KCA
Power	80 Watts
Main Container Capacity	1.5 Liters
Fruit Box Capacity	0.45 Liters
Input Voltage (AC)	110V / 220V
Input Voltage (DC)	12V / 24V
Material	Plastic (exterior), 304 Stainless Steel (interior container)
Dimensions (L x W x H)	17 x 13.5 x 29.5 cm
Item Weight	900 g
Special Features	Fast heating, Multi-voltage compatible, Leak-proof design, Accessory kit, Food-grade materials

## WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package or contact the seller for specific details regarding warranty duration and terms. Keep your purchase receipt as proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your SUPERLEX KCA Electric Heated Lunch Box that are not addressed in this manual, please contact the seller or manufacturer directly. Provide your model number (KCA) and a detailed description of the issue for faster assistance.

