

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Vimose](#) /

› [Vimose 62" Phone Tripod & Selfie Stick User Manual](#)

Vimose B0DCMQF2SN

Vimose 62" Phone Tripod & Selfie Stick User Manual

Model: B0DCMQF2SN

1. PRODUCT OVERVIEW

The Vimose 62" Phone Tripod & Selfie Stick is a versatile all-in-one device designed for mobile photography and videography. It functions as both a portable selfie stick and a stable tripod, featuring an extendable design, a 360° rotating phone holder, and a detachable wireless remote control. Constructed from premium aluminum alloy with anti-slip silicone pads, it offers durability and stability for various shooting scenarios.

What's in the Box

- Selfie Stick Tripod
- Wireless Remote
- 1 CR2 Battery (pre-installed or included separately for remote)



Image: The Vimose 62" Phone Tripod and Selfie Stick, showcasing its compact form, extended tripod mode, and extended selfie stick mode, along with the detachable wireless remote.

2. SETUP

2.1 Unfolding the Tripod/Selfie Stick

1. Hold the handle firmly.
2. Gently pull the top section upwards to extend the telescopic pole.
3. For tripod mode, spread the three legs at the base until they lock into a stable triangular position. Ensure the anti-slip silicone pads are flat on the surface.

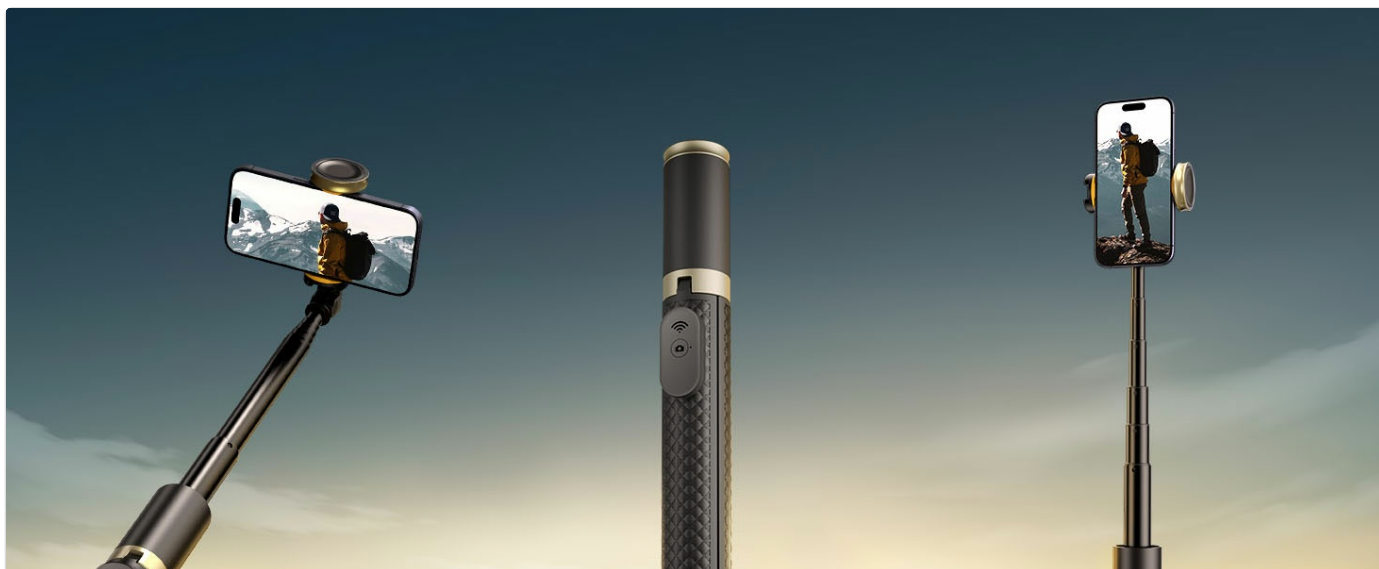


Image: Illustration showing the tripod in its compact, selfie stick, and fully extended tripod configurations, highlighting its all-in-one design.

2.2 Attaching Your Phone

1. Locate the phone holder at the top of the stick.
2. Gently pull the spring-loaded clamp of the phone holder upwards to open it.
3. Insert your smartphone into the holder, ensuring it is securely gripped by both sides of the clamp. The holder accommodates smartphones between 2.2 and 3.7 inches wide.
4. The phone holder allows for 360° rotation and 180° tilt adjustment for optimal viewing angles.

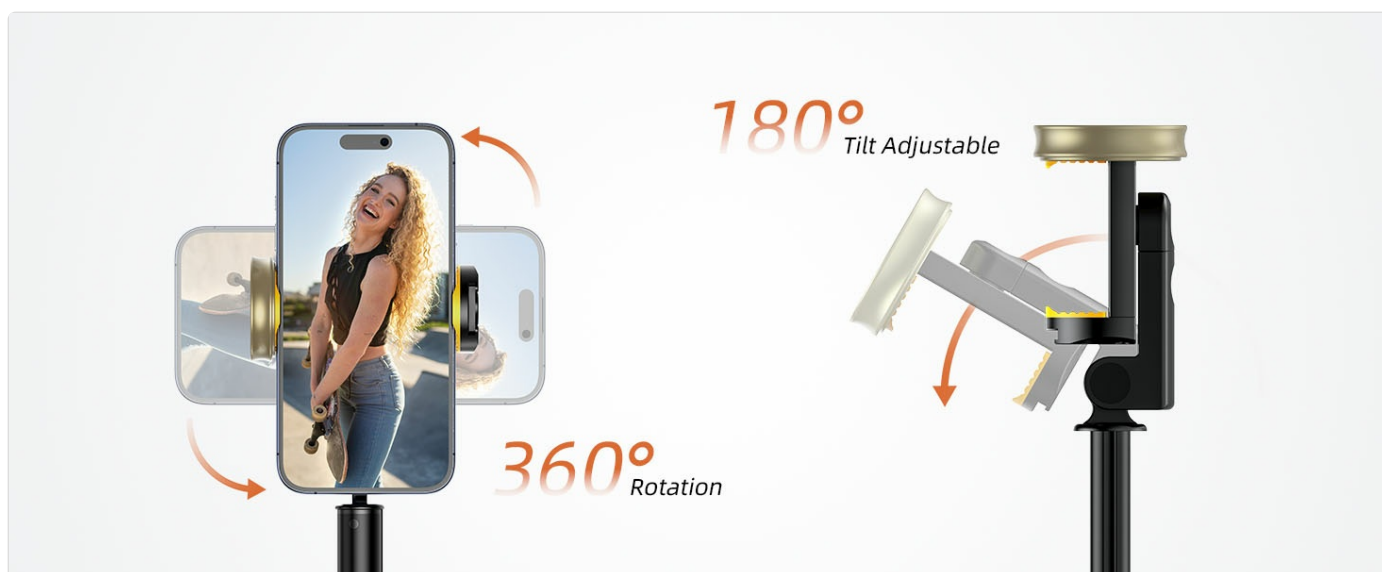


Image: Diagram illustrating the 360-degree rotation and 180-degree tilt capabilities of the phone holder, allowing for flexible camera positioning.

2.3 Pairing the Wireless Remote

1. The wireless remote is typically stored in the handle of the selfie stick. Gently slide it out.
2. Turn on the remote by pressing and holding the button until an indicator light flashes (refer to remote for specific light behavior).
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "Vimose Remote" or a similar name from the list to pair. The indicator light on the remote will stop flashing once successfully paired.
5. The remote is compatible with both iOS and Android devices and has an operating range of up to 33 feet (10 meters).

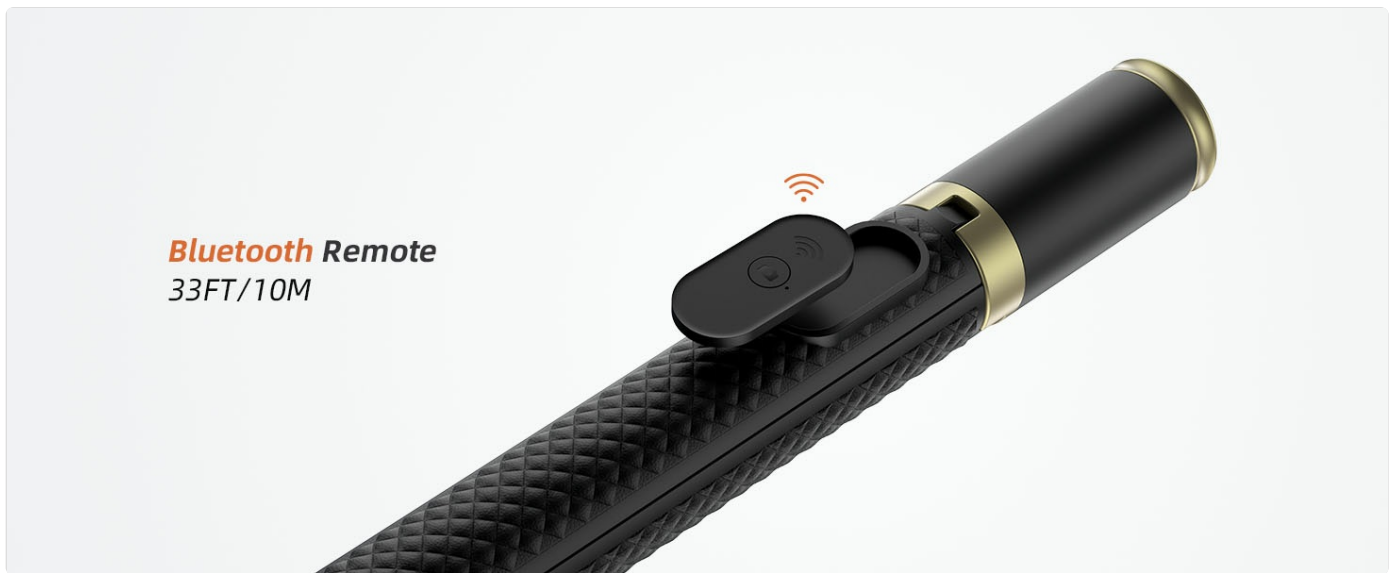 


Image: Close-up view of the detachable Bluetooth remote control, showing its integration into the handle of the selfie stick for convenient storage.

3. OPERATING INSTRUCTIONS

3.1 Using as a Selfie Stick

- Ensure the tripod legs are folded and secured within the handle.
- Extend the telescopic pole to your desired length (up to 62 inches).
- Hold the handle comfortably and position your phone for the shot.
- Use the paired wireless remote to capture photos or start/stop video recording.

3.2 Using as a Tripod

- Extend and lock the tripod legs into a stable position on a flat surface.
- Extend the telescopic pole to the required height.
- Adjust the phone holder's angle and rotation to frame your shot.
- Utilize the wireless remote for hands-free photo and video capture.

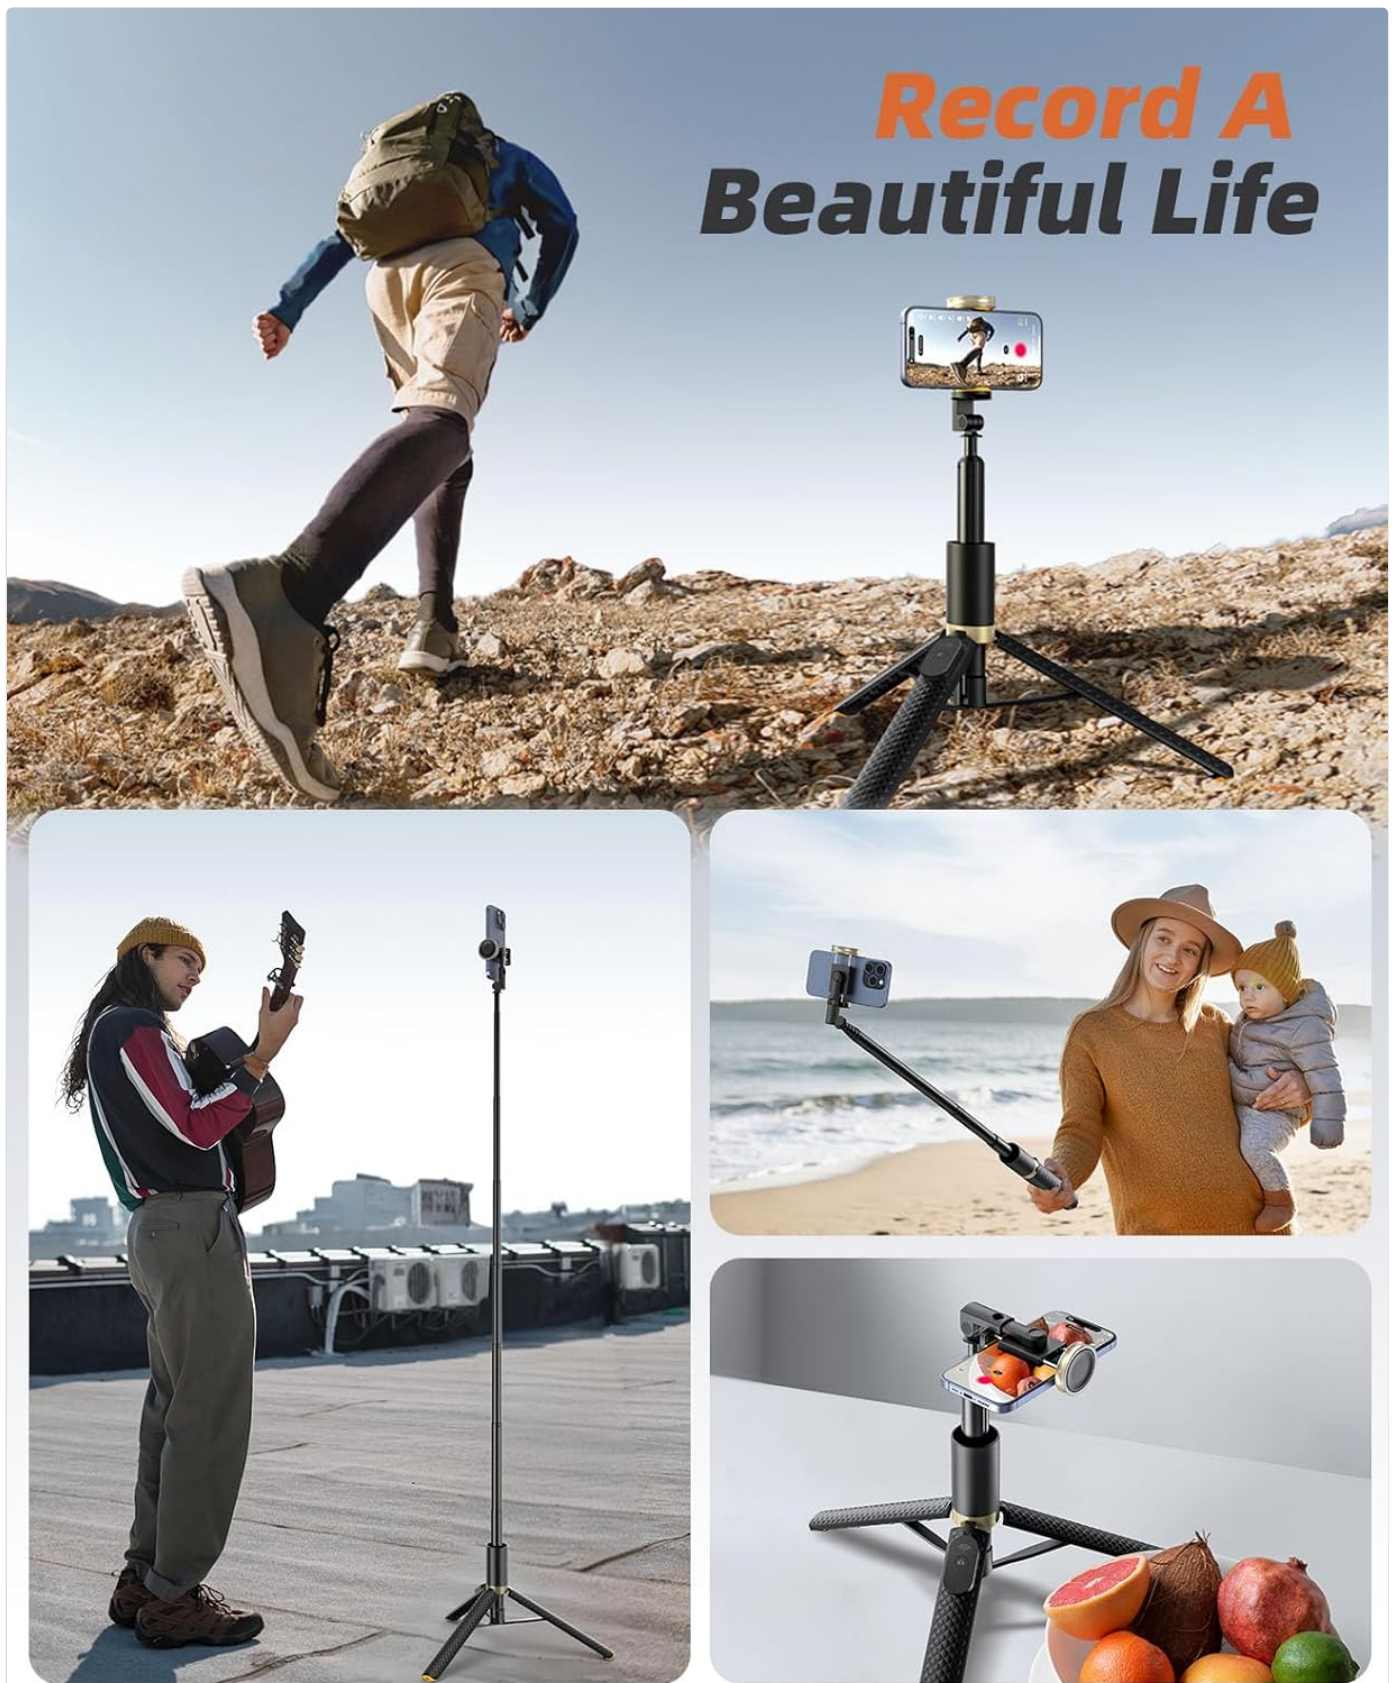 


Image: A person using the Vimose tripod to record content, demonstrating its use for stable video recording in various settings.

3.3 Adjusting Height and Angle

- To adjust height, gently pull or push the telescopic sections of the pole. Ensure each section is fully extended or retracted for stability.
- The phone holder allows for 360° horizontal rotation and 180° vertical tilt. Loosen the adjustment knob (if present) or simply rotate/tilt the holder to achieve the desired angle, then tighten if necessary.

4. MAINTENANCE

- **Cleaning:** Wipe the tripod and selfie stick with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully collapsed before storage to prevent damage.
- **Battery:** The remote uses a CR2 battery. If the remote's performance degrades, replace the battery.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not connecting/working.	Remote battery low or dead; not paired; out of range; obstruction.	Ensure remote battery is charged/replaced. Re-pair the remote via Bluetooth. Stay within 33 feet (10m) of the phone. Ensure clear line of sight between remote and phone.
Tripod unstable.	Legs not fully extended/locked; uneven surface; excessive weight.	Ensure all three legs are fully extended and locked. Place on a flat, stable surface. Do not exceed recommended weight capacity (designed for smartphones).
Phone not fitting in holder.	Phone width exceeds holder capacity.	The holder supports phones 2.2 to 3.7 inches wide. Ensure your phone (with case) is within this range.
Phone holder spring pops out.	Accidental dislodgement.	Carefully re-insert the spring and reassemble the phone holder mechanism. If issues persist, contact customer support.

6. SPECIFICATIONS

- **Brand:** Vimose
- **Model:** B0DCMQF2SN
- **Color:** Black
- **Material:** Aluminum
- **Maximum Height:** 62 Inches
- **Minimum Height (Folded):** 12.5 Inches
- **Item Weight:** 13.6 ounces
- **Compatible Devices:** iPhone, Android (smartphones 2.2 - 3.7 inches wide)
- **Remote Control Range:** Up to 33 feet (10 meters)
- **Battery (Remote):** 1 CR2 battery (included)
- **Special Features:** Adjustable & Flexible, All-in-One, Remote Control, Portable & Lightweight

7. WARRANTY AND SUPPORT

Vimose offers a **12-month replacement guarantee** and **lifetime technical support** for your 62" Phone Tripod & Selfie Stick. This ensures 100% customer satisfaction and provides prompt, hassle-free support for any issues you may encounter.

For assistance, please contact Vimose customer support directly. Refer to your purchase documentation or the seller's information on the platform where you purchased the product (Seller: VIMOSE DIRECT) for contact details.

