

[Manuals.plus](#) /

› [homeasy](#) /

› homeasy BW613 Food Warming Mat Instruction Manual

homeasy BW613

homeasy BW613 Food Warming Mat Instruction Manual

Model: BW613

[Introduction](#)

[Features](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Storage](#)

[Compatibility](#)

[Warranty &](#)

[Support](#)

[Safety Warnings](#)

[Specifications](#)

[Troubleshooting](#)

1. INTRODUCTION

The homeasy BW613 Food Warming Mat is an electric, rollable silicone heating mat designed to keep your food warm and ready to serve. Ideal for buffets, parties, or daily use, it features adjustable temperature settings, a smart timer, and a safety lock for convenient and secure operation.



Figure 1: homeasy Food Warming Mat in brown, showcasing its oval shape and integrated control panel.

2. KEY FEATURES

- **9 Adjustable Temperature Settings:** Offers a wide range from 104°F to 248°F for various warming needs.
- **Smart Timer:** Keeps food warm for up to 4 hours, with settings for 1, 2, 3, or 4 hours.
- **Safety Lock:** Prevents accidental changes to settings, ensuring safe use, especially around children.
- **Wide Tableware Compatibility:** Suitable for stainless steel, ceramic, glass, iron pots, tin foil, and milk bottles.
- **Foldable Design:** Easily rolls up for compact storage, saving space.
- **Extended Power Cord:** A 2.2 meter (7.2FT) cord provides greater flexibility in placement.
- **Efficient Heating:** High-efficiency heating wire ensures even and rapid warming across the entire surface.
- **Easy to Clean:** Oil-resistant and water-resistant silicone surface allows for simple wiping.
- **Non-slip High-Foot Pad:** 15mm high feet protect countertops from direct heat and provide stability.



Figure 2: The homeasy Food Warming Mat's large surface area is suitable for multiple dishes.

3. SETUP INSTRUCTIONS

1. **Unpack the Mat:** Carefully remove the food warming mat from its packaging. Unroll the mat and place it on a stable, heat-resistant surface.
2. **Inspect the Mat:** Ensure the mat and control panel are clean and free of any debris.
3. **Connect Power:** Connect one end of the power cable to the power socket on the mat's control panel and the other end into an electrical outlet. The mat will emit a "beep" sound, and the LED screen will display "OFF", indicating it is in standby mode.



Figure 3: Connecting the extended power cord to the control panel.

Video 1: Official product video demonstrating the setup, temperature settings, timer, and safety lock features of the homeasy Food Warming Mat.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- Press the **Power button** () to turn the warming mat on. The default temperature setting is 212°F.

- Press the **Power button** () again to turn the mat off.

4.2 Adjusting Temperature

- Use the **+** and **-** buttons to adjust the desired temperature. There are 9 preset temperature settings ranging from 104°F to 248°F.



Figure 4: The control panel allows selection from 9 temperature modes.

4.3 Setting the Timer

- Press the **Timer button** (⌚) to display the remaining time.
- Use the **+** and **-** buttons to adjust the duration from 1 hour to 4 hours. The display will show "1H", "2H", "3H", or "4H".
- If no timer is set, the mat defaults to a 2-hour automatic shutdown.

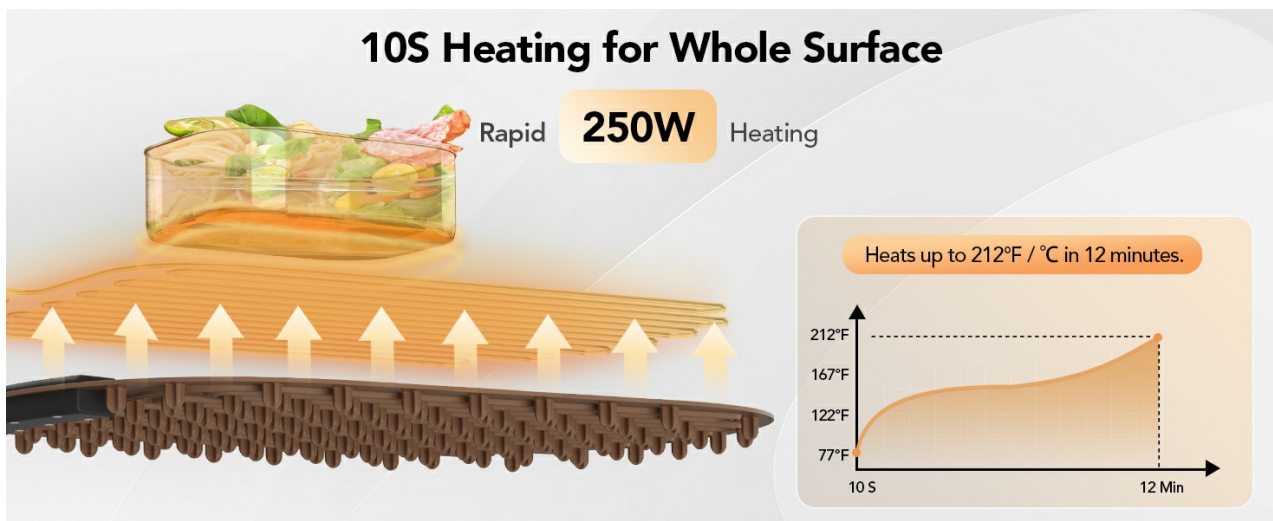 


Figure 5: Setting the timer for continuous warming.

4.4 Activating Child Lock

- Press and hold the **Child Lock button** () for 3 seconds to turn on or turn off the Child Lock function.
- When activated, the LED screen displays "LOC", and all other buttons are temporarily disabled to prevent accidental changes.

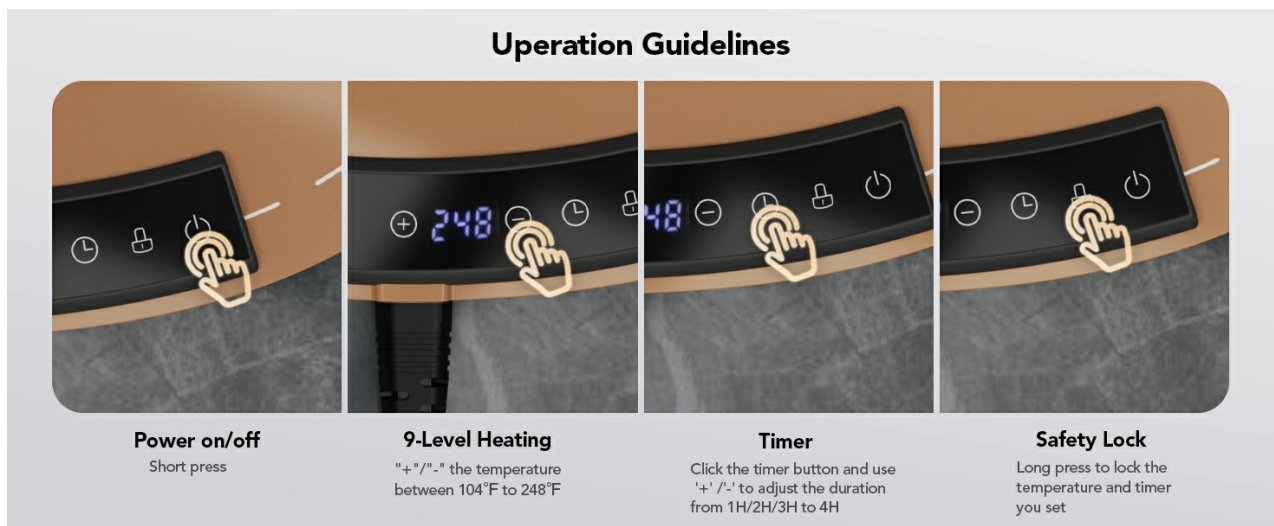 


Figure 6: The safety lock feature prevents unintended adjustments.

Video 2: Official product video showcasing the unboxing, setup, and various uses of the homeasy Food Warming Mat for keeping food warm.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the mat and allow it to cool completely before cleaning.
- Wipe the silicone surface with a damp cloth or sponge. The mat is oil-resistant and water-resistant for easy cleaning.
- Do not immerse the control panel or the entire mat in water.
- Do not use abrasive cleaners or sharp objects that could damage the surface.

Easy For Storage & Saving Space



 
Oil-Resistant Surface



Water-resistant



Roll-Up for Storage

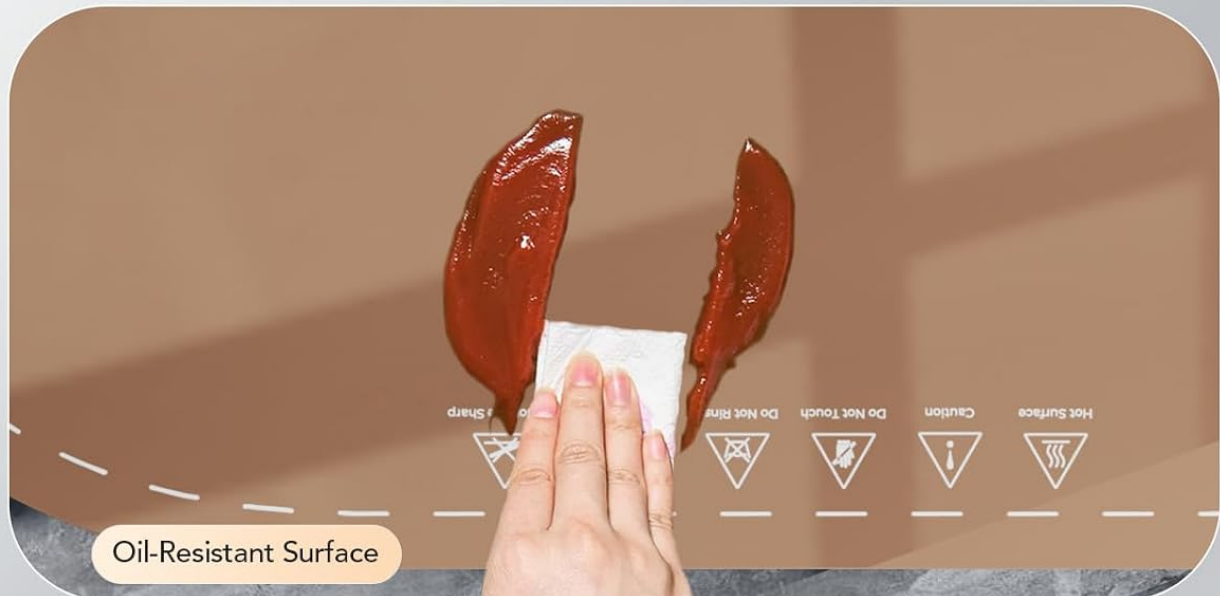

Oil-Resistant Surface



Oil-Resistant Surface



Anti-scald Edge Design

Figure 7: The mat's surface is easy to wipe clean.

6. STORAGE

- Ensure the mat is completely cool and clean before storing.
- Roll up the mat for compact storage. Use the provided strap to secure it in a rolled position.
- Store in a dry place, away from direct sunlight and extreme temperatures.



Figure 8: The mat can be rolled up for convenient storage.

7. TABLEWARE COMPATIBILITY

The homeeasy Food Warming Mat is compatible with a variety of tableware materials, ensuring your dishes stay warm effectively. Compatible materials include:

- Stainless Steel
- Ceramic
- Glass
- Iron Pot
- Tin Foil containers
- Milk Bottles

Fits for Various Tableware Containers

Please do not use on heat-sensitive surfaces



Figure 9: Various types of cookware and dishes can be used on the warming mat.

8. IMPORTANT SAFETY WARNINGS

- **Hot Surface:** The mat surface becomes hot during operation. Avoid direct contact with bare skin.
- **Countertop Protection:** Do not use on heat-sensitive surfaces. The non-slip high-foot pads help protect surfaces, but additional insulation may be required for delicate materials like finished wood.
- **Do Not Touch Heating Elements:** Ensure food containers are placed within the designated heating area.
- **Do Not Rinse/Immerse:** The mat is not submersible. Clean only by wiping the surface.

- **Avoid Sharp Objects:** Do not use sharp utensils directly on the mat surface to prevent damage.
- **Child Safety:** Utilize the Child Lock feature to prevent accidental operation by children.



Figure 10: Safety icons are printed on the mat for user awareness.

9. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	BW613
Brand	homeasy
Color	Brown
Material	Silicone
Dimensions	23.1" x 15.9" (approximate, inferred from title)
Temperature Settings	9 (104°F to 248°F)
Timer Settings	1H, 2H, 3H, 4H (automatic shutdown)
Power Source	Electric
Wattage	250 watts
Voltage	110 Volts
Cord Length	2.2 meters (7.2FT)
Item Weight	3.08 Pounds

10. TROUBLESHOOTING

- **Mat not heating:** Ensure the power cord is securely plugged into both the mat and a functional electrical outlet. Check if the power button has been pressed to turn the mat on.
- **Settings cannot be changed:** Verify that the Child Lock feature is not activated. If "LOC" is displayed, press and hold the Child Lock button for 3 seconds to deactivate it.
- **Uneven heating:** Ensure dishes are placed directly on the heating surface and are not excessively large or covering non-heating areas.

11. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please refer to the product packaging or contact homeasy customer service directly. Keep your purchase receipt for warranty claims.