

COSTWAY patio lounge chair

COSTWAY Outdoor Lounge Chair Instruction Manual

Model: Patio Lounge Chair

INTRODUCTION

Thank you for choosing the COSTWAY Outdoor Lounge Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new lounge chair. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION


WARNING:

- Do not exceed the weight capacity of 330 lbs (150 kg). Overloading can cause damage to the chair and potential injury.
- Ensure proper assembly of all components before use to prevent accidents.
- Keep children away from the assembly area. Small parts may pose a choking hazard.
- Use the lounge chair on a stable, level surface to avoid tipping.
- Regularly inspect the chair for loose parts or damage. Do not use if damaged.

PRODUCT DIMENSIONS

Understanding the dimensions of your lounge chair is crucial for proper placement and use. Refer to the diagram below for detailed measurements.

Product Dimensions

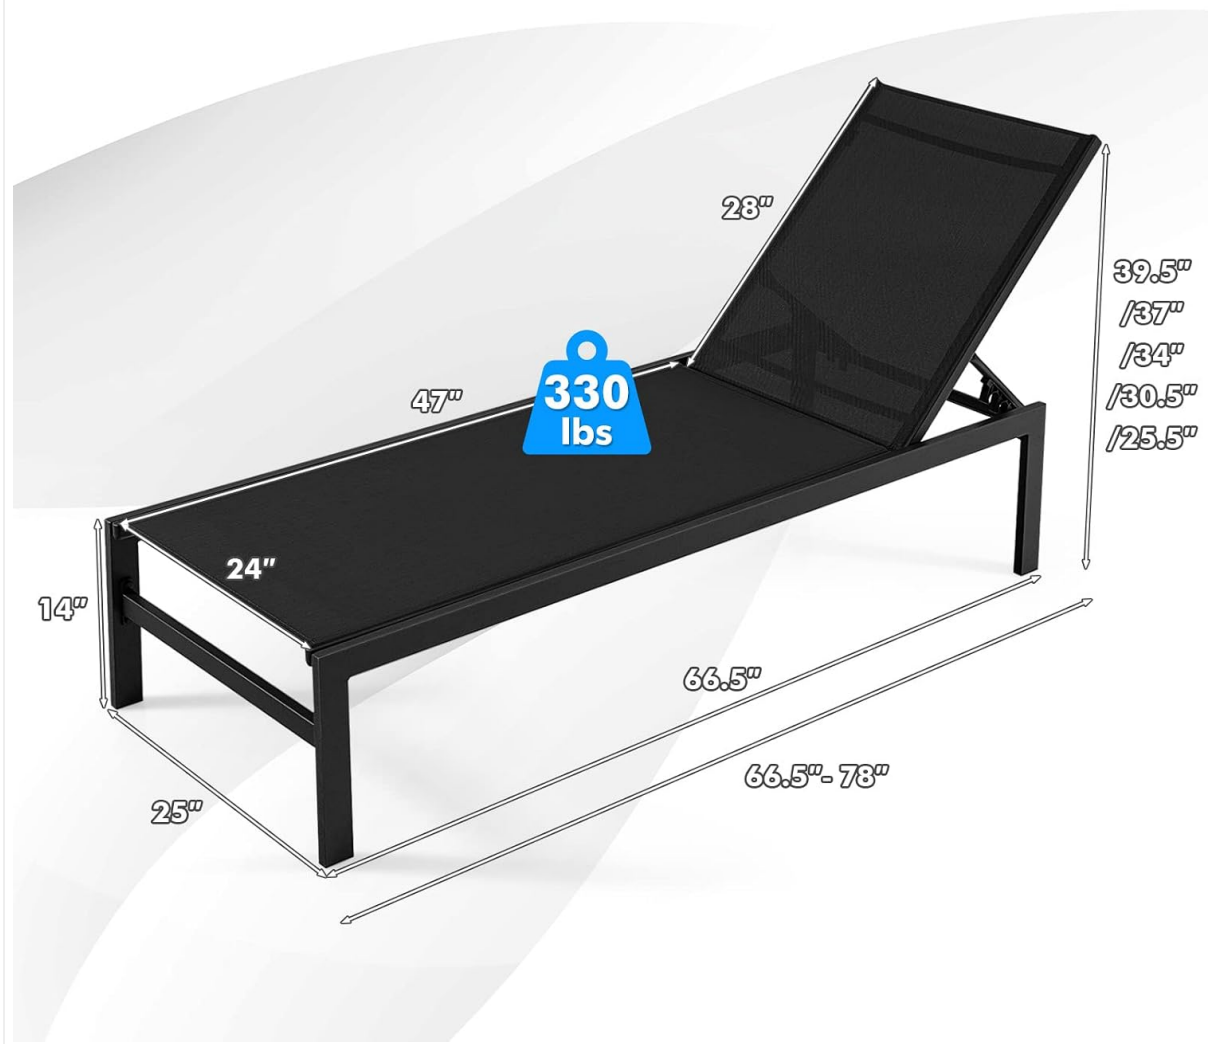

This image displays the overall dimensions of the lounge chair. Key measurements include a length adjustable from 60.5 to 78 inches, a width of 25 inches, and a height adjustable from 25.5 to 39.5 inches. The seat height is 14 inches. The chair has a maximum weight capacity of 330 lbs.

SETUP AND ASSEMBLY

The COSTWAY Outdoor Lounge Chair is designed for easy assembly. Follow these steps to set up your chair:

1. Unpack all components and verify against the included parts list (refer to the guide included in the package).
2. Place the main frame components on a clean, flat surface.
3. Attach the backrest to the seat frame, ensuring all screws are tightened securely.
4. Attach the legs to the main frame, ensuring they are stable and secure.
5. Confirm all connections are firm and stable before using the chair.

Note: All necessary hardware and a detailed guide are included in the package.

OPERATING INSTRUCTIONS

Adjusting the Backrest

Your lounge chair features a 6-position adjustable backrest, allowing you to customize your comfort for various activities.

- To adjust the backrest, lift the backrest slightly to disengage the locking mechanism.
- Move the backrest to your desired angle (from 122° to 155°).
- Lower the backrest until it securely locks into one of the six available positions.
- Ensure the backrest is firmly locked before leaning back. It can also recline completely flat for maximum relaxation.

6-Position Adjustable Recliner

The backrest can be adjusted from 122° to 155° to meet your different needs




This image illustrates the 6-position adjustable backrest. The diagram shows how the backrest can be set to different angles, from an upright position suitable for reading to a fully flat position for sunbathing or napping. The image also shows people relaxing by a pool, demonstrating various uses.

Recommended Uses

This versatile chaise lounge is suitable for various indoor and outdoor settings:

- **Reading:** Adjust the backrest to an upright position for comfortable reading.
- **Sunbathing:** Recline the backrest fully flat to enjoy sunbathing.
- **Relaxing:** Find your preferred angle for general relaxation on your patio, by the pool, or in your backyard.

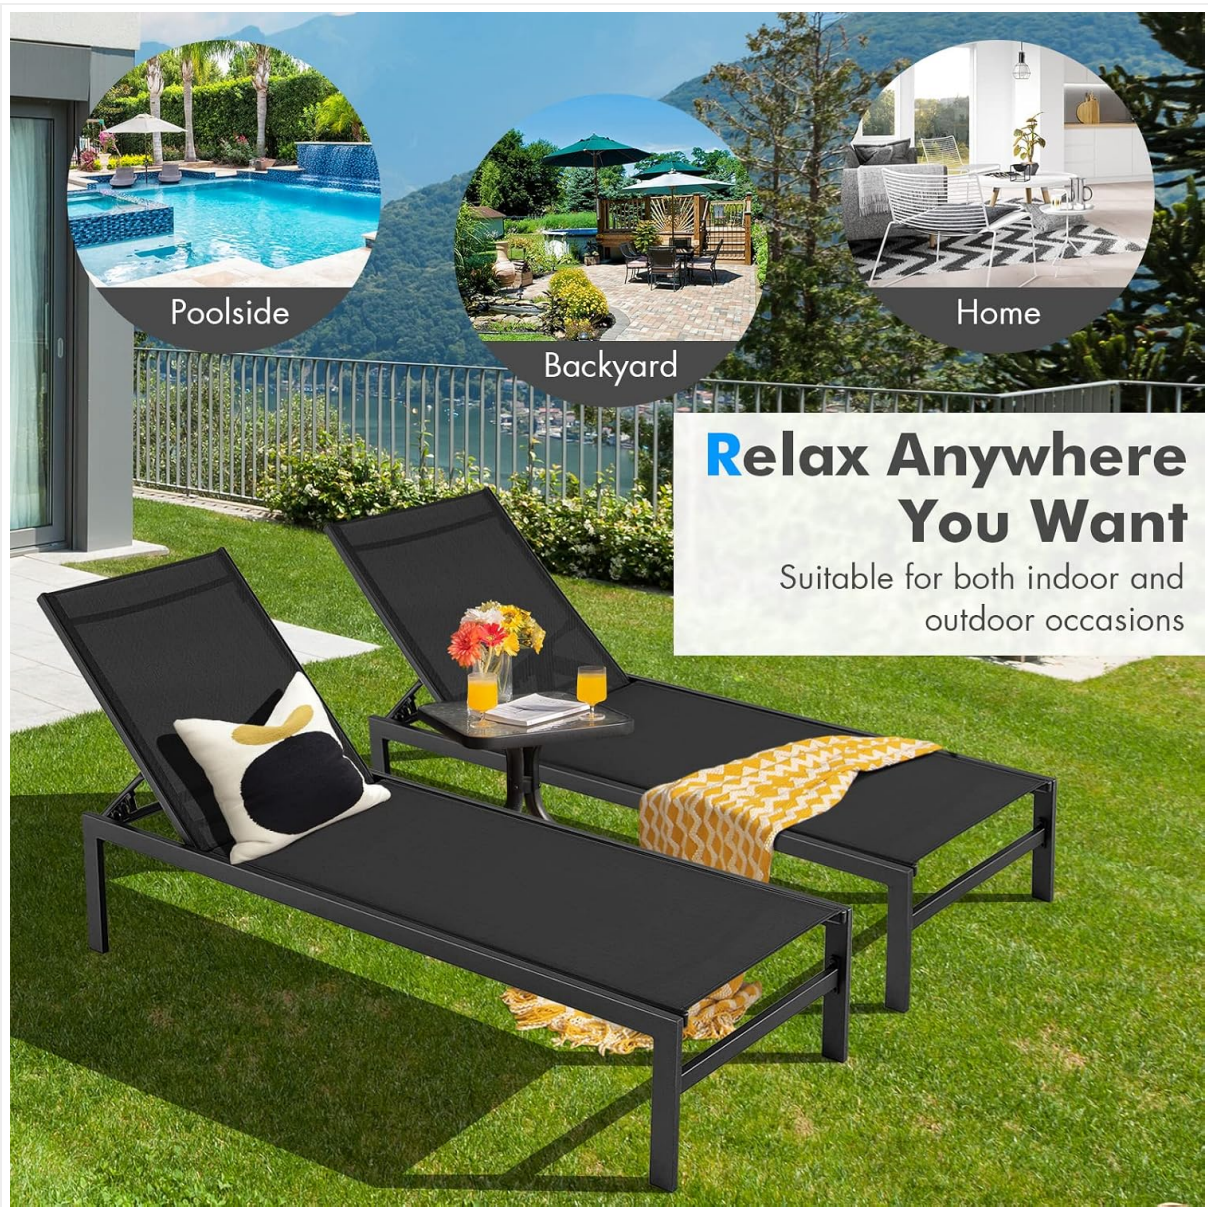

This image demonstrates the lounge chair's versatility, showing it used in different environments such as poolside, backyard, and home. It highlights the chair's adaptability for various leisure activities.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your COSTWAY Outdoor Lounge Chair, follow these maintenance guidelines:

- **Cleaning the Fabric:** The breathable, sun-resistant, and fast-drying fabric requires minimal upkeep. Wipe clean with a damp cloth and mild soap. Avoid harsh chemicals.
- **Frame Care:** The rustproof aluminum frame can be cleaned with a damp cloth. Avoid abrasive cleaners that may scratch the finish.
- **Storage:** While designed for outdoor use, storing the chair in a dry, covered area during harsh weather or off-season will extend its lifespan.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten as necessary.

Well-selected Fabric



Sun-resistant



Quick Drying



Waterproof



Breathable



Easy Maintenance

This image highlights the key features of the chair's fabric: it is waterproof, breathable, and easy to maintain. A small illustration shows water beading on the fabric, arrows indicating airflow for breathability, and a hand wiping the fabric clean.

Details of Chaise Lounge



Extended Backrest



Non-Slip Footpads



Tightened Screws



This image provides close-up details of the chaise lounge, showcasing the extended backrest, non-slip footpads for stability and floor protection, and securely tightened screws, emphasizing the product's construction quality.

TROUBLESHOOTING

If you encounter any issues with your lounge chair, please refer to the following common solutions:

- **Chair feels wobbly:** Check all assembly screws and bolts. Ensure they are fully tightened. Make sure the chair is on a flat, even surface.
- **Backrest not locking into position:** Ensure the adjustment mechanism is clean and free of debris. Lift the backrest fully before attempting to re-engage the lock at the desired position.
- **Fabric appears loose:** Over time, fabric may stretch slightly. Ensure the frame is correctly assembled, as improper assembly can affect fabric tension.

If problems persist, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	COSTWAY

Feature	Detail
Model Name	Patio Lounge Chair
Color	Black
Material	Aluminum (Frame), Polyester (Seat)
Product Dimensions (L x W x H)	60.5"-78" x 25" x 39.5"-25.5" (198.1D x 63.5W x 99.1H Centimetres)
Item Weight	14 Pounds (6.35 kg)
Weight Capacity	330 lbs (150 kg)
Backrest Positions	6 adjustable positions
Special Features	Arm Rest, Foldable (backrest only)
Indoor/Outdoor Usage	Outdoor
Assembly Required	Yes

WARRANTY INFORMATION

COSTWAY products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official COSTWAY website. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact COSTWAY customer support:

- **Website:** Visit the official COSTWAY website for FAQs and support contact information.
- **Email:** Refer to your product packaging or the COSTWAY website for the customer service email address.
- **Phone:** Refer to your product packaging or the COSTWAY website for the customer service phone number.

When contacting support, please have your product model name ("Patio Lounge Chair") and purchase details ready.