

Enhulk 20V | 12-Inch | 4-Ah Cordless Snow Blower

Enhulk 20V Cordless Snow Shovel Instruction Manual

Model: 20V | 12-Inch | 4-Ah Cordless Snow Blower

Brand: Enhulk

IMPORTANT SAFETY INFORMATION

Always read and understand this manual completely before operating the Enhulk 20V Cordless Snow Shovel. Failure to follow all instructions may result in electric shock, fire, and/or serious injury.

- Wear appropriate personal protective equipment, including eye protection, when operating the snow shovel.
- Keep hands, feet, and clothing away from all moving parts.
- Ensure the work area is clear of debris and other obstructions.
- Do not place the snow shovel directly on the snow after use to avoid damage to the machine.
- Store the snow shovel in a dry location.
- The anti-slip handle features dual safety switches, reducing the risk of accidental activation. Always engage the safety switch before operating.

PRODUCT OVERVIEW

The Enhulk 20V Cordless Snow Shovel is a battery-powered tool designed for efficient snow removal from various surfaces. It offers a lightweight and ergonomic design for comfortable operation.



Image: The Enhulk 20V Cordless Snow Shovel, shown with its included 4-Ah battery and quick charger.

Key Features:

- **Lithium Battery-Powered:** Operates cordlessly with a 20-volt motor and rechargeable 4.0 Ah lithium-ion battery, providing up to 20-25 minutes of quiet operation.
- **Powerful & Versatile:** Capable of clearing paths up to 12 inches wide and 6 inches deep. Ideal for steps, patios, decks, walkways, and driveways.
- **Ergonomic & Durable:** Features an adjustable handle for user comfort and a snow deflector that can be rotated +/- 30 degrees for directional snow tossing.
- **Lightweight Design:** Weighs only 9.7 pounds (with battery), making it easy to handle and maneuver.

12 IN CLEARING
WIDTH MAX

6 IN CLEARING
DEPTH MAX



Image: A visual representation of the snow shovel's maximum clearing width of 12 inches and maximum clearing depth of 6 inches.

**16.5FT
THROW DISTANCE MAX**



Image: A person operating the snow shovel, illustrating its maximum snow throwing distance of 16.5 feet.

Lightweight Design



Image: A person easily carrying the snow shovel, emphasizing its lightweight design at 9.7 pounds with the battery.

SETUP

Assembly:

The Enhulk 20V Cordless Snow Shovel features a detachable design for easy assembly and storage. Follow these steps to assemble your snow shovel:

1. Connect the upper and lower shaft sections. Ensure the joint-fixing knobs are securely tightened.
2. Attach the handle assembly to the upper shaft.
3. Ensure all connections are firm before proceeding.



Image: The snow shovel's detachable design, illustrating how the shaft separates for compact storage using joint-fixing knobs.

Battery Charging and Installation:

The snow shovel comes with a 4.0 Ah lithium-ion battery and a quick charger.

1. Insert the battery into the charger. The indicator light on the charger will show the charging status.
2. Once fully charged, remove the battery from the charger.
3. Align the charged battery with the battery slot on the snow shovel's handle and slide it in until it clicks securely into place.



Image: The 20V 4.0 Ah lithium-ion battery placed on its charging base, indicating it's ready for use.

OPERATING INSTRUCTIONS

Starting and Stopping:

1. Ensure the battery is fully charged and securely installed.
2. Press the safety lock on the side of the handle with your thumb.
3. While holding the safety lock, squeeze and hold the trigger switch to start the snow shovel.
4. Release the trigger switch to stop the snow shovel.



Image: A step-by-step guide on the handle, showing how to press the safety lock and then hold the trigger switch to operate the snow shovel.

Adjusting the Directional Plate:

The snow deflector can be rotated +/- 30 degrees to control the direction of snow discharge. Adjust the plate to direct snow away from cleared areas or desired locations.

ADJUSTABLE DIRECTIONAL PLATE



Image: A close-up view of the snow shovel's adjustable directional plate, indicating its ability to rotate up to 30 degrees for precise snow throwing.

Adjusting the Front Handle:

The ergonomic handle can be adjusted to suit your usage habits, ensuring comfortable and efficient snow removal without straining your back.

Adjustable Handle Save Your Back



Image: A person comfortably using the snow shovel, demonstrating the benefit of the adjustable handle in reducing back strain.

Optimal Use:

The Enhulk 20V handheld snow shovel is best suited for handling fluffy snow. Performance may vary depending on actual snow conditions (e.g., wet, heavy snow may reduce efficiency).



Image: A person effectively clearing a snow-covered path with the Enhulk snow shovel.



Image: Examples of the snow shovel being used in various common areas such as driveways, sidewalks, and patios.

MAINTENANCE

Cleaning:

After each use, ensure the snow shovel is clean and free of snow and ice buildup. Use a damp cloth to wipe down the exterior. Do not use harsh chemicals or abrasive cleaners.

Storage:

Store the snow shovel in a dry, protected area away from direct sunlight and moisture. The detachable design facilitates compact storage. Ensure the battery is removed before long-term storage.

Battery Care:

To prolong battery life, store the battery in a cool, dry place. Avoid storing the battery in extreme temperatures. Fully charge the battery before storing for extended periods and recharge every 3-6 months if not in use.

TROUBLESHOOTING

Common Issues and Solutions:

- **Machine does not start or work:**

Check the battery temperature. If the battery is too cold, let it warm up indoors and try again. Ensure the battery is fully charged and properly seated in the tool. Verify that both the safety lock and trigger switch are engaged simultaneously.

- **Reduced snow throwing performance:**

This can occur with wet or heavy snow. The shovel is best suited for fluffy snow. Clear any clogs from the auger area (ensure the tool is off and battery removed before clearing).

- **Short operating time:**
Ensure the battery is fully charged. Battery performance can be affected by extreme cold. Consider having a spare charged battery for longer tasks.







SPECIFICATIONS

Specification	Value
Brand	Enhulk
Power Source	Battery Powered
Color	Blue/Black
Engine Type	Battery-Powered
Maximum Throw Distance	16.5 Feet
Voltage	20 Volts
Ideal Snow Depth	6 Inches
Clearing Width	12 Inches
Package Dimensions	19.17 x 13.78 x 11.02 inches
Item Weight	12.89 pounds
Manufacturer	Enhulk
ASIN	B0DCN7BN36

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Enhulk customer service directly. Keep your purchase receipt as proof of purchase.

You can typically find contact information for Enhulk on their official website or through the retailer where the product was purchased.

	<p><u>ENHULK 20V 12 Inch Cordless Snow Shovel ASYSN04: User Manual, Safety & Operating Instructions</u></p> <p>Detailed user manual and safety guide for the ENHULK 20V 12 Inch Cordless Snow Shovel (Model ASYSN04). Covers essential safety warnings, operating instructions, assembly, troubleshooting, maintenance, and product specifications for effective and safe use.</p>
	<p><u>ENHULK 40V 13.2 Inch Cordless Snow Shovel ASYSNO2 User Manual</u></p> <p>This user manual provides comprehensive safety instructions, operating procedures, maintenance guidelines, and troubleshooting tips for the ENHULK 40V 13.2 Inch Cordless Snow Shovel, model ASYSNO2.</p>
	<p><u>ENHULK 20V Blower/Sweeper DS128 & DS128-2: Instruction Manual and Safety Guide</u></p> <p>Comprehensive instruction manual and safety guide for the ENHULK 20V Blower/Sweeper models DS128 and DS128-2, covering operation, maintenance, troubleshooting, and safety precautions.</p>
	<p><u>ENHULK 20V Blower/Sweeper DS175: Original Instruction Manual</u></p> <p>This document provides comprehensive safety instructions, operating guidelines, maintenance procedures, troubleshooting tips, and warranty information for the ENHULK 20V Blower/Sweeper DS175.</p>
	<p><u>Enhulk DS164 Cordless String Trimmer User Manual</u></p> <p>User manual for the Enhulk DS164 cordless string trimmer/weed wacker. Learn about its features, operation, maintenance, and safety guidelines for lawn care and yard work.</p>
	<p><u>ENHULK YS-DS-134 20V Brushless Blower: User Manual and Safety Instructions</u></p> <p>Official instruction manual for the ENHULK YS-DS-134 20V Brushless Blower. Includes safety warnings, product features, technical specifications, assembly, operation, charging, maintenance, and transport guidelines.</p>