

Liviza outdoor swing

Liviza 2-Seat Outdoor Swing User Manual

Model: Outdoor Swing | ASIN: B0DCN9C4R3

1. INTRODUCTION

Thank you for choosing the Liviza 2-Seat Outdoor Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor swing. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- Always ensure all bolts and nuts are securely tightened before and during use.
- Do not exceed the maximum weight capacity of 500 lbs (226 kg).
- Place the swing on a flat, stable surface to prevent tipping.
- Keep children under supervision when using the swing.
- Avoid using the swing in strong winds or severe weather conditions.
- Regularly inspect the swing for any signs of wear, damage, or loose components.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Steel Frame Components
- Adjustable Canopy Fabric
- Seat and Back Cushions (2 sets)
- Middle Table with Cup Holders
- Storage Cooler Bag
- Heavy-duty Spring Hooks
- Assembly Hardware (bolts, nuts, washers, tools)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is required. Follow the step-by-step instructions provided with the hardware kit. It is recommended to have two adults for assembly.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Assemble the main frame structure using the provided bolts and tools. Ensure all connections are secure.
3. Attach the swing seats to the frame using the heavy-duty spring hooks.
4. Install the middle table between the two seats.
5. Mount the adjustable canopy frame and attach the canopy fabric.
6. Place the seat and back cushions onto the swing seats, utilizing the fixing straps to secure them.
7. Attach the storage cooler bag to the designated area.



Image: Key structural components including the anti-rust steel frame and heavy-duty spring hooks.

5. OPERATING INSTRUCTIONS

5.1 Adjustable Canopy

The canopy can be adjusted up to 240 degrees to provide optimal shade and sun protection. Locate the adjustable knob on the side of the canopy frame. Loosen the knob, position the canopy to your desired angle, and then tighten the knob to secure it.



Image: Demonstrates the 240-degree adjustable canopy for sun and water resistance.

5.2 360° Rotatable Tray with Cup Holders

The middle table features a 360-degree rotatable tray with two cup holders. This allows for convenient access to beverages and small items. Simply rotate the tray to your preferred position.

360° ROTATABLE TRAY

Middle Table with 2 Cup Holder

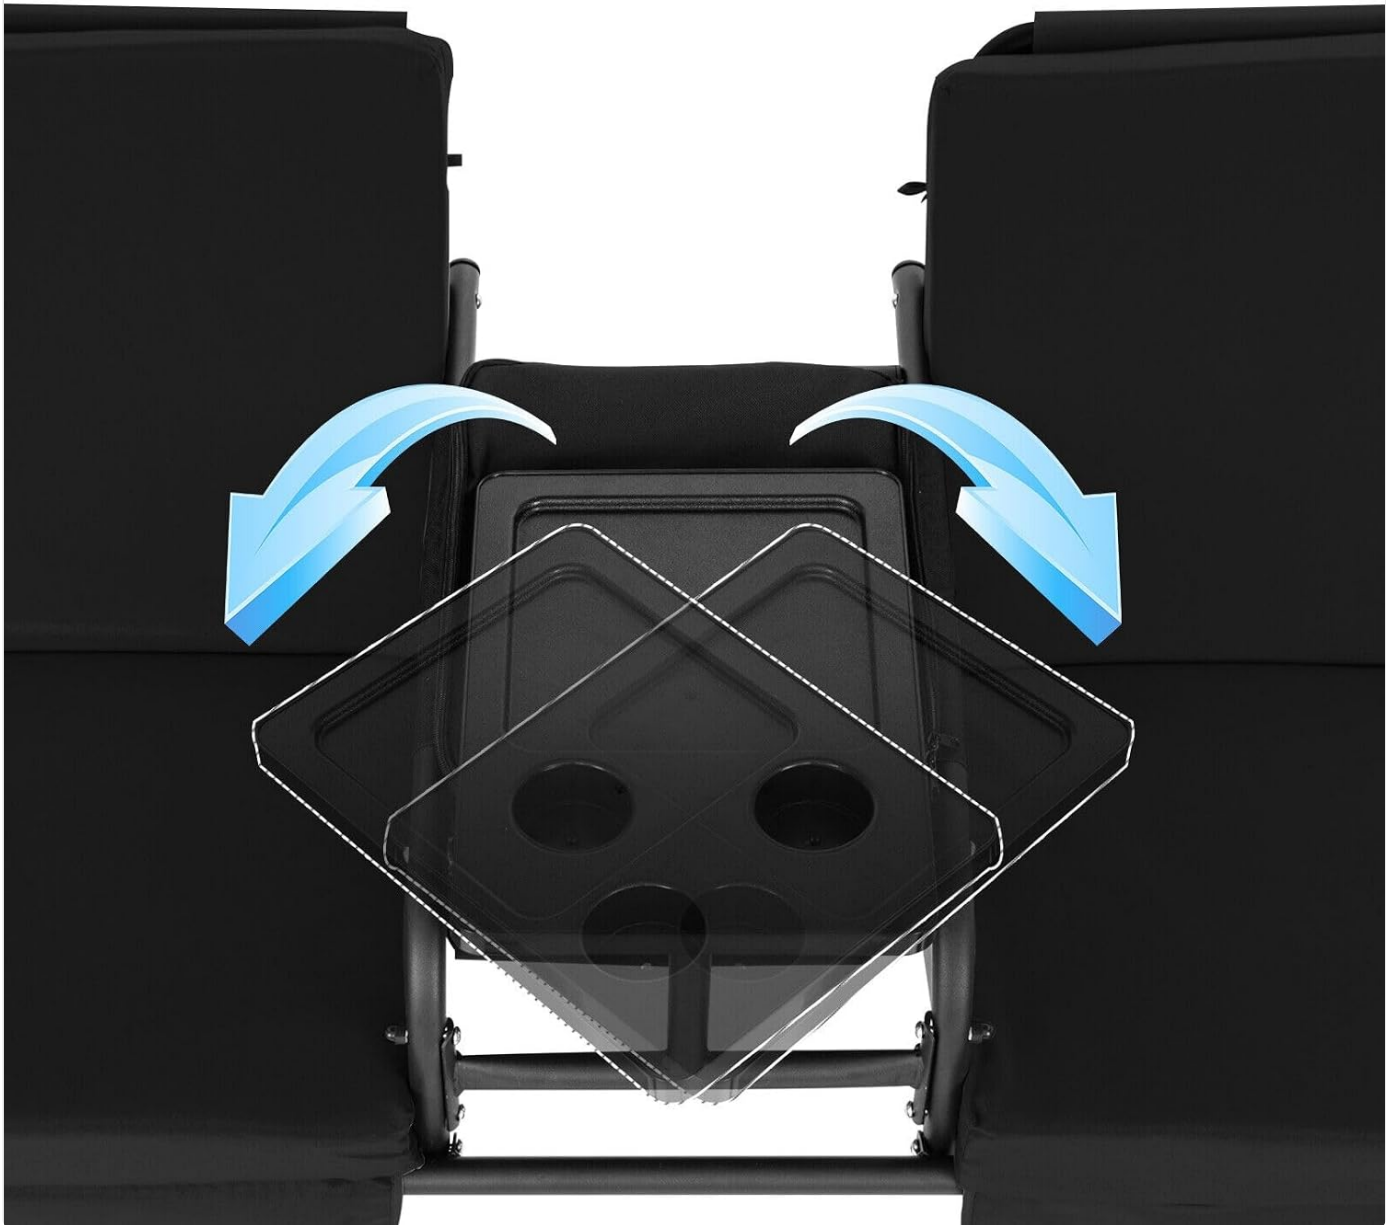


Image: The 360-degree rotatable tray with integrated cup holders.

5.3 Storage Cooler Bag

The integrated cooler bag, equipped with double slide zippers, is designed to keep drinks and food cool and easily accessible. Ensure the zippers are fully closed to maintain temperature.

6. MAINTENANCE

- **Cleaning:** The water-resistant Oxford cloth canopy and cushions can be wiped clean with a damp cloth and mild soap. Avoid harsh chemicals.
- **Frame Care:** The anti-rust steel frame should be wiped down periodically to remove dirt and debris. Inspect for any rust and treat as necessary.
- **Storage:** During prolonged periods of non-use or severe weather, it is recommended to cover the swing or store it indoors to prolong its lifespan.
- **Fastener Check:** Periodically check all bolts, nuts, and spring hooks to ensure they remain tight and secure.

7. TROUBLESHOOTING

- **Squeaking Noise:** If the swing makes squeaking noises, apply a silicone-based lubricant to the spring hooks and pivot points.
- **Canopy Not Holding Position:** Ensure the adjustable knob on the canopy frame is fully tightened after positioning.
- **Swing Feels Unstable:** Verify that the swing is placed on a level surface and all frame connections are securely tightened. Check the anti-slip foot pads for proper contact with the ground.

8. SPECIFICATIONS

Brand	Liviza
Model Number	outdoor swing
ASIN	B0DCN9C4R3
Color	Black
Material	Alloy Steel, Polyester
Product Dimensions (D x W x H)	49" x 71.5" x 63.5" (124.5 cm x 181.6 cm x 161.3 cm)
Item Weight	48 Pounds (21.8 kg)
Maximum Weight Recommendation	500 Pounds (226 kg)
Maximum Compatible Number of Seats	2
Required Assembly	Yes
UPC / GTIN	753448756311

PRODUCT DIMENSION



Image: Detailed product dimensions.

9. WARRANTY AND SUPPORT

Liviza stands behind the quality of its products. For warranty information, technical support, or to order replacement parts, please contact Liviza customer service through the retailer where the product was purchased or visit the official Liviza website.

10. ENJOY YOUR OUTDOOR SWING

The Liviza 2-Seat Outdoor Swing is designed to enhance your outdoor living space, whether it's your backyard, balcony, or poolside. Enjoy moments of relaxation and comfort.

ENJOY OUTDOOR LIVING



Poolside



Backyard



Balcony



Image: Enjoying outdoor living with the Liviza swing.



Image: Liviza outdoor swing in a backyard setting.



Image: Liviza outdoor swing on a patio.

© 2026 Liviza. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DCN9C4R3>

More documents and user manuals: **<https://manuals.plus/>**