

[Manuals.plus](#) /

> [KOLEOLL](#) /

> W10919352 Washer Dispenser Drawer Replacement Instruction Manual

## KOLEOLL W10919352

# Instruction Manual

KOLEOLL W10919352 Washer Dispenser Drawer Replacement

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of the KOLEOLL W10919352 Washer Dispenser Drawer Replacement. This component is designed to replace original dispenser drawers in compatible Whirlpool and Maytag washing machines, specifically models that use part numbers W10601825, W10777533, W10794835, 4455043, AP6037331, PS11770104, and EAP11770104. The dispenser drawer is essential for properly storing and dispensing laundry products such as detergent, softener, and other additives during the wash cycle.



**Figure 1:** The W10919352 Washer Dispenser Drawer Replacement. This image shows the complete dispenser drawer unit, ready for installation into a compatible washing machine.


## PRODUCT DIMENSIONS

---

Understanding the dimensions of the replacement part is crucial for ensuring compatibility and proper fit. The W10919352 dispenser drawer measures approximately 12.99 inches in length, 6.30 inches in width, and 2.02 inches in height.



## W10919352 Washing Machine Distributor Drawer Replacement Parts

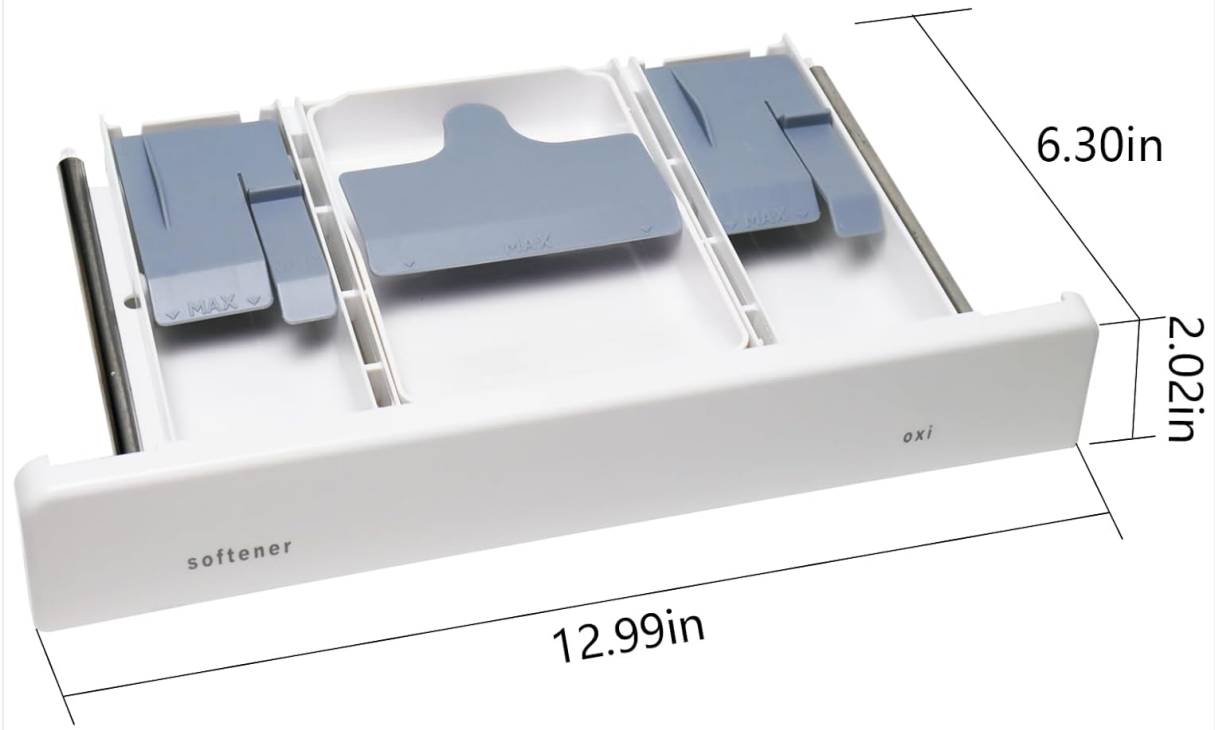 

**Figure 2:** Detailed dimensions of the W10919352 Washer Dispenser Drawer, showing its length, width, and height for accurate fitment.

### COMPATIBLE MODELS

The W10919352 Washer Dispenser Drawer is compatible with a range of Maytag and Whirlpool washing machine models. Please verify your washer's model number against the list below to ensure proper fit and function.

- MVWB755DW0
- MVWB755DW1
- MVWB765FW0
- MVWB766FW0
- MVWB855DW1
- MVWB835DW2
- MVWB855DC0
- MVWB855DC1
- MVWB855DC2
- MVWB855DW0
- MVWB855DW2
- 7MMVWB835EW1
- MVWB835DW3
- MVWB765FW1

- MVWB765FW2
- MVWB766FW1
- MVWB855DC3
- MVWB855DW3
- MVWB865GW0
- MVWB765FW3
- MVWB835DW4
- MVWB835DW1
- 7MMVWB835EW0
- MVWB757JW0
- MVWB765FC4
- MVWB766FW2
- MVWB835DW0
- MVWB835DW5
- MVWB865GW1



## W10919352 Washing Machine Distributor Drawer Replacement Parts

### Compatible models:

MVWB755DW0	MVWB755DW1	MVWB765FW0
MVWB766FW0	MVWB855DW1	MVWB835DW2
MVWB855DC0	MVWB855DC1	MVWB855DC2
MVWB855DW0	MVWB855DW2	7MMVWB835EW1
MVWB835DW3	MVWB765FW1	MVWB765FW2
MVWB766FW1	MVWB855DC3	MVWB855DW3
MVWB865GW0	MVWB765FW3	MVWB835DW4
MVWB835DW1	7MMVWB835EW0	MVWB757JW0
MVWB765FC4	MVWB766FW2	MVWB835DW0
MVWB835DW5	MVWB865GW1	

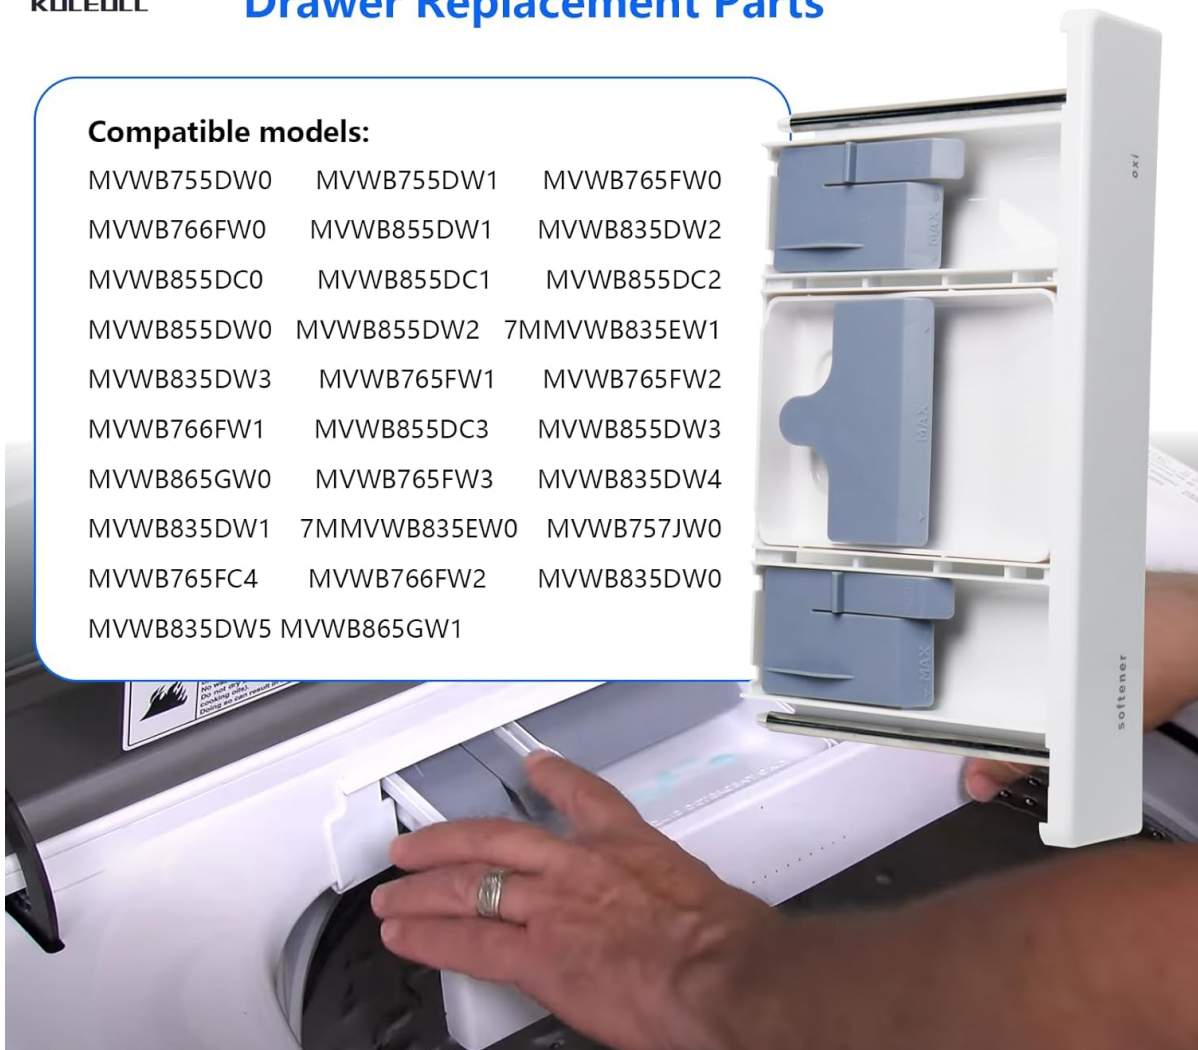 



Figure 3: Visual representation of the compatible Maytag washer models for the W10919352 dispenser drawer.

Replacing your washer's dispenser drawer is a straightforward process. Follow these steps carefully to ensure proper installation and functionality.

1. **Preparation:** Before beginning, ensure your washing machine is turned off and unplugged from the power outlet to prevent electrical hazards.
2. **Remove Old Drawer:** Gently pull the existing dispenser drawer out until it stops. Most drawers have a release tab or button, usually located in the center or on the side of the drawer, which needs to be pressed to fully remove it. Press this tab and pull the drawer completely out.
3. **Inspect Compartment:** Once the old drawer is removed, inspect the dispenser compartment within the washing machine for any residue, blockages, or damage. Clean if necessary.
4. **Insert New Drawer:** Align the new W10919352 dispenser drawer with the tracks in the washing machine's dispenser compartment. Gently push the drawer in until it clicks securely into place. Ensure it slides smoothly without resistance.
5. **Test Functionality:** Plug the washing machine back in and turn it on. Open and close the new dispenser drawer a few times to confirm it operates correctly.



## W10919352 Washing Machine Distributor Drawer Replacement Parts

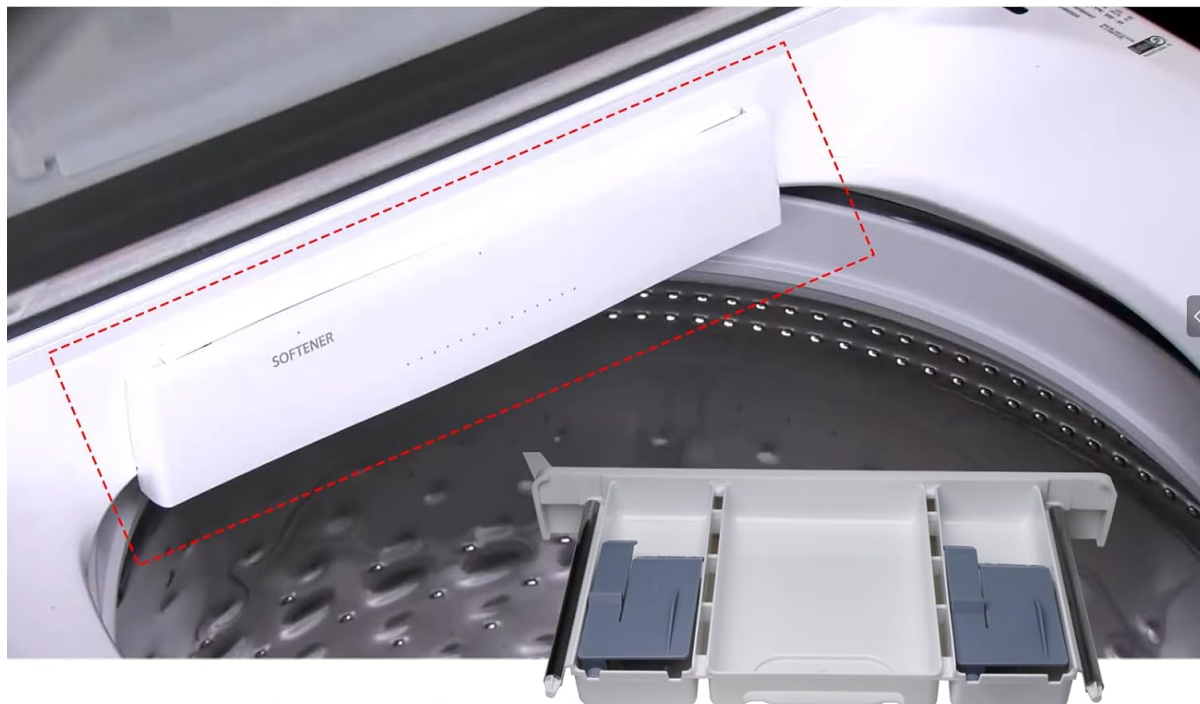 

W10919352 washing machine dispenser drawer is the outer shell of the dispenser drawer for a specific model of washing machine. This component is mainly used for storing and distributing detergents, softeners, and other laundry products

**Figure 4:** The W10919352 dispenser drawer positioned for insertion into the washing machine's dispenser housing.

Your browser does not support the video tag.

**Video 1:** A demonstration of the W10919352 Washer Dispenser Drawer, showing its components and how it slides in and out of the washing machine. This video can assist with installation and understanding the drawer's mechanism.

## OPERATING INSTRUCTIONS

---

The dispenser drawer is designed to hold and release various laundry additives at the appropriate times during a wash cycle. It typically features separate compartments for different types of products.

- **Detergent Compartment:** This is usually the largest compartment, intended for liquid or powder laundry detergent. Fill to the indicated "MAX" line.
- **Fabric Softener Compartment:** Marked "softener," this compartment is for liquid fabric softener. Do not overfill; adhere to the "MAX" line.
- **Oxi/Bleach Compartment:** Often labeled "oxi" or with a bleach symbol, this section is for oxygen-based boosters or liquid bleach. Fill carefully, observing the "MAX" line.

Always refer to your washing machine's main instruction manual for specific guidance on which products to use and their recommended fill levels for different wash cycles.

## MAINTENANCE

---

Regular cleaning of the dispenser drawer is essential to prevent residue buildup, mold, and mildew, which can affect dispensing performance and lead to unpleasant odors.

1. **Removal for Cleaning:** Pull the dispenser drawer out completely as described in the installation section.
2. **Disassembly:** The individual compartments (softener, oxi) and the main tray can often be separated for thorough cleaning. Gently lift or slide out the removable inserts.
3. **Cleaning:** Wash all parts of the dispenser drawer under warm running water. Use a soft brush or cloth and a mild detergent to remove any detergent or softener residue. Pay close attention to the corners and crevices. For stubborn buildup, a mixture of white vinegar and water can be effective.
4. **Rinse and Dry:** Rinse all components thoroughly to remove soap residue. Allow them to air dry completely before reassembling.
5. **Reassembly and Reinstallation:** Reassemble the individual compartments into the main drawer. Ensure all parts are correctly aligned. Slide the clean, dry dispenser drawer back into the washing machine until it locks into place.



## W10919352 Washing Machine Distributor Drawer Replacement Parts



Replaced W10601825 W10777533 W10794835 4455043  
AP6037331 PS11770104 EAP11770104

**Figure 5:** Two dispenser drawers, illustrating the assembled unit and the individual components when disassembled for cleaning.



## W10919352 Washing Machine Distributor Drawer Replacement Parts



When you accidentally throw away or damage the detergent dispenser, you can replace the discarded or damaged tray with a new one.



**Figure 6:** Detailed views of the W10919352 dispenser drawer, showing the underside and close-ups of the individual compartments and their sliding mechanisms, useful for maintenance and reassembly.

### TROUBLESHOOTING

If you encounter issues with your new dispenser drawer, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Drawer does not slide in smoothly.	Misalignment with tracks, debris in tracks, or slight manufacturing variance.	Ensure the drawer is perfectly aligned with the tracks. Check for and remove any obstructions in the tracks. Apply a small amount of food-grade silicone grease to the tracks if resistance persists.
Detergent/softener not dispensing.	Clogged compartments or siphon tubes, incorrect fill level, or issue with the washer's water inlet.	Remove and thoroughly clean all compartments and siphon caps. Ensure you are not overfilling the compartments. Consult your washing machine's manual for troubleshooting water inlet issues.

Problem	Possible Cause	Solution
Water left in dispenser after cycle.	Clogged siphon, improper installation, or low water pressure.	Clean the siphon cap and ensure it is correctly seated. Verify the drawer is fully inserted and locked. Check household water pressure.

## SPECIFICATIONS

---

**Part Number:** W10919352

**Manufacturer:** KOLEOLL

**Item Weight:** 14.9 ounces

**Actual Product Dimensions:** Approximately 12.99 inches (Length) x 6.30 inches (Width) x 2.02 inches (Height)

**Included Components:** 1PC Washer Dispenser Drawer

**Compatible Replacements:** W10601825, W10777533, W10794835, 4455043, AP6037331, PS11770104, EAP11770104

## WARRANTY INFORMATION

---

The manufacturer's specifications indicate that there is no explicit warranty description provided for this product. For any concerns regarding defects or performance, please contact the seller directly.

## CUSTOMER SUPPORT

---

For any questions regarding the suitability of this product for your washing machine, installation assistance, or other inquiries, please do not hesitate to contact KOLEOLL customer service. We are committed to providing excellent pre-sales and after-sales support to resolve any issues you may encounter.

You can typically find contact information for KOLEOLL through the retailer where you purchased the product or by visiting the official KOLEOLL store page online.