

RIENOK Rienok S11

RIENOK S11 Bluetooth Speaker User Manual

Model: Rienok S11 | Brand: RIENOK

1. INTRODUCTION

Thank you for choosing the RIENOK S11 Portable Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker to ensure optimal performance and longevity. The RIENOK S11 is a powerful, waterproof Bluetooth speaker featuring 3 EQ modes, USB audio support, Bluetooth 5.3 connectivity, up to 24 hours of playback, stereo pairing, RGB lighting, and TF card support.



Figure 1: RIENOK S11 Bluetooth Speaker

2. WHAT'S IN THE BOX

- RIENOK S11 Bluetooth Speaker
- Charging Cable
- Lanyard
- User Manual

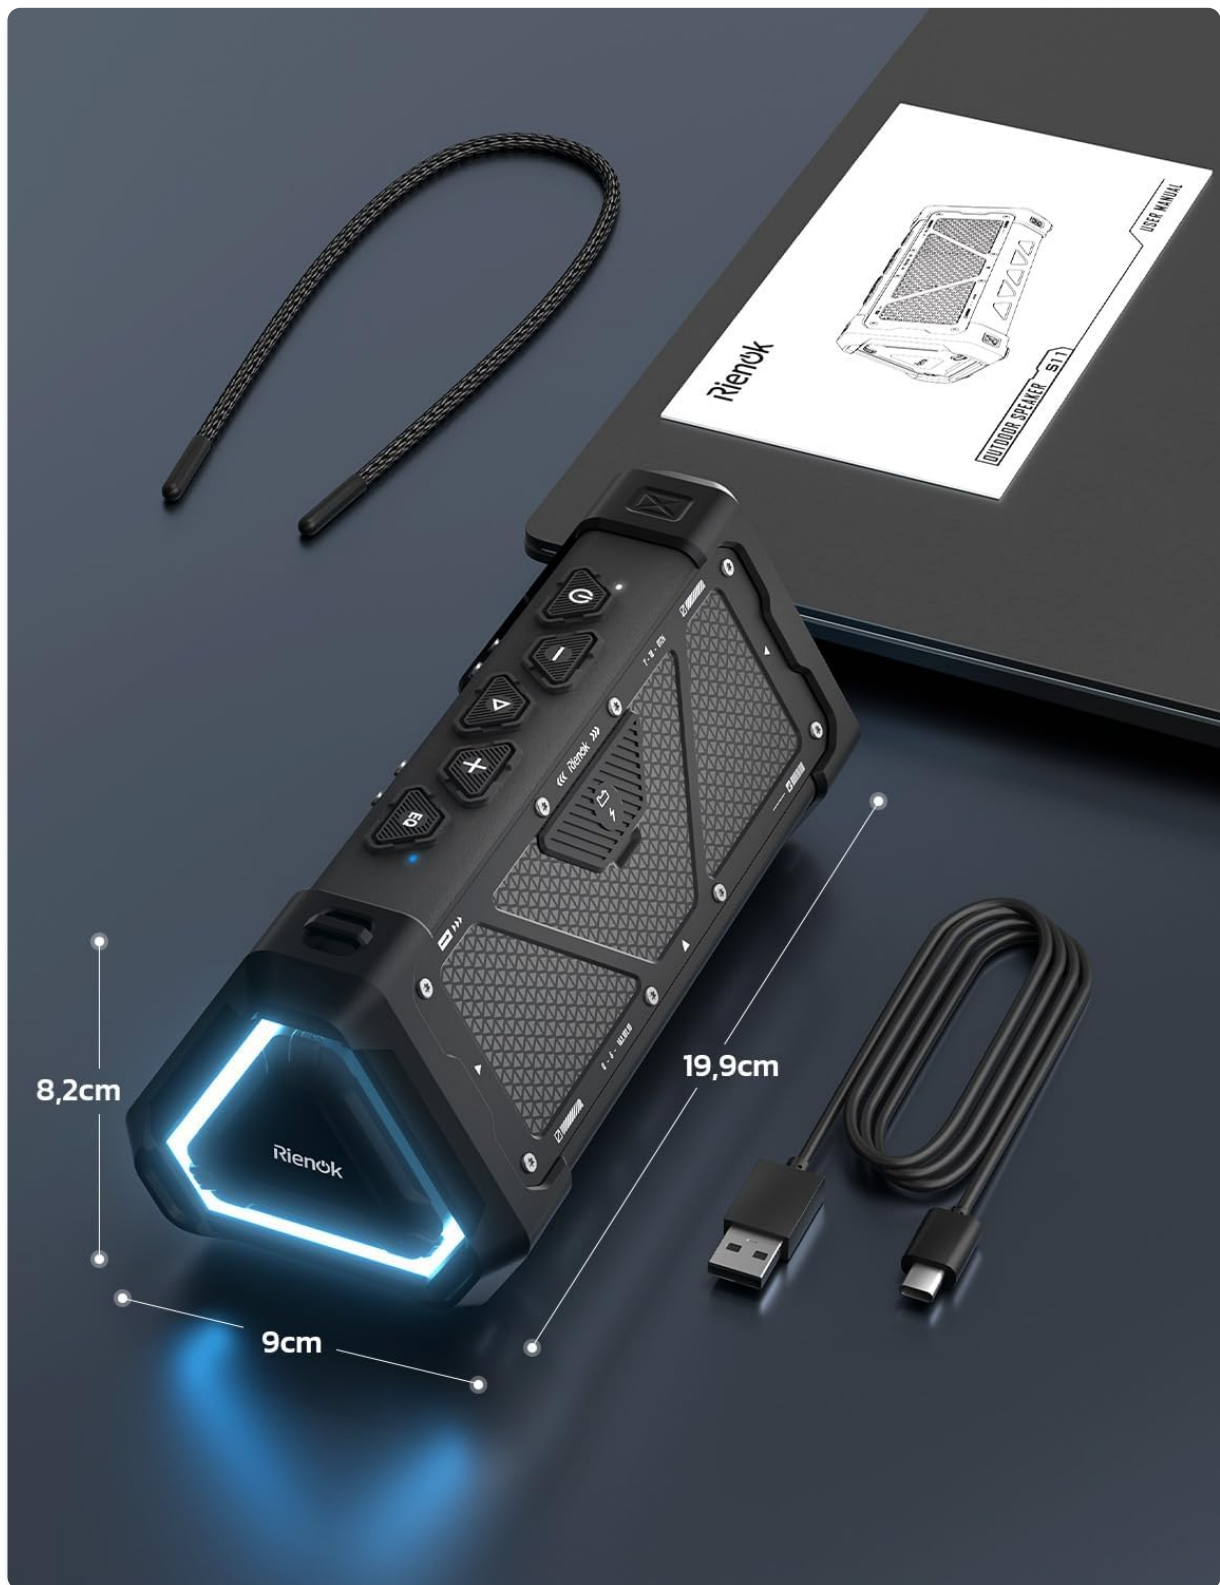


Figure 2: Package Contents including the speaker, charging cable, and lanyard.

3. KEY FEATURES

3.1 Powerful Bass Speaker

The 30W Bluetooth speaker is equipped with two bass radiators and a 3600mAh battery, providing 24 hours of powerful and mellow Hi-Fi sound and bass. Actual playback time may vary depending on light usage, volume level, and music type.

Sonido potente de 30 W

Ricos graves estéreo



Figure 3: Illustrates the powerful 30W sound and rich stereo bass of the speaker.

3.2 Multiple Connection Options

The speaker supports Bluetooth, USB audio, and TF card (up to 32GB in FAT/FAT32 format). Connect to a computer via the included USB cable for optimal sound purity in USB audio mode, replacing the traditional 3.5mm AUX connection.

3 Modos de Reproducción



Figure 4: Depicts the three available playback modes: Bluetooth, Micro SD card, and USB Audio.

3.3 Three EQ Modes

The RIENOK S11 features Vocal Mode, Music Mode, and Bass Mode. These three equalization modes allow you to easily select the appropriate mode based on music type or personal preference, providing a customized listening experience.

3 Modos de EQ



Vocal



Música



Bajo



Figure 5: Shows the speaker with icons representing Vocal, Music, and Bass EQ modes.

3.4 Stereo Pairing (TWS)

With two RIENOK S11 Bluetooth speakers, you can create a wireless stereo system for immersive surround sound (only with the same model). The RGB lights on both sides change with the melody, making the music dance with lights and colors. Double-click the play button to turn the light on or off.

VERDADERO SONIDO ESTÉREO INALÁMBRICO

Emparejado con 2 altavoces RIENOK S11 para un sonido superestéreo de 60 W



Figure 6: Two RIENOK S11 speakers set up for True Wireless Stereo sound with a tablet.

3.5 IPX7 Waterproof and Portable Design

This wireless speaker is IPX7 waterproof rated, meaning it can be submerged in up to 1 meter of water for 30 minutes. With its lanyard, it is ideal for outdoor activities such as the beach, pool, travel, and cycling.

IPX7 Impermeable

IPX7



Figure 7: The RIENOK S11 speaker submerged in water, highlighting its IPX7 waterproof capability.

Altavoz Portátil

Disfrute de la música en cualquier momento y lugar



Figure 8: The portable RIENOK S11 speaker attached to a backpack, ready for outdoor use.

4. SETUP GUIDE

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the included USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status. A full charge provides up to 24 hours of playback.

Hasta 24 horas de reproducción



Nota: El tiempo real varía según la luz, el volumen y el tipo de música



Figure 9: The speaker indicating up to 24 hours of playback time on a single charge.

4.2 Power On/Off

- To power on: Press and hold the Power button until you hear an audible prompt and the indicator lights illuminate.
- To power off: Press and hold the Power button again until the lights turn off.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing blue light).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.

3. Select "Rienok S11" from the list of devices.
4. Once connected, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.

4.4 USB Audio Connection

The RIENOK S11 supports USB audio playback, allowing for high-quality sound directly from your computer while also charging the speaker.

1. Connect the included USB cable to the speaker's USB port and to your computer's USB port.
2. The speaker will automatically switch to USB audio mode.
3. Adjust volume and playback from your computer or the speaker's controls.



Figure 10: The speaker connected to a laptop via USB, demonstrating high-quality audio output.

4.5 TF Card Playback

Insert a TF (Micro SD) card (up to 32GB, FAT/FAT32 format) into the designated slot on the speaker. The speaker will automatically detect and play music from the card. Supported formats include MP3, WMA, WAV, FLAC, and APE.

4.6 True Wireless Stereo (TWS) Pairing

To achieve a true stereo sound experience, you can pair two RIENOK S11 speakers together.

1. Ensure both RIENOK S11 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button (often combined with the Play/Pause button or a dedicated button, refer to button layout). The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear an audible confirmation.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 4.3. Both speakers will play audio in stereo.

Your browser does not support the video tag.

Video 1: Demonstrates the True Wireless Stereo pairing process and USB audio playback.

5. OPERATING INSTRUCTIONS

5.1 Button Functions

Button	Function
Power Button	Press and hold to Power On/Off.
"+" Button	Short press for Volume Up. Long press for Next Track.
"-" Button	Short press for Volume Down. Long press for Previous Track.
Play/Pause Button	Short press to Play/Pause. Double-click to turn RGB lights On/Off.
"EQ" Button	Short press to cycle through EQ Modes (Vocal, Music, Bass).

5.2 EQ Modes

The RIENOK S11 offers three distinct EQ modes to optimize your listening experience:

- **Vocal Mode:** Enhances vocal clarity, ideal for podcasts, audiobooks, or songs with prominent vocals.
- **Music Mode:** A balanced sound profile suitable for most music genres, offering clear highs and mids with decent bass.
- **Bass Mode:** Boosts low frequencies for a deeper, more impactful bass response, perfect for bass-heavy music.

Press the "EQ" button to switch between these modes.

5.3 RGB Lighting Control

The speaker features dynamic RGB lights that synchronize with the music. To turn the RGB lights on or off, double-click the Play/Pause button.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance (IPX7):** The speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure the charging port cover is securely closed before exposing the speaker to water. Do not intentionally submerge for extended periods or in depths greater than specified.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is in pairing mode. Turn device Bluetooth off/on. Move speaker closer to device (within 10m).
No sound.	Volume too low; incorrect input mode; device not playing.	Increase volume on speaker and device. Check if correct input (Bluetooth, USB, TF) is selected. Ensure music is playing on the connected device.
Distorted sound.	Volume too high; low battery; poor connection.	Lower volume. Charge speaker. Ensure stable Bluetooth connection or try USB/TF card.
TWS pairing fails.	Speakers already connected to another device; not the same model.	Disconnect speakers from any other Bluetooth devices. Ensure both are RIENOK S11 models. Try resetting both speakers.

8. SPECIFICATIONS

Model Number	Rienok S11
Brand	RIENOK
Speaker Output Power	30 Watts
Connectivity Technology	Bluetooth, USB
Bluetooth Version	5.3
Audio Output Mode	Stereo
Special Features	Stereo Pairing, Portable, USB Audio Mode, LED Light, Waterproof (IPX7)
Recommended Uses	For smartphones or tablets
Compatible Devices	Laptop, Tablet, Smartphone

Battery	3600mAh rechargeable battery
Dimensions	19.9 x 9 x 8.2 cm
Weight	660 g
Waterproof Rating	IPX7

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your RIENOK S11 speaker, please refer to the contact details provided on the product packaging or visit the official RIENOK website. Keep your purchase receipt for warranty claims.