

## Teka Li6 1481

# Teka Li6 1481 Front Loading Washing Machine User Manual

Model: Li6 1481 | Brand: Teka

## 1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential information for the safe and efficient operation of your Teka Li6 1481 Front Loading Washing Machine. Please read it thoroughly before installation, operation, or maintenance. Keep this manual for future reference.

### 1.1 General Safety Warnings

- Ensure the appliance is properly grounded before use.
- Do not allow children to play with or operate the washing machine.
- Unplug the appliance before any cleaning or maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.
- Do not install or store this appliance where it will be exposed to the weather or to freezing temperatures.

## 2. PRODUCT OVERVIEW

The Teka Li6 1481 is an integrated front-loading washing machine designed for efficient and thorough cleaning of your laundry. It features an Inverter motor, a digital display, and a variety of washing programs to suit different fabric types and soil levels.



**Figure 2.1:** Front view of the Teka Li6 1481 Washing Machine, showing the control panel, detergent drawer, and large front-loading door.

**TEKA**



**16 programas de lavado**  
Para diferentes tipos  
de ropa y manchas

**Panel de control Digital LED**  
Intuitivo y fácil de usar para  
seleccionar el programa de lavado

**Figure 2.2:** The washing machine highlighting its 16 washing programs for various fabric types and stains, and an intuitive LED digital control panel for easy program selection.

**TEKA**



### **Capacidad máxima 8 kg.**

Puede lavar una mayor cantidad de ropa en una sola carga

### **Más versátil**

Puede adaptarse a diferentes necesidades de lavado

**Figure 2.3:** The washing machine emphasizing its maximum capacity of 8 kg, allowing for larger loads in a single wash, and its versatile design adaptable to different washing needs.

## **3. INSTALLATION AND SETUP**

---

### **3.1 Unpacking**

Carefully remove all packaging materials. Ensure no parts are missing or damaged. Keep packaging materials out of reach of children.

### **3.2 Location and Leveling**

Place the washing machine on a firm, level surface. Adjust the height-adjustable feet to ensure the appliance is stable and level. This is crucial for proper operation and to minimize vibration.

TEKA




**Figure 3.1:** The Teka Li6 1481 washing machine seamlessly integrated into kitchen cabinetry, demonstrating its built-in design with the cabinet door closed.



**Figure 3.2:** The Teka Li6 1481 washing machine integrated into kitchen cabinetry, with the cabinet door open, revealing the appliance's front-loading door.

### 3.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink.
- Plug the power cord into a grounded electrical outlet (220-240V, 50Hz).
- Refer to the dimensions diagram for proper installation space planning.

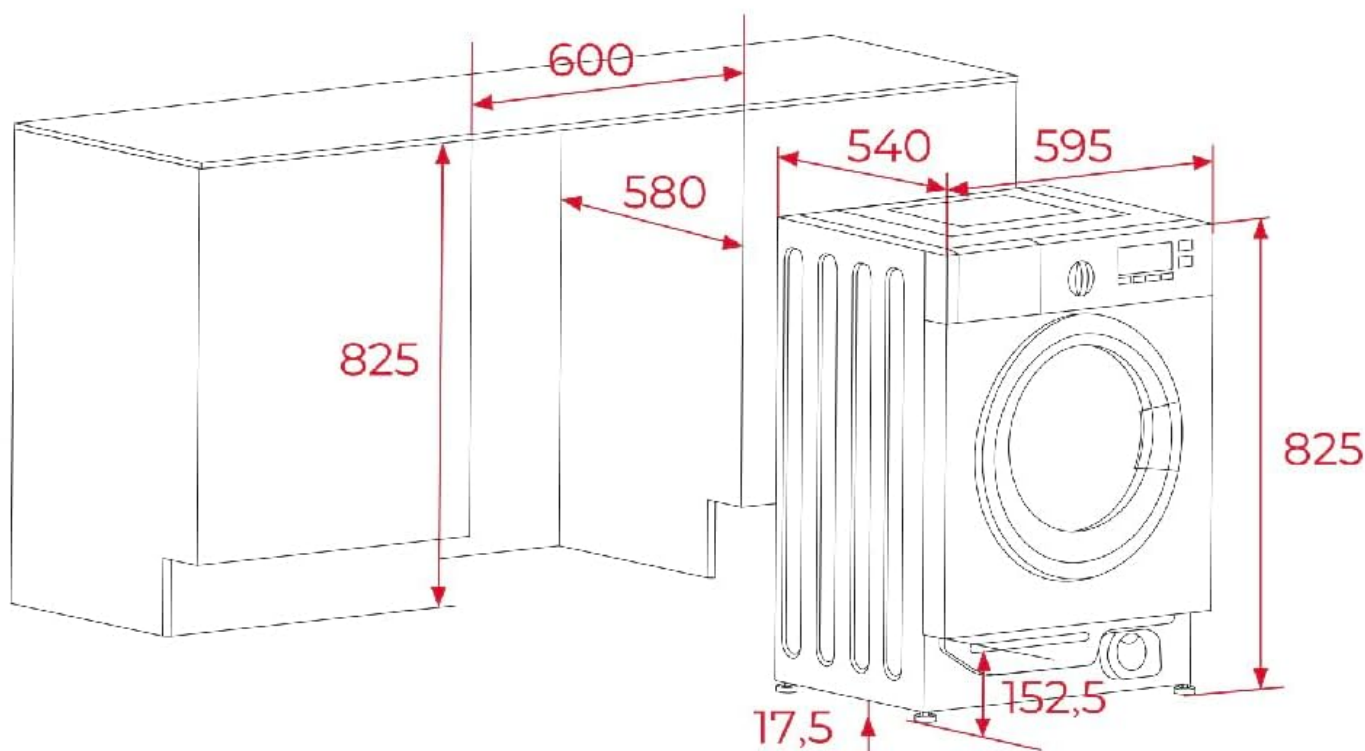

**Figure 3.3:** Detailed technical drawing illustrating the dimensions of the Teka Li6 1481 Washing Machine, including height, width, and depth, essential for proper installation planning.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Loading Laundry

Open the washing machine door and load laundry into the stainless steel drum (53 liters capacity). Do not overload the machine. Close the door firmly.

### 4.2 Adding Detergent

Add appropriate detergent and fabric softener to the dispenser drawer. Refer to detergent packaging for recommended amounts.

### 4.3 Program Selection

Turn the program selector knob to choose one of the 16 available washing programs:

- Intensive
- Cotton
- ECO 40-60
- 20°C

- Quick 45'
- Super Quick 15'
- Rinse and Spin
- BabyCare
- Sport
- Synthetics
- Mixed
- Delicate
- Wool
- Jeans
- Spin
- MyCycle (Customizable)

## 4.4 Function Options

Use the digital display and buttons to select additional functions:

- **Spin Speed:** Adjust the spin speed (max 1400 rpm).
- **Temperature:** Select the desired wash temperature.
- **Prewash:** Add a prewash cycle for heavily soiled items.
- **Extra Rinse:** Add an additional rinse cycle.
- **Delayed Start:** Program the wash to start after 1-24 hours.

## 4.5 Starting and Stopping

Press the Start/Pause button to begin the selected program. The digital display will show the remaining time, temperature, and selected speed. To pause a cycle, press the Start/Pause button again. To cancel a cycle, turn the machine off or select a new program.

# 5. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and extends the life of your washing machine.

## 5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.

## 5.2 Cleaning the Drum

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) regularly to clean the stainless steel drum and prevent odors.

## 5.3 Cleaning the Filter

The drain pump filter should be checked and cleaned periodically to remove lint and small objects. Refer to the diagram near the bottom front of the machine for filter access.

## 5.4 Exterior Cleaning



Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6. TROUBLESHOOTING

Before contacting service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is firmly closed; Select a program and press Start.
Excessive vibration	Machine not level; Transit bolts not removed; Overloaded drum.	Adjust feet to level; Remove transit bolts (if applicable); Redistribute laundry.
Water not draining	Drain hose kinked or blocked; Filter clogged.	Check and clear drain hose; Clean the drain pump filter.
Water leaks	Hose connections loose; Detergent drawer overflowing.	Tighten hose connections; Do not overfill detergent drawer.


## 7. SPECIFICATIONS

Detailed technical specifications for the Teka Li6 1481 Front Loading Washing Machine.

- Model:** Li6 1481
- Product Number:** 114000011
- Loading Type:** Front Load
- Installation Type:** Built-in
- Washing Capacity:** 8 kg
- Drum Volume:** 53 liters (Stainless Steel)
- Maximum Spin Speed:** 1400 rpm
- Spin Efficiency Class:** B
- Energy Consumption (per 100 cycles):** 47 kWh
- Water Consumption (per cycle):** 48 L
- Water Percentage after Spin:** 53.90%
- Power Supply:** 220-240V, 50Hz
- Maximum Rated Power:** 1950 W
- Glass Porthole Diameter:** 31 cm (internal), 44 cm (external)
- Dimensions (L x W x H):** 54 x 59.5 x 82.5 cm
- Weight:** 60 kg
- Features:** Inverter Motor, Digital Display, Child Safety Lock, Imbalance Control System, Automatic Water Consumption Regulation, Height-Adjustable Feet.

**TEKA****TOTAL Li6 1481**

Lavadora de integración con capacidad de 8 kg y motor Inverter

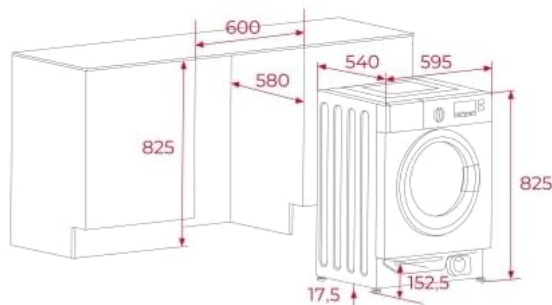Quick  
Cycle**REFERENCIA**

REF: 114000011

EAN: 8434778031584

**CARACTERÍSTICAS**

Lavadora integrable

Electrónica con display digital

Motor Inverter

16 programas de lavado

Programas: Intensivo, Algodón, ECO 40-60, 20°C, Rápido 45', Super rápido 15', Aclarado y centrifugado, BabyCare, Sport, Sintéticos, Mixto, Ropa delicada, Lana, Jeans, Centrifugado y MyCycle

Funciones: Velocidad centrifugado, temperatura, prelavado, aclarado extra

Programación diferida 1-24 horas

Gestión electrónica de lavado

Sistema de control de desequilibrios

Regulación automática del consumo de agua

Ojo de buey de cristal de 31 cm de diámetro

Bloqueo de seguridad para niños

Tambor de acero inoxidable (53 litros)

Patas regulables en altura

Indicadores: on-off, programa seleccionado, tiempo restante temperatura, velocidad seleccionada

Capacidad: 8 kg

Selector centrifugado 1.400 ~ 600 rpm

**DIMENSIONES****Altura del producto (mm):****Anchura del producto (mm):****Profundidad del producto (mm):****Longitud del producto (mm):****Peso neto (kg):****ESPECIFICACIONES TÉCNICAS**

Clase de eficiencia energética (UE 2019/2016): -

Clase de rendimiento de lavado: N/A

Clase de eficiencia de giro: B

Consumo de agua (litros/año): 48 L/cycle

Nivel de ruido (dBA): + 72

Tasa de potencia (V): 220-240

Frecuencia (Hz): 50

**COLORES**

114000011

Blanco

**Figure 7.1:** Official specifications sheet for the Teka Li6 1481 Washing Machine, detailing its features, dimensions, and performance metrics.

## 8. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the official Teka website or contact your local authorized service center. Keep your purchase receipt as proof of purchase.

- **Manufacturer:** Teka
- **Model Number:** 114000011
- **ASIN:** B0DCNRSMHG
- **Date of Listing on Amazon.com.be:** July 23, 2024

For technical assistance or spare parts availability, please contact Teka customer service. Information on spare parts availability is currently unavailable through general product listings.