

Trixie 36-247

Trixie Wooden Silicone Baby Camera - Mr. Lion

USER MANUAL

1. Introduction

Welcome to the user manual for your Trixie Wooden Silicone Baby Camera - Mr. Lion. This delightful toy is designed to encourage imaginative play and develop fine motor skills in babies. Its lightweight design, rounded edges, and easy-to-grab handle make it perfect for little hands. Featuring soft silicone buttons and a spinning animal disc, this camera allows your baby to practice hand-eye coordination while pretending to snap photos.

2. Safety Information

Please read this safety information carefully before allowing your child to play with the camera. Keep this manual for future reference.

- **Adult Supervision:** Always ensure adult supervision during play to prevent accidents.
- **Material Safety:** The camera is made from natural wood and soft silicone, designed to be safe for babies. All edges are rounded to prevent injury.
- **Choking Hazard:** This toy does not contain small parts that can be easily detached. However, regularly inspect the toy for any loose or broken parts. Discontinue use if any damage is found.
- **Cleaning:** Refer to the "Maintenance" section for proper cleaning instructions to ensure hygiene and product longevity.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.

3. Product Overview



Figure 3.1: Front view of the Trixie Wooden Silicone Baby Camera, highlighting its wooden frame, yellow silicone casing, and interactive elements.



Figure 3.2: The Trixie Baby Camera in use, demonstrating its size and appeal for infant interaction.

3.1 Components

The Trixie Wooden Silicone Baby Camera includes the following:

- Camera Body & Accessories (as packaged)

3.2 Key Features

This baby camera toy is designed with several features to enhance your child's play experience:

- **Easy to Grasp:** Ergonomically designed handle for small hands.
- **Soft Material:** Made with soft silicone, safe for chewing and gentle on touch.
- **Push Buttons:** Three interactive silicone buttons for tactile exploration.
- **Soft Edge to Chew On:** The silicone casing provides a safe and soothing surface for teething babies.
- **Spinning Animal Disc:** Features a Mr. Lion design that spins, engaging visual and fine motor skills.

4. Setup

The Trixie Wooden Silicone Baby Camera is a simple toy and requires minimal setup. It does not require batteries for its primary functions as it is a pretend play item.

Unpacking: Carefully remove the camera from its packaging. Inspect the toy for any signs of damage before first use.

5. Operating the Baby Camera

This camera is a toy designed for imaginative play and does not capture actual photos or videos. Its operation focuses on sensory and motor skill development.

- **Pretend Photography:** Encourage your child to hold the camera and press the silicone buttons as if taking a picture. This helps develop fine motor skills and hand-eye coordination.
- **Spinning Disc:** Guide your child to spin the Mr. Lion disc. This action provides visual stimulation and further enhances motor skills.
- **Teething Relief:** The soft silicone edges are safe for babies to chew on, providing comfort during teething phases.
- **Sensory Exploration:** The combination of smooth wood and soft silicone textures offers a rich sensory experience.

6. Maintenance

Proper care will ensure the longevity and hygiene of your Trixie Wooden Silicone Baby Camera.

- **Cleaning:** Wipe the camera clean with a damp cloth and mild soap. Do not immerse in water. Air dry thoroughly before storing or allowing play. Avoid harsh chemicals or abrasive cleaners.
- **Disinfection:** For deeper cleaning, use a baby-safe disinfectant wipe.
- **Storage:** Store in a cool, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to moisture or direct sunlight may damage the wood.
- **Inspection:** Regularly inspect the camera for any signs of wear, cracks, or damage, especially to the wooden parts and silicone. Discontinue use if damaged.

7. Troubleshooting

As a simple toy, the Trixie Wooden Silicone Baby Camera has minimal components that can malfunction. Most issues can be resolved with simple checks.

Problem	Possible Cause	Solution
Buttons are stiff or not pressing easily.	Accumulation of dirt or debris around the buttons.	Clean the area around the buttons with a damp cloth. Ensure no foreign objects are lodged.
Spinning disc is not rotating smoothly.	Debris caught in the mechanism or general wear.	Inspect the disc for any obstructions. Clean the area. If the issue persists, the toy may be worn.
Toy appears damaged (e.g., cracks in wood, torn silicone).	Physical impact or prolonged exposure to unsuitable conditions.	Discontinue use immediately to prevent injury. Contact the manufacturer for potential replacement options.

8. Specifications

Brand	Trixie
Model Name	36-247
Model Number	36-247
Manufacturer	Mellis BV
Materials	Wood, Silicone
Color	Yellow
Item Weight	0.31 Kilograms
Batteries Required	No
Water Resistance Level	Not Water Resistant
Special Feature	Baby-Friendly Design with Soft Buttons and Spinning Disc
Specific Uses	Toy, Educational

9. Warranty and Support

For information regarding warranty coverage, returns, or product support, please refer to the documentation provided at the time of purchase or contact the manufacturer directly.

Manufacturer: Mellis BV

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question