

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Smart 2K Outdoor Battery Security Camera User Manual

Energizer EOB1-1002-WHT

Energizer Smart 2K Outdoor Battery Security Camera

USER MANUAL

1. Introduction

Thank you for choosing the Energizer Smart 2K Outdoor Battery Security Camera. This wireless, rechargeable camera is designed to provide high-resolution 2K video surveillance for both indoor and outdoor environments. Featuring two-way audio, night vision, and motion alerts, it offers comprehensive monitoring and peace of mind. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new security camera.



Figure 1.1: Energizer Smart 2K Outdoor Battery Security Camera and Packaging

2. What's in the Box

- Energizer Smart 2K Outdoor Battery Security Camera
- Camera Mount
- Mounting Screws and Wall Anchors
- USB Charging Cable
- Quick Start Guide

3. Setup

3.1 Initial Charging

Before first use, fully charge the camera's built-in 5200mAh rechargeable battery. Connect the provided USB charging cable to the camera's charging port and a standard USB power adapter (not included). The charging indicator light will illuminate during charging and turn off when fully charged.



Figure 3.1: Camera Charging Port and Indicators

3.2 App Download and Account Creation

Download the Energizer Connect app from your smartphone's app store (iOS or Android). Follow the in-app instructions to create an account and log in.

3.3 Wi-Fi Connection

The camera connects directly to your 2.4GHz Wi-Fi network, eliminating the need for a separate hub. Open the Energizer Connect app, select 'Add Device', and follow the on-screen prompts to connect your camera to your home Wi-Fi network. Ensure your Wi-Fi signal is strong at the camera's intended location.

3.4 Mounting the Camera

The camera comes with a camera mount for easy installation. Choose a location that provides the desired viewing angle and is within range of your Wi-Fi signal. Use the included screws and wall anchors to securely attach the mount to a wall or other stable surface. The camera can be adjusted on the mount to optimize its field of view.

Cloud Storage*

Free 30 Day Trial

Record Video & Audio

With a microSD Card (not included, max 128GB)



*Battery may drain quicker when using cloud storage

Figure 3.2: Mounted Camera Demonstrating Weather Resistance

4. Operation

4.1 Live View and Remote Access

Access live video feed from your camera anytime, anywhere using the Energizer Connect app on your smartphone or tablet. The camera provides clear 2K Quad HD resolution for detailed viewing.

REMOTE ACCESS

View Your Camera From
Anywhere in 2K Quad HD



Figure 4.1: Remote Access and App Interface

4.2 Two-Way Audio

Utilize the built-in microphone and speaker for two-way communication. Speak through the app to visitors or deter unwanted guests directly from your device.

4.3 Motion Detection and Alerts

The camera features advanced PIR motion detection. When motion is detected, you will receive instant alerts on your smartphone, allowing you to respond promptly to any activity.

Enjoy Peace Of Mind With Instant Motion Alerts via PIR



Figure 4.2: Key Features: Motion Alerts, Night Vision, Two-Way Audio

4.4 Night Vision

Integrated night vision provides clear video monitoring even in complete darkness, ensuring 24/7 surveillance of your property.

4.5 Recording Options

The camera supports local storage via a microSD card (up to 128GB, not included) for convenient and secure access to your video history. Additionally, a free 30-day trial for cloud storage is available, providing an alternative for saving recorded footage.



Figure 4.3: MicroSD Card and Cloud Storage Options

5. Maintenance

5.1 Battery Management

The 5200mAh rechargeable battery offers long-lasting performance. Battery life can vary based on usage, motion detection frequency, and environmental factors. Recharge the camera when the battery level is low, typically every 4 weeks depending on activity. The battery is designed to withstand various weather conditions.

5.2 Cleaning the Camera

To ensure optimal performance, periodically clean the camera lens and body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the camera's surface or lens.

5.3 Weather Resistance

The camera has an IP65 weather-resistant rating, making it suitable for outdoor use. While it can withstand rain and dust, avoid submerging the camera in water or exposing it to extreme weather conditions beyond its rating.

6. Troubleshooting

6.1 Common Issues and Solutions

- **Camera not connecting to Wi-Fi:** Ensure your Wi-Fi network is 2.4GHz. Check Wi-Fi signal strength at the camera's location. Restart your router and the camera.
- **Short battery life:** Reduce motion detection sensitivity or frequency. Ensure the camera is fully charged. Extreme cold weather can temporarily affect battery performance.
- **Foggy picture in cold weather:** Condensation can occur in certain cold and humid conditions. Allow the camera to acclimate to the temperature or wipe the lens if condensation is visible.
- **No motion alerts:** Check app notification settings. Ensure motion detection is enabled in the app. Verify camera is online.
- **Unable to view live feed:** Check your internet connection. Ensure the camera is online in the app.

6.2 Resetting the Device

If the camera is unresponsive or experiencing persistent issues, you may need to perform a factory reset. Locate the reset button (often a small pinhole) on the camera. Use a small tool (like a paperclip or the included reset tool, if applicable) to press and hold the reset button for approximately 5-10 seconds until the indicator light changes, signaling a reset. After resetting, you will need to re-pair the camera with the Energizer Connect app.

7. Specifications

Feature	Specification
Model Name	Energizer Smart 2K Battery Outdoor Security Camera
Model Number	EOB1-1002-WHT
Video Capture Resolution	2K Quad HD
Connectivity Technology	Wireless (Wi-Fi 2.4GHz)
Power Source	Battery Powered (5200mAh)
Indoor/Outdoor Usage	Outdoor, Indoor
Special Features	Local Recording, HD Resolution, 2-Way Audio, Night Vision, Motion Sensor
Storage Options	MicroSD Card (up to 128GB), Cloud Storage
Dimensions (L x W x H)	4.75 x 2.9 x 5.8 inches
Item Weight	14.4 ounces
Weather Resistance	IP65

8. Warranty and Support

8.1 Return Policy

This product is subject to a 30-day return policy from the date of purchase. Please refer to your retailer's specific return guidelines for details.

8.2 Technical Support

For any technical assistance, setup questions, or troubleshooting not covered in this manual, please contact Energizer's USA-based customer service team. Live technical support is available to help you with your product.

For the most up-to-date contact information, please visit the official Energizer Connect website or refer to the contact details provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question