

Apera PX-680BT

Apera KNSTAR PX-680BT Music Set User Manual

Model: PX-680BT

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Apera KNSTAR PX-680BT Music Set. This versatile device combines a cassette player, FM radio, USB/SD MP3 player, and Bluetooth speaker functionality. Please read this manual thoroughly before using the product to ensure proper operation and to maximize its lifespan.

The Apera KNSTAR PX-680BT is designed for portability and ease of use, offering multiple audio playback options in a compact unit.

SETUP

Powering the Device

The PX-680BT can be powered by two methods:

1. **AC Power:** Connect the included AC power cord to the AC input jack on the unit and then to a standard wall socket (120V).
2. **DC Battery Power:** For portable use, insert 4 x D-size batteries (not included) into the battery compartment located on the back of the unit. Ensure correct polarity (+/-) when inserting batteries.



Image: The Apera KNSTAR PX-680BT demonstrating its two power options: AC power via a wall socket and DC power using 4 D-size batteries in the rear compartment.

OPERATING INSTRUCTIONS

Cassette Player Operation

1. **Loading a Cassette:** Press the "PUSH" button on the cassette door to open it. Insert a cassette tape with the open edge facing upwards. Close the cassette door firmly.
2. **Playback:** Press the **PLAY** button to start playback.
3. **Fast Forward/Rewind:** Use the **FF (Fast Forward)** and **REW (Rewind)** buttons to navigate through the tape.
4. **Stop:** Press the **STOP/EJECT** button to stop playback. Pressing it again will eject the cassette.
5. **Pause:** Press the **PAUSE** button to temporarily stop playback. Press again to resume.
6. **Recording:** To record, ensure a blank or recordable cassette is inserted. Press the **REC (Record)** button. The unit will automatically start recording from the built-in microphone or selected input. Press **STOP/EJECT** to end recording.



Image: The Apera KNSTAR PX-680BT with its cassette compartment open, illustrating how to insert a cassette tape.

FM Radio Operation

1. **Select Mode:** Set the function switch to "RADIO" and select the desired band (FM, AM, SW) using the band selector.
2. **Tune:** Rotate the "TUNING" knob to scan for radio stations. The frequency display will indicate the current station.
3. **Antenna:** Extend the telescopic antenna for optimal FM and SW reception. For AM reception, rotate the unit for best signal.

Excellent AM FM SW Reception

Long antenna to get strong signal



Image: The Apera KNSTAR PX-680BT with its telescopic antenna extended, demonstrating its capability for strong AM, FM, and SW radio reception.

USB/SD MP3 Player Operation

1. **Insert Media:** Insert a USB drive into the USB port or an SD card into the SD card slot.
2. **Select Mode:** Set the function switch to "USB/SD" or similar. The unit should automatically detect and begin playing MP3 files.
3. **Controls:** Use the playback controls (Play/Pause, Next, Previous) to manage your music.

Bluetooth Speaker Operation

1. **Enable Bluetooth:** Set the function switch to "Bluetooth" mode. The unit will enter pairing mode, indicated by a flashing light or audio prompt.
2. **Pairing:** On your mobile device, enable Bluetooth and search for available devices. Select "PX-680BT" (or similar name) from the list to pair.
3. **Playback:** Once paired, you can play audio from your mobile device, and it will stream wirelessly to the PX-680BT.

One Step Pairing Bluetooth

Freely enjoy music with Bluetooth, USB Drive, TF Card



USB DRIVE



TF Card



Image: The Apera KNSTAR PX-680BT demonstrating its Bluetooth connectivity, wirelessly streaming music from a smartphone.



Image: A detailed front view of the Apera KNSTAR PX-680BT, highlighting the cassette player, radio tuner, and various control buttons.

MAINTENANCE

General Cleaning

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid spraying liquids directly onto the unit.

Cassette Player Maintenance and Adjustment

Periodically clean the cassette head, pinch roller, and capstan with a cotton swab lightly dampened with isopropyl alcohol. This helps maintain optimal sound quality and prevents tape damage.

The playback speed of the cassette player can be adjusted. On the back of the unit, there is an adjustment screw accessible with a Phillips screwdriver. This allows for fine-tuning of the tape speed if needed.

Exercise caution when making adjustments.

Battery Replacement

If using DC power, replace all D-size batteries when the unit's performance degrades or when the power indicator light dims. Ensure the unit is turned off before opening the battery compartment.

TROUBLESHOOTING

- **No Power:**
 - Ensure the AC power cord is securely plugged into both the unit and the wall outlet.
 - If using batteries, check that they are inserted correctly with the proper polarity and are not depleted. Replace if necessary.
- **No Sound:**

- Check the volume level.
 - Ensure the correct function mode (Cassette, Radio, USB/SD, Bluetooth) is selected.
 - For radio, extend the antenna and tune properly.
 - For Bluetooth, ensure the device is paired and connected.
- **Poor Radio Reception:**
 - Fully extend the telescopic antenna.
 - Rotate the unit to find the best signal, especially for AM bands.
 - Move away from sources of interference (e.g., computers, TVs, other electronic devices).
- **Cassette Playback Issues:**
 - Ensure the cassette tape is inserted correctly and is not damaged.
 - Clean the cassette head, pinch roller, and capstan if sound quality is poor or tape is sticking.
- **Bluetooth Pairing Failure:**
 - Ensure the PX-680BT is in Bluetooth pairing mode.
 - Make sure your mobile device's Bluetooth is enabled and within range.
 - Try unpairing and re-pairing the device.
 - Ensure no other devices are currently connected to the PX-680BT.

SPECIFICATIONS

Model	PX-680BT
Brand	Apera
Connectivity Technology	Auxiliary, Bluetooth
Special Features	Built-In Flashlight, Built-in FM Antenna, Portable
Power Source	Corded Electric (AC), 4 x D-size batteries (DC)
Radio Bands Supported	FM, AM, SW (3-Band)
Tuner Technology	FM
Item Dimensions (L x W x H)	25 cm x 9.5 cm x 12 cm
Weight	Approximately 1.2 kg
Included Components	Quick Start Guide, AC Power Cord

Portable Cassette Player Bluetooth Radio



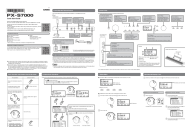
Image: The Apera KNSTAR PX-680BT displaying its physical dimensions (250mm L x 98mm W x 133mm H) and weight (1.2 kg).

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.


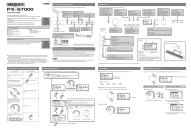



© 2024 Apera. All rights reserved.

Related Documents - PX-680BT



[Casio PX-S7000 Digital Piano Quick Start Guide](#)

Concise guide to setting up and operating the Casio PX-S7000 Digital Piano, covering connections, basic functions, sound selection, features, recording, and system settings.

	<p>Majorcom PX-6120 6x6 Zone Matrix Amplifier User Manual with MP3/FM/Bluetooth</p> <p>Detailed user manual for the Majorcom PX-6120 6x6 Zone Matrix Amplifier. Learn about its features, including MP3/FM/Bluetooth playback, 6x120W outputs, zone control, safety instructions, connection guides, and technical specifications for professional audio installations.</p>
	<p>Casio PX-S7000 Digital Piano Quick Start Guide</p> <p>Quick start guide for the Casio PX-S7000 digital piano, covering setup, basic operations, sound selection, recording, and specifications. Learn how to connect devices, use the touch ring, and explore sound modes.</p>
	<p>EPSON</p> <p>EPSON PX-7550S, PX-7500N, PX-7550, PX-9550S, PX-9500N, PX-9550</p>
	<p>Casio PX-S1000 Digital Piano User's Guide: Features, Operation, and Specifications</p> <p>Explore the Casio PX-S1000 digital piano with this comprehensive user's guide. Learn about its tones, functions, recording capabilities, smart device connectivity, and detailed specifications for optimal use.</p>
	<p>Lenovo ThinkShield Secure Wipe: Securely Erase Drives on ThinkStation and ThinkPad</p> <p>Comprehensive guide to using Lenovo's ThinkShield Secure Wipe feature on ThinkStation and ThinkPad workstations and laptops. Learn how to prepare drives, set BIOS configurations, and perform secure data erasure for SATA and M.2 drives.</p>