

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Aquasonic](#) /

> [AquaSonic Icon Water Flosser Instruction Manual \(Model FLOS ICON\)](#)

Aquasonic FLOS ICON

AquaSonic Icon Water Flosser Instruction Manual

Model: FLOS ICON

INTRODUCTION

The AquaSonic Icon Water Flosser is a cordless, rechargeable oral irrigator designed for superior and gentle dental cleaning. It utilizes an ultra-fine water jet to effectively clean between teeth and along the gumline, promoting a fresher, healthier smile. This manual provides essential information for the safe and effective use of your device.

SAFETY INFORMATION

Please read all instructions before using this appliance. When using electrical products, especially when children are present, basic safety precautions should always be followed.

- **CAUTION:** Keep away from water. Do not use while charging.
- Do not use if damaged.
- Do not use with certain medical conditions. Consult your dentist or physician if you have concerns.
- Keep out of reach of children.
- Do not direct water under the tongue, into the ear, nose, or other delicate areas.

PACKAGE CONTENTS

- 1 x AquaSonic Icon Water Flosser
- 1 x Jet Tip
- 1 x Charge Cord (USB)

SETUP

1. Charging the Device

Before first use, fully charge the AquaSonic Icon Water Flosser. Connect the provided USB charge cord to the charging port located at the bottom of the device. A full charge typically takes 2-3 hours and provides a long-lasting battery life.

2. Attaching the Jet Tip

Insert the jet tip into the opening at the top of the flosser handle until it clicks securely into place. The tip is rotatable for easy access to all areas of the mouth.

3. Filling the Water Tank

Open the easy-access tank door located at the bottom of the device. Fill the removable tank with lukewarm water. For an enhanced cleaning experience, you may add a small amount of mouthwash to the water. Close the tank door securely.



Image: The AquaSonic Icon Water Flosser highlighting its easy-to-use features, including the removable tank for cleaning and the charging port. The tank door is visible for quick filling.

OPERATING INSTRUCTIONS

1. Powering On and Selecting Mode

Press the On/Off button to power on the device. Use the Mode button to cycle through the 3 flossing modes: Normal (standard cleaning), Soft (gentle mode for sensitive teeth and gums), and Pulse (massages gums). Select the mode that best suits your comfort and cleaning needs.

3 Custom Flossing Modes

normal
standard cleaning mode

soft
gentle mode for sensitive teeth & gums

pulse
massages gums

Safe to use on braces, bridges, and other dental work



Image: Close-up of the AquaSonic Icon Water Flosser's control panel, displaying the On/Off button, Mode button, and indicators for Normal, Soft, and Pulse flossing modes.

2. Flossing Technique

Lean over a sink and place the jet tip into your mouth. Close your lips slightly to prevent splashing, but allow water to flow from your mouth into the sink. Point the tip towards your gumline at a 90-degree angle. Move the tip slowly along the gumline, pausing briefly between teeth. Ensure the water jet cleans both the outside and inside surfaces of your teeth.

Ultimate Deep Clean

**Cleans faster
and better than
string floss**

**Ultra-fine jet
stream cleans
hard-to-reach
areas**



Improves gum health and freshens breath

Image: A woman demonstrating the use of the AquaSonic Icon Water Flosser, showing the proper technique for directing the ultra-fine jet stream towards the teeth and gumline for deep cleaning.

3. Post-Flossing

After flossing, turn off the device. Empty any remaining water from the tank and rinse it thoroughly. It is recommended to leave the tank open to air dry to prevent moisture buildup.

Video: An official product video from Pure Daily Care demonstrating the AquaSonic Icon Water Flosser in use, showcasing its features and effectiveness in oral hygiene.

CLEANING AND MAINTENANCE

To ensure the longevity and hygiene of your AquaSonic Icon Water Flosser, follow these cleaning and maintenance steps:

- **Daily Cleaning:** After each use, empty the water tank and rinse it with clean water. Leave the tank door open to allow it to air dry completely.
- **Tip Cleaning:** Remove the jet tip and rinse it under running water. Replace tips every 3-6 months, or sooner if they show signs of wear.
- **Exterior Cleaning:** Wipe the exterior of the device with a soft, damp cloth. Do not immerse the main unit in water.

TROUBLESHOOTING

If you encounter any issues with your AquaSonic Icon Water Flosser, please refer to the following common solutions:

- **No Water Flow:** Ensure the water tank is filled and securely attached. Check if the jet tip is properly inserted.
- **Weak Water Pressure:** Fully charge the device. Ensure the water tank is adequately filled.
- **Device Not Turning On:** Confirm the device is fully charged. If the issue persists, contact customer support.
- **Leaking:** Ensure all parts, especially the water tank door and jet tip, are securely closed and properly seated.

SPECIFICATIONS

Model Number	FLOS ICON
Power Source	Battery Powered (Rechargeable Lithium-ion)
Flossing Modes	3 (Normal, Soft, Pulse)
Special Feature	Rotatable Tip, Waterproof
Included Accessories	1 Jet Tip, 1 Charge Cord
Dimensions	10.08 x 5.47 x 3.62 inches
Weight	15.2 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact AquaSonic customer service directly. Keep your purchase receipt for any warranty claims.