



Manuals.plus /

› Shark /

› Shark VACMOP Cordless Hard Floor Vacuum Mop VM180 User Manual

Shark VM180

Shark VACMOP Cordless Hard Floor Vacuum Mop VM180 User Manual

Model: VM180

INTRODUCTION

Welcome to the Shark VACMOP Cordless Hard Floor Vacuum Mop VM180 user manual. This document provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your new Shark VACMOP. Designed for hard floors, the Shark VACMOP combines powerful suction with spray mopping capabilities, offering a convenient solution for daily cleaning. Please read this manual thoroughly before operating the appliance and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

- Read all instructions before using your VACMOP.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle charger or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without VACMOP pads in place.
- Always turn off this appliance before connecting or disconnecting charger.
- Store the appliance indoors.
- Use only Shark VACMOP cleaning solution.

PACKAGE CONTENTS

Your Shark VACMOP VM180 package includes the following components:

- Shark VACMOP Cordless Hard Floor Vacuum Mop Unit
- 2 Disposable VACMOP Pads
- 12 oz. Bottle of VACMOP Multi-Surface Hard Floor Cleaner
- Charging Adapter



Figure 1: The Shark VACMOP VM180 unit, including the main body, handle, cleaning solution, and disposable VACMOP pads.

SETUP

1. Assembly

1. Insert the handle into the main body of the VACMOP until it clicks securely into place.

2. Ensure all connections are firm before use.

2. Charging the Battery

- Before first use, fully charge the VACMOP.
- Connect the charging adapter to the charging port on the VACMOP unit.
- Plug the adapter into a standard electrical outlet. The indicator light will show charging status.
- A full charge typically takes approximately 3.5 hours.

3. Filling the Solution Tank

1. Locate the solution tank cap on the top of the VACMOP unit.
2. Open the cap and carefully pour Shark VACMOP Multi-Surface Hard Floor Cleaner into the tank. Do not overfill.
3. Close the cap securely to prevent leaks.



Specifically formulated
Only VACMOP® cleaning solution can give you a complete clean.

Figure 2: Demonstrates the process of filling the solution tank with Shark VACMOP cleaning solution.

4. Attaching a Disposable VACMOP Pad

1. Place a fresh disposable VACMOP pad on the floor with the dirt chamber facing up.
2. Align the VACMOP head over the pad and press down firmly until the pad clicks into place.
3. Ensure the pad is securely attached before operation.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button located on the handle to turn the VACMOP on or off.

2. Vacuuming Dry Debris

To vacuum dry debris, simply turn on the VACMOP and glide it over the floor. The powerful suction will draw dirt and debris into the disposable pad's dirt chamber.



Lock away debris.
Powerful suction picks up and captures debris.

Figure 3: The Shark VACMOP effectively picking up and locking away dry debris within its disposable pad.

3. Spray Mopping Wet Messes

To mop, press and hold the spray button on the handle to dispense cleaning solution onto the floor. Move the VACMOP over the wet area to scrub and clean.



Spray mop

Tackle even the toughest messes with ease.

Figure 4: The Shark VACMOP dispensing cleaning solution to tackle wet messes on hard floors.

4. Combined Vacuum and Mop Functionality

The Shark VACMOP is designed for a complete clean. You can vacuum dry debris first, then spray mop, or use both functions simultaneously for efficient cleaning.




A complete clean

Just vacuum then spray mop—
all with an innovative disposable pad.

Figure 5: The Shark VACMOP in action, demonstrating its ability to vacuum and spray mop for a comprehensive floor cleaning.

5. Suitable Floor Types

The Shark VACMOP is safe for use on all sealed hard floors, including stone, tile, hardwood, and marble.

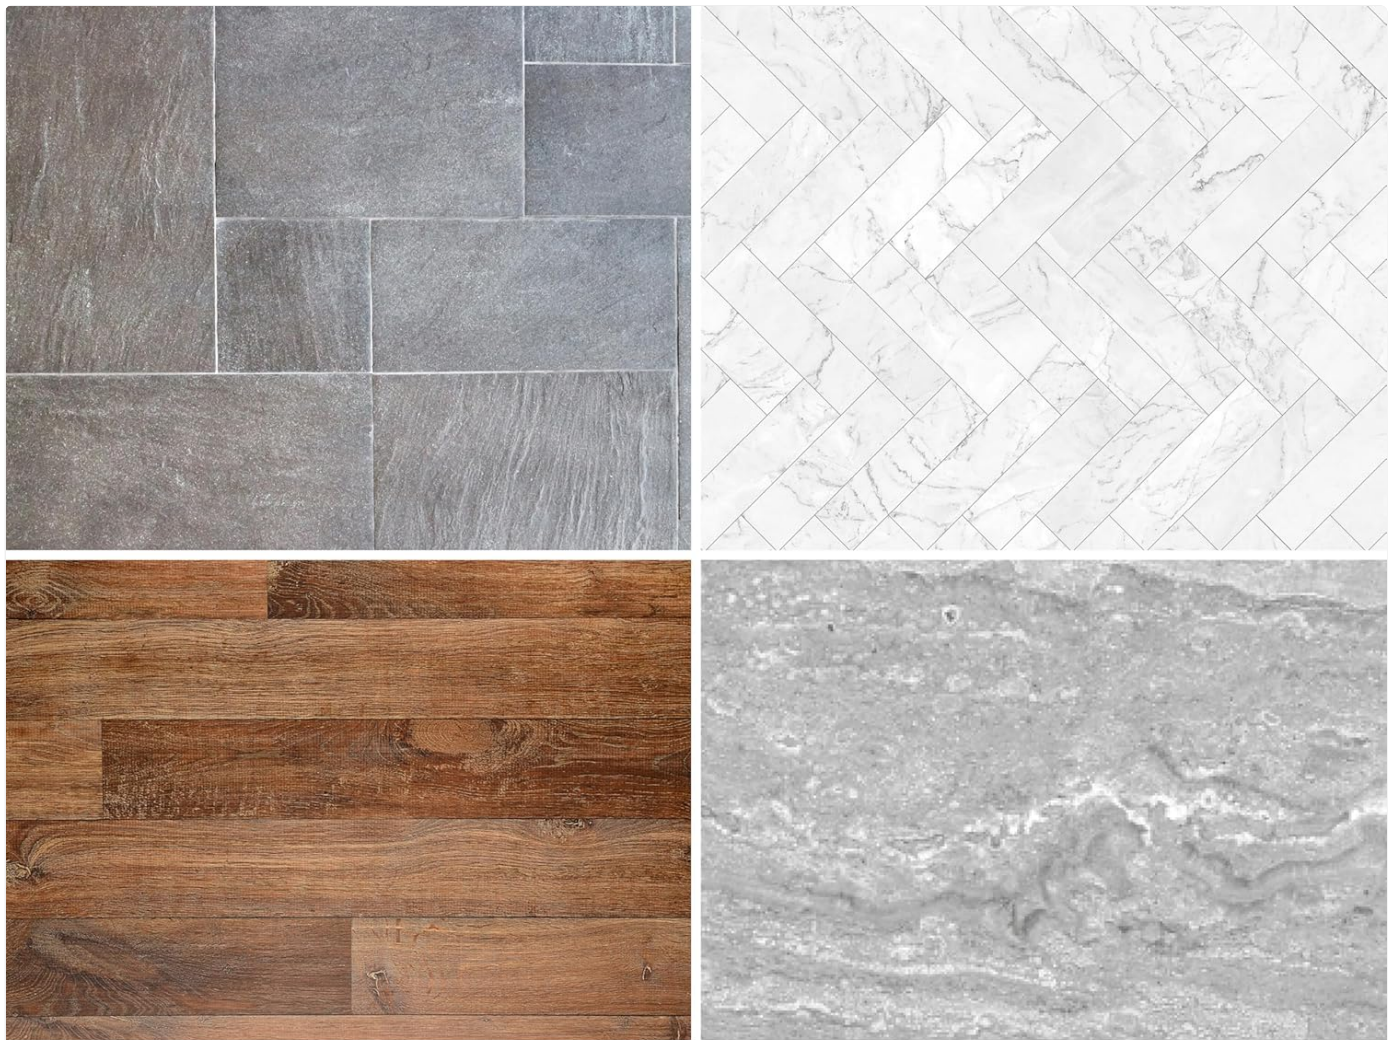

Safe for all sealed hard floors

Stone • Tile • Hardwood • Marble

Figure 6: Visual representation of different sealed hard floor types (stone, tile, hardwood, marble) on which the Shark VACMOP can be safely used.

MAINTENANCE

1. Disposable Pad Disposal

After each use, or when the pad is full of debris and dirty, dispose of the pad.

1. Position the VACMOP directly over a trash receptacle.
2. Press the pad release button located on the VACMOP head to detach the dirty pad without touching it.
3. Discard the used pad.



No touch disposal

Just toss the pad with a click.

Figure 7: Illustrates the no-touch disposal method for the used VACMOP pad, dropping it directly into a trash can.

2. Cleaning the Unit

- Wipe the exterior of the VACMOP with a damp cloth as needed.
- Do not immerse the VACMOP in water or spray water directly onto the unit.
- Ensure the charging port is dry before charging.

3. Battery Care and Storage

- Store the VACMOP in a cool, dry place when not in use.
- For optimal battery life, avoid storing the unit with a completely depleted battery.
- If storing for an extended period, charge the battery every 3-6 months.

TROUBLESHOOTING

Problem	Possible Cause	Solution
VACMOP not turning on	Battery is depleted.	Charge the battery fully.
No spray solution	Solution tank is empty or cap is loose.	Refill the solution tank and ensure the cap is securely closed.
Poor suction	Disposable pad is full or improperly attached.	Replace the disposable pad or ensure it is securely attached.
Streaks on floor	Pad is too dirty or too much solution applied.	Replace the disposable pad. Use less solution or wipe with a clean, dry pad.

SPECIFICATIONS

- **Brand:** Shark
- **Model Name:** Shark VM180
- **Item Model Number:** VM180
- **UPC:** 622356588195
- **Special Feature:** Compact, Cordless, Lightweight
- **Filter Type:** Foam
- **Included Components:** 2 Disposable VACMOP pads & 1 12 oz cleaning solution
- **Is Cordless?:** Yes
- **Capacity:** 0.1 Quarts
- **Wattage:** 85 watts
- **Form Factor:** Upright
- **Color:** Gray
- **Amperage:** 7.8 Amps
- **Manufacturer:** SharkNinja
- **Product Dimensions:** 5.38"L x 9.5"W x 47.87"H
- **Item Weight:** 3.34 pounds
- **Batteries:** 1 Lithium Ion battery (included)
- **Indoor/Outdoor Usage:** Indoor

WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the warranty card included with your product or visit the official Shark website.

You can also visit the Shark Store on Amazon for additional products and support.

