

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Lilo and Stitch Kid's Smart Watch User Manual

Accutime 886328

User Manual

ACCUTIME LILO AND STITCH KID'S STITCH LUAU HULA INTERACTIVE SMART WATCH

1. Introduction and Overview

Welcome to the world of interactive fun with your new Accutime Lilo and Stitch Kid's Smart Watch! This manual provides essential information for setting up, operating, and maintaining your watch to ensure a delightful and safe experience. Designed for young fans, this interactive smartwatch combines entertainment with practical features, all within a durable and kid-friendly design.



Image 1: Front view of the Accutime Lilo and Stitch Kid's Smart Watch, showing Stitch on the display.

2. Safety Information

Please read all safety information before using the watch to prevent injury or damage. Keep this manual for future reference.

- **Not a Medical Device:** This smartwatch is not intended for medical use and should not be used to diagnose, treat, or prevent any disease or condition.
- **Choking Hazard:** The watch contains small parts that could be a choking hazard for young children. Adult supervision is recommended.
- **Battery Safety:** Do not attempt to replace the battery. The battery is non-removable. Do not expose the watch to extreme temperatures, direct sunlight, or dispose of it in fire.
- **Water Resistance:** The watch is splash-proof but not waterproof. Avoid submerging it in water or exposing it to heavy rain.
- **Skin Irritation:** If skin irritation occurs, discontinue use and consult a doctor. Ensure the watch band is not too tight.
- **Charging:** Only use the provided USB charging cable. Do not leave the watch unattended while charging.

3. Package Contents

Verify that all items are present in the package:

- Accutime Lilo and Stitch Kid's Interactive Smart Watch
- USB Charging Cable
- User Manual (this document)

4. Setup

4.1 Initial Charging

Before first use, fully charge the smartwatch. This typically takes approximately 2-3 hours.

1. Locate the USB charging port on the side of the watch.
2. Connect the small end of the provided USB charging cable to the watch's charging port.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The watch display will show a charging indicator.

4.2 Power On/Off

- **To Power On:** Press and hold the power button (usually on the side of the watch) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the power button for a few seconds. A power-off option may appear on the screen; tap to confirm.

4.3 Initial Settings

Upon first power-on, you may be prompted to set the date, time, and language. Follow the on-screen instructions.

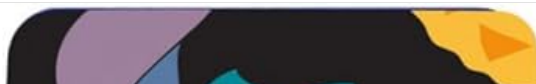






Image 2: Close-up of the watch face showing the time (12:43 PM) and date (10-10-2023 FRI).

5. Operating the Smart Watch

5.1 Navigation

The watch features a touch-sensitive screen for navigation. Swipe left or right to browse through different applications and features. Tap an icon to select it.

5.2 Key Features

- **Time Display:** The main screen displays the current time and date. Customize watch faces from the settings menu.
- **Camera:** Capture photos and videos directly from your wrist. Access the camera app from the main menu.
 - Tap the camera icon to open.
 - Tap the shutter button to take a photo or start/stop video recording.
- **Games:** Enjoy pre-loaded interactive games. Select the Games icon to view available options.
- **Pedometer:** Track your steps throughout the day. Access the Pedometer app to view your activity.
- **Alarm:** Set alarms for reminders or wake-up calls.
- **Timer/Stopwatch:** Use these tools for various activities.
- **Voice Recorder:** Record short audio clips.



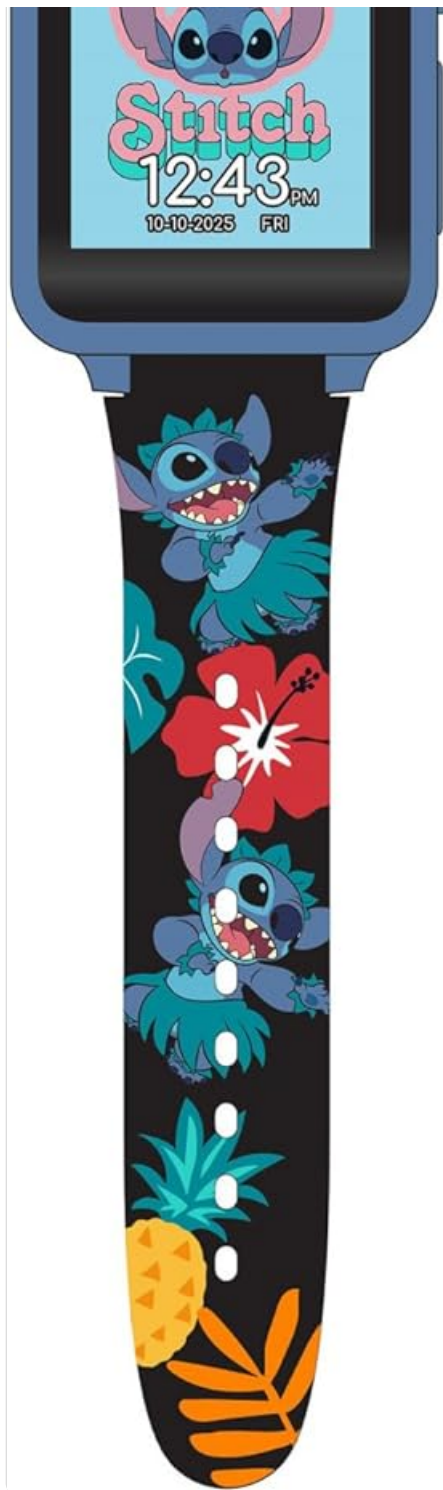


Image 3: Full product view, showcasing the watch and its decorative Lilo and Stitch themed strap with floral and pineapple patterns.

6. Maintenance

6.1 Cleaning

To keep your watch clean, gently wipe the screen and band with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive cleaners.

6.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the watch regularly, even if not in daily use, to maintain battery health.
- Store the watch in a cool, dry place when not in use.

7. Troubleshooting

Problem	Possible Solution
Watch won't turn on.	Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes. Try pressing and holding the power button for 10-15 seconds.
Screen is unresponsive.	Restart the watch by holding the power button until it powers off, then power it back on. Ensure the screen is clean and dry.
Battery not charging.	Check if the USB cable is securely connected to both the watch and the power source. Try a different USB port or power adapter. Ensure the charging port on the watch is clean.
Date/Time is incorrect.	Go to the watch settings and manually adjust the date and time.

8. Specifications

Feature	Detail
Model Number	886328
ASIN	B0DCQT6982
Manufacturer	Accutime Watch Corp.
Department	Unisex
First Available Date	August 9, 2024

9. Warranty and Support

For product support, troubleshooting assistance, or warranty inquiries, please contact Accutime Watch Corp. customer service. Refer to the packaging or the official Accutime website for the most current contact information.

Manufacturer: Accutime Watch Corp.
Please retain your proof of purchase for warranty claims.