

ele ELEOPTION Heated Blanket Electric Throw 51x71inch

ele ELEOPTION Heated Blanket Electric Throw 51x71inch User Manual

1. INTRODUCTION

Thank you for choosing the ele ELEOPTION Heated Blanket Electric Throw. This manual provides important instructions for the safe and efficient use, maintenance, and care of your heated blanket. Please read all instructions carefully before use and retain this manual for future reference.

Safety is paramount. Always follow the safety guidelines to prevent fire, electric shock, or injury.

2. PRODUCT OVERVIEW

The ele ELEOPTION Heated Blanket Electric Throw is designed to provide warmth and comfort. It features soft flannel and sherpa materials, multiple heat settings, and an automatic shut-off function for safety and energy efficiency.



A gray ele ELEOPTION Heated Blanket Electric Throw, folded neatly, with its white detachable controller visible.

Key Features:

- **Material:** Soft 200gsm flannel and 200gsm sherpa for comfort and durability.
- **Safety:** Equipped with NTC overheating protection technology to prevent excessive heat.
- **Intelligent Temperature Adjustment:** Automatically adjusts temperature based on the surrounding environment for consistent comfort and energy saving.
- **Heat Levels:** 4 adjustable heat levels with a temperature range of approximately 41-131°F (5-55°C).
- **Auto Shut-Off:** Programmable auto-off timer with settings for 1, 2, 4, 6, 8, and up to 10 hours.
- **Convenient Design:** 10.1-foot power cord for flexible placement.
- **Easy Care:** Machine washable (after detaching controller).

3. SETUP

1. **Unpack:** Carefully remove the heated blanket and controller from its packaging. Inspect for any damage.
2. **Connect Controller:** Ensure the blanket is unplugged from the wall outlet. Firmly insert the controller's connector into the blanket's power inlet until it clicks securely into place. Do not force the connection.



Operation and use of electric blanket



An image demonstrating the correct method for connecting the detachable controller to the ele ELEOPTION Heated Blanket.

3. **Placement:** Lay the blanket flat on a bed, sofa, or other desired surface. Ensure it is not folded, bunched, or tucked in tightly, as this can cause overheating.
4. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

ONE BUTTON CONTROL

Easy to use



A detailed view of the ele ELEOPTION Heated Blanket's controller, showing buttons for adjusting 4 heat levels and setting the auto-off timer.

1. **Power On/Off:** Press the power button on the controller to turn the blanket on or off. The indicator light will illuminate when the blanket is on.
2. **Adjust Heat Level:** Use the heat level button (often labeled with 'H', 'M', 'L', 'W' or similar indicators) to cycle through the 4 available heat settings. Select your desired warmth level.
3. **Set Auto-Off Timer:** Press the timer button to select the desired auto-off duration (e.g., 1, 2, 4, 6, 8, or 10 hours). The blanket will automatically turn off after the selected time has elapsed.
4. **Pre-heating:** For optimal warmth, turn on the blanket to a higher heat setting approximately 15-30 minutes before use.



A woman smiling and comfortably wrapped in the gray ele ELEOPTION Heated Blanket Electric Throw.

5. MAINTENANCE AND CARE

Cleaning Instructions:

The ele ELEOPTION Heated Blanket is machine washable, but proper steps must be followed to ensure its longevity and safety.

1. **Disconnect:** Always unplug the blanket from the wall outlet and detach the controller from the blanket before cleaning.
2. **Pre-soak (Optional):** For heavily soiled blankets, you may pre-soak the blanket for 15 minutes in cool water with a small amount of mild detergent.
3. **Machine Wash:** Wash on a gentle or delicate cycle in cool water (maximum 30°C / 86°F) using a small amount of mild, non-bleach detergent. Do not use bleach or harsh cleaning agents.
4. **Rinse:** Rinse thoroughly on a slow spin cycle.
5. **Machine Dry:** Tumble dry on a low heat or air fluff setting for a maximum of 5 minutes. Remove the blanket while still damp.
6. **Air Dry:** Drape the blanket over a clothesline or shower rod to air dry completely. Ensure the blanket

and controller connection port are completely dry before reconnecting the controller or plugging it in. Do not use clothespins or clips that could damage the internal wiring.

7. **Do Not Iron:** Never iron the heated blanket.
8. **Do Not Dry Clean:** Dry cleaning chemicals can damage the insulation of the heating elements.



The ele ELEOPTION Heated Blanket inside a washing machine, illustrating its machine-washable feature.

Storage:

When not in use, store the blanket neatly folded or rolled in a cool, dry place. Avoid placing heavy objects on top of the blanket, as this can damage the internal heating wires.

6. SAFETY INFORMATION

To reduce the risk of burns, electric shock, fire, or injury, this product must be used in accordance with the following instructions:

- Do not use with an infant, a child, an incapacitated person, or any person insensitive to heat.
- Do not use if the blanket is wet.
- Do not use if the power cord or controller is damaged. Contact customer support immediately.
- Do not use with pointed objects.

- Do not use folded, bunched, or tucked in. This can cause localized overheating.
- Do not use with other heating appliances.
- Do not dry clean.
- Always unplug the blanket when not in use.
- Keep the controller away from water or other liquids.
- Do not allow pets to chew on the cord or blanket.

7. TROUBLESHOOTING

If your heated blanket is not operating correctly, please refer to the following common issues before contacting customer support:

Problem	Possible Cause	Solution
Blanket not heating.	Not plugged in, controller not connected securely, power outage, or auto-off timer activated.	Ensure power cord is firmly plugged into a working outlet. Check controller connection to the blanket. Reset by unplugging for 5 minutes and plugging back in. Verify timer setting.
Controller light flashing.	Indicates an error or safety shut-off.	Unplug the blanket from the wall outlet and detach the controller. Inspect the blanket for any damage or bunched areas. Reconnect the controller and plug it back in. If the issue persists, discontinue use.
Blanket feels too hot in one area.	Blanket may be folded, bunched, or tucked in.	Immediately turn off and unplug the blanket. Lay it flat and ensure it is not folded or bunched. Allow it to cool before resuming use.

If you experience any issues not listed here, or if the problem persists after attempting the solutions, please contact ele ELEOPTION customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	ele ELEOPTION
Model	Heated Blanket Electric Throw
Size	51 x 71 inches (130 x 180 cm)
Material	Flannel and Sherpa (200gsm each)
Color	Gray
Heat Levels	4 levels (approx. 41-131°F / 5-55°C)
Auto Shut-Off	Adjustable timer (e.g., 1, 2, 4, 6, 8, 10 hours)

Feature	Detail
Power Cord Length	10.1 feet (approx. 3.1 meters)
Power Input	120V AC (Standard US Outlet)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the retailer from whom you purchased the product. You may also visit the official ele ELEOPTION store on Amazon for further assistance or to view their contact information.

Manufacturer: ele ELEOPTION

ASIN: B0DCS97JK6