

Grimtron VT04-BK

Grimtron Quick Access Wall Gun Safe (Model VT04-BK) Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and effective installation, setup, operation, and maintenance of your Grimtron Quick Access Wall Gun Safe, Model VT04-BK. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- **Emergency Keys:** Never store the emergency keys inside the safe. Keep them in a secure, separate location known only to trusted individuals.
- **Installation:** Ensure the safe is securely mounted to wall studs as instructed to prevent unauthorized removal or accidental dislodgement.
- **Children:** Keep the safe and its contents out of reach of children.
- **Electrical:** Avoid installing the safe near electrical switches or outlets.
- **Weight Capacity:** Do not overload the safe beyond its structural capacity.

3. PACKAGE CONTENTS

Verify that all components are present before proceeding with installation:

- Wall Safe (1)
- Keys (2)
- Removable Pegboard (1)
- Pegboard Pins (2)
- Removable Shelves (2)
- Wall Screws & Anchors (4)

4. PRODUCT OVERVIEW

The Grimtron VT04-BK Wall Gun Safe is designed for secure, discreet storage of valuables. Key features include:

- **Quick Access:** Electronic keypad with PIN code and emergency key access.
- **Adjustable Interior:** Removable pegboard with pins and two removable shelves for customizable storage.
- **Built-in Lighting:** Internal LED lights activate upon successful entry for visibility in low-light conditions.
- **Flush Mount Design:** Allows the safe to be discreetly hidden behind framed artwork or other wall decor.
- **Silent Mode:** Option to disable keypad beeps for quiet operation.
- **Emergency Power:** USB-C port for external power in case of battery depletion.



Figure 4.1: Grimtron Wall Gun Safe with interior contents visible.

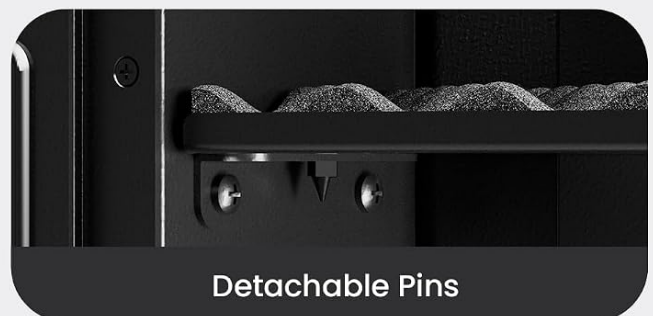
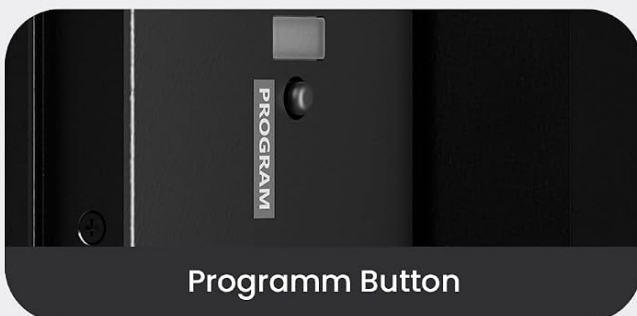
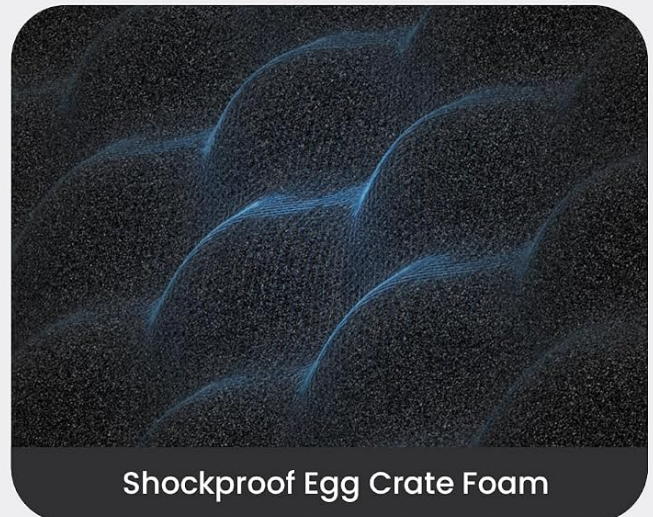


Figure 4.2: Detailed features including magnetic keyhole, LED light, and program button.

Automatic Door Opening Wall Box



Figure 4.3: Keypad and access options.

5. INSTALLATION

The Grimtron VT04-BK Wall Gun Safe is designed to fit between standard 16-inch on-center wall studs. Proper installation is crucial for security.

5.1 Tools Required

- Stud Finder
- Tape Measure
- Level
- Drywall Knife or Saw
- Drill
- Ratchet or Wrench

5.2 Installation Steps

1. **Locate Studs:** Use a stud finder to locate two adjacent wall studs that are 16 inches on center. Verify there are no electrical wires or plumbing in the intended installation area.
2. **Measure and Mark:** Measure the back dimensions of the safe (3.74"D x 13.78"W x 20.87"H). Using a level, draw parallel horizontal lines on the wall between the studs, then vertical lines to create the opening outline. The outer lip of the safe will cover the edges of this opening.
3. **Cut Opening:** Carefully cut along the marked lines using a drywall knife or saw.
4. **Test Fit:** Gently insert the safe into the opening to ensure a proper fit. If necessary, make minor adjustments to the opening.
5. **Mark Drill Holes:** With the safe in place, use a pencil to mark the locations for the mounting screws through the pre-drilled holes on the safe's flanges.
6. **Pre-Drill:** Remove the safe and pre-drill pilot holes at the marked positions. Insert the expansion anchors if required by your wall type.
7. **Secure Safe:** Place the safe back into the opening, align the holes, and secure it to the studs using the provided wall screws and anchors. Tighten the bolts with a ratchet, ensuring not to overtighten to prevent stripping.

Wall Safes Between the Studs 16" Centers


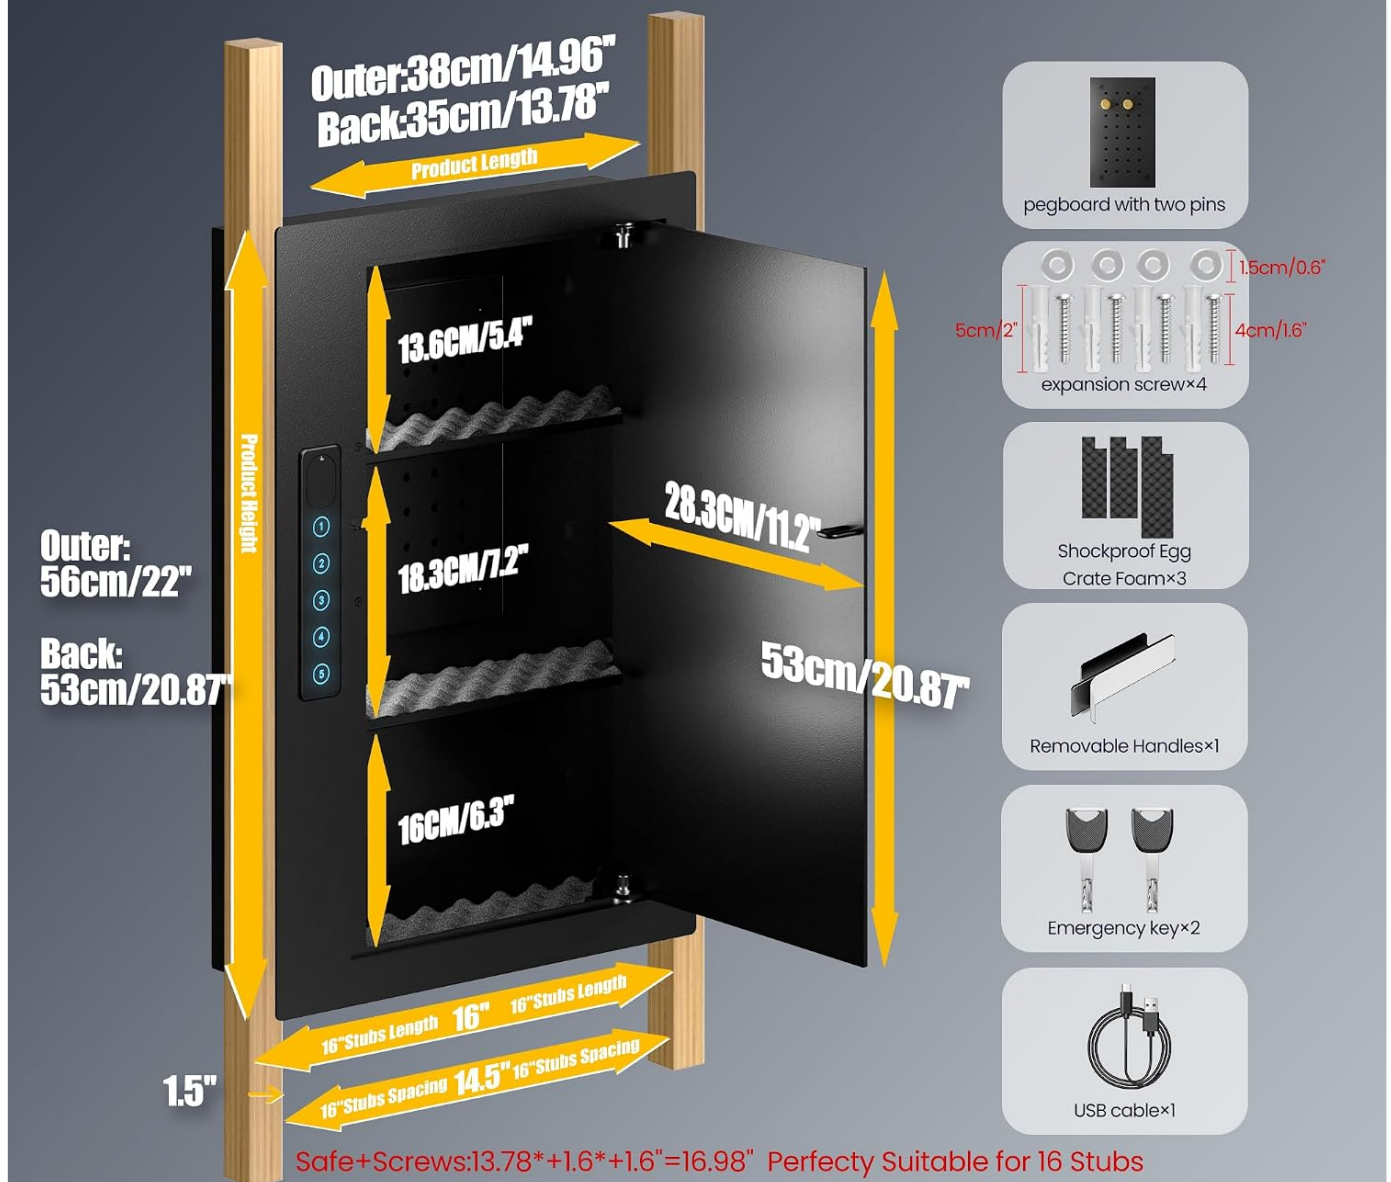


Figure 5.1: Safe dimensions and stud spacing for installation.

>> More Choice

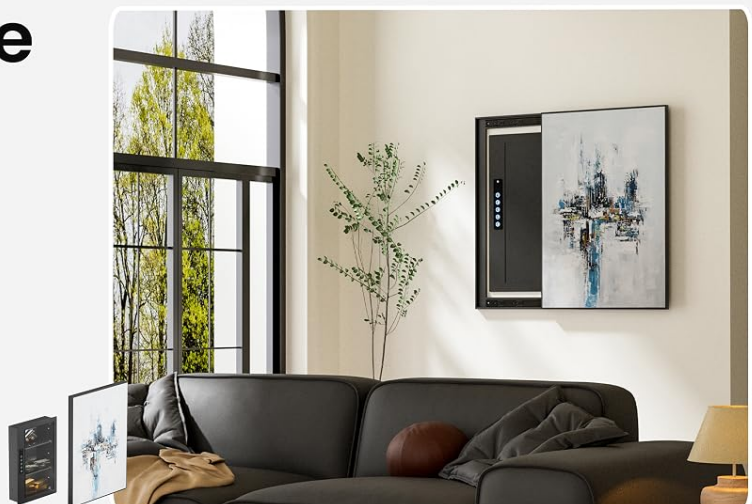

6. SETUP

6.1 Battery Installation

The safe requires 4 AAA batteries (not included) for the electronic keypad and internal light. Open the safe using the emergency key, locate the battery compartment on the inside of the door, and insert the batteries according to the polarity markings.

6.2 Programming Your PIN Code

1. With the safe door open, locate the 'PROGRAM' button on the inside of the door.
2. Press the 'PROGRAM' button. The keypad lights will illuminate.
3. Enter your desired 4-8 digit PIN code on the keypad.
4. Press the '#' button to confirm. The keypad will beep to indicate successful programming.
5. Test your new PIN code with the door open before closing it.

6.3 Activating Silent Mode

To activate or deactivate silent mode (disabling keypad beeps), press and hold the '0' button on the keypad for 3 seconds. The safe will indicate the change with a light flash or a single beep.

7. OPERATION

7.1 Opening the Safe with PIN Code

1. Enter your programmed PIN code on the keypad.
2. The door will automatically open, and the internal LED lights will activate.

7.2 Opening the Safe with Emergency Key

In case of forgotten PIN or depleted batteries, use the emergency key:

1. Locate the magnetic keyhole cover on the keypad panel.
2. Remove the cover to reveal the keyhole.
3. Insert the emergency key and turn it to unlock the safe.

7.3 USB Emergency Charging

If the batteries are completely depleted and you cannot open the safe with the PIN, you can use the USB-C emergency port:

1. Connect a USB-C cable (not included) to the emergency port on the keypad panel and to a power source (e.g., power bank, USB wall adapter).
2. Once powered, you can enter your PIN code to open the safe.

7.4 Customizing Interior Storage

Wall Safe with Removable Shelves & Pegboard & Pins

GRIMTRON
www.grimtron.com



With Shelf



Without Shelf



With Pegboard



If you want more pins
please contact us



Without Pegboard



Figure 7.1: Customizable interior with removable shelves and pegboard.

The safe features a removable pegboard and two removable shelves. You can adjust the position of the pegboard pins or remove the shelves and pegboard entirely to suit your storage needs.

8. MAINTENANCE

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears or if the keypad becomes unresponsive. Always use 4 AAA batteries.
- **Keyhole:** Keep the emergency keyhole clean and free of debris.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with PIN code.	Incorrect PIN entered; Batteries are low or depleted.	Re-enter PIN carefully. Replace batteries or use USB-C emergency power. Use emergency key.
Keypad is unresponsive.	Batteries are depleted or incorrectly installed.	Replace batteries (4 AAA). Check battery polarity. Use USB-C emergency power.
Internal light does not turn on.	Batteries are low or depleted; LED malfunction.	Replace batteries. If issue persists, contact customer support.
Keypad makes no sound in silent mode.	Silent mode is activated.	This is normal operation. To deactivate, press and hold '0' for 3 seconds.
Safe is difficult to install between studs.	Stud spacing is not exactly 16 inches on center; Opening cut is too small.	Verify stud spacing with a stud finder. Carefully enlarge the opening if necessary, ensuring not to compromise structural integrity.

10. SPECIFICATIONS

Feature	Detail
Brand	Grimtron
Model Number	VT04-BK
Product Dimensions (Outer)	3.78"D x 14.96"W x 22"H
Product Dimensions (Back)	3.74"D x 13.78"W x 20.87"H
Lock Type	Key, PIN Code Combination
Capacity	0.76 Cubic Feet
Material	Heavy Duty Steel
Mounting Type	Wall Safes Between 16" Studs
Special Features	Anti-Theft, Child-Proof, Auto-unlocking Mechanism, Built-in Light, Silent Mode
Batteries Required	Yes (4 x AAA, not included)
Item Weight	25.8 pounds
Water Resistance Level	Not Water Resistant

11. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your Grimtron Quick Access Wall Gun Safe, please contact Grimtron customer service through their official website or the retailer where the product was purchased. Please have your model number (VT04-BK) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question