

[manuals.plus](#) /

› [STANLEY](#) /

› [Stanley SFMCSV001D1 18V Cordless Stick Vacuum Cleaner User Manual](#)

STANLEY SFMCSV001D1

Stanley SFMCSV001D1 18V Cordless Stick Vacuum Cleaner

Model: SFMCSV001D1 | Brand: STANLEY

1. INTRODUCTION

Thank you for choosing the Stanley SFMCSV001D1 18V Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new vacuum cleaner. Please read these instructions carefully before use and keep them for future reference.

2. PRODUCT FEATURES

- **Power:** 18 V, 2.0 Ah single lithium-ion battery.
- **Removable Battery:** Allows for convenient charging and extended use with additional batteries (sold separately).
- **Speed Control:** 3 levels for versatile cleaning on different surfaces.
- **Suction Type:** Dry.
- **Container Capacity:** 750 ml dustbin.
- **Cordless Operation:** Rechargeable design for unrestricted movement.
- **Filter Type:** HEPA filter for efficient dust capture.
- **Recommended Surfaces:** Hard floors.

3. PACKAGE CONTENTS

The Stanley SFMCSV001D1 package includes:

- 18V STANLEY FATMAX V20 Cordless Stick Vacuum Cleaner
- Silicone brush attachment
- 18V 2.0 Ah Lithium-ion battery
- Charger

4. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Read all instructions before using this appliance.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

5. SETUP

5.1. Charging the Battery

Before first use, fully charge the 18V 2.0 Ah Lithium-ion battery. Connect the charger to a power outlet and insert the battery. The indicator lights on the battery will show the charging status. Ensure the battery is fully charged for optimal performance.

5.2. Assembling the Vacuum Cleaner

1. **Attach the Extension Tube:** Align the extension tube with the main vacuum body and push until it clicks securely into place.
2. **Attach the Floor Head:** Connect the floor head to the other end of the extension tube, ensuring it locks firmly.
3. **Insert the Battery:** Slide the charged battery into the battery slot on the main vacuum body until it clicks.



Image: The Stanley SFMCVS001D1 Cordless Stick Vacuum Cleaner fully assembled, ready for use.



Image: A close-up view demonstrating the insertion of the battery into the vacuum cleaner and the location of the control buttons.

6. OPERATING INSTRUCTIONS

6.1. Powering On and Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off.

6.2. Adjusting Suction Speed

The vacuum cleaner offers 3 speed levels. Use the speed control button to cycle through the different settings: low, medium, and high, to match the cleaning task and surface type.

6.3. Using Attachments

The Stanley SFMCVS001D1 can be used as a stick vacuum with the extension tube and floor head, or as a handheld vacuum by detaching the extension tube and attaching accessories directly to the main body.

- **Silicone Brush:** Ideal for delicate surfaces, upholstery, and pet hair.
- **Crevice Tool (if included):** For reaching tight spaces, corners, and edges.



Image: The Stanley SFMCVS001D1 being used in both its stick vacuum configuration for floors and as a handheld unit for various surfaces.



Image: Demonstrates the versatility of the vacuum cleaner with various nozzles for different cleaning applications, such as corners and elevated surfaces.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1. Emptying the Dustbin

Empty the 750 ml dustbin regularly, especially when it reaches the MAX fill line, to maintain strong suction. Press the release button to detach the dustbin and empty its contents into a waste bin.

7.2. Cleaning the Filters

The HEPA filter should be cleaned periodically. Twist and pull to remove the filter assembly from the dustbin. Tap the filter gently to remove loose dust. For a deeper clean, rinse the filter under cold running water. Ensure the filter is completely dry before reassembling and using the vacuum cleaner.



Image: A step-by-step visual guide on how to properly clean the filter of the Stanley SFMCVS001D1 vacuum cleaner.

8. TROUBLESHOOTING

If you encounter issues with your Stanley SFMCVS001D1, refer to the following common troubleshooting tips:

- **No Power:** Ensure the battery is fully charged and correctly inserted. Check if the power button is pressed firmly.
- **Reduced Suction:** Empty the dustbin. Clean or replace the HEPA filter. Check for blockages in the nozzle, extension tube, or main unit.
- **Brush Roll Not Spinning:** Check for tangled hair or debris in the brush roll. Ensure the floor head is properly attached.
- **Short Battery Life:** Ensure the battery is fully charged. Operating on higher speed settings will consume battery faster. Consider purchasing an additional battery for extended cleaning sessions.

For persistent issues, please contact Stanley customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	STANLEY
Model	SFMCVS001D1-QW
Color	Yellow and Black
Product Dimensions	64 x 29 x 182 cm
Weight	4.85 Kilograms
Number of Speeds	3
Special Features	Cordless
Filter Type	HEPA Filter
Recommended Surfaces	Hard Floor
Power Source	Battery Powered
Battery Voltage	18 V
Battery Capacity	2.0 Ah
Container Capacity	750 ml

10. WARRANTY AND SUPPORT

Your Stanley SFMCVS001D1 Cordless Stick Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your package for details on coverage and duration. For technical support, spare parts, or service inquiries, please visit the official Stanley website or contact their customer service department.