

[manuals.plus](#) /

› [weelikeit](#) /

› [weelikeit 11-inch FHD Tablet User Manual](#)

weelikeit 1090sc

weelikeit 11-inch FHD Tablet (Model: 1090sc)

User Manual

1. INTRODUCTION

Welcome to the user manual for your new weelikeit 11-inch FHD Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and longevity. Please read this manual thoroughly before using your tablet.



Figure 1.1: weelikeit 11-inch FHD Tablet. This image displays the tablet from both front and rear perspectives, showcasing its sleek design and camera setup.

2. WHAT'S IN THE Box

Upon opening your weelikeit tablet package, verify that all the following items are included:

- Tablet (1)
- Charging Adapter (1)
- USB Cable (1)
- Screen Protector Film (1)
- User Manual (1)



P36



Figure 2.1: Tablet Packaging. The image shows the weelikeit P36 tablet box, indicating the product model and brand.

3. SETUP

3.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's charging port and the charging adapter, then plug the adapter into a power outlet. The battery indicator on the screen will show charging status. A full charge ensures optimal battery performance.

14(6+8)GB RAM+128GB ROM



14(6+8)
RAM



128GB
ROM



TF Card Expanded



Figure 3.1: 7000mAh Battery Capacity. This image highlights the tablet's large 7000mAh battery, providing extended usage time.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the weelikeit logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.

3.3 Inserting a MicroSD Card

The tablet supports expandable storage via a MicroSD card. Locate the SIM/MicroSD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Carefully place the MicroSD card into the designated slot and reinsert the tray into the tablet. Ensure the card is inserted correctly to avoid damage.

7000mAh large-capacity battery and intelligent power saving technology,
long standby time, you can travel and hike with confidence.



7000mAh



5-8 Hours



Type-C



Figure 3.2: Expandable Storage. This image demonstrates the tablet's 128GB internal storage and the option to expand it using a TF (MicroSD) card.

3.4 Initial Configuration


Upon first power-on, follow the on-screen prompts to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, and signing in with your Google account. A stable Wi-Fi connection is recommended for software updates and app downloads.

Android 14

New upgraded version of Android 14 tablet is equipped with a powerful A55 architecture and an Octa-Core CPU, providing smooth and fast performance. It uses a low-power 22nm process to ensure the lowest power consumption and heat generation.



Octa-Core
CPU

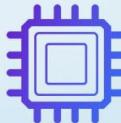

Unisoc
T606



22nm

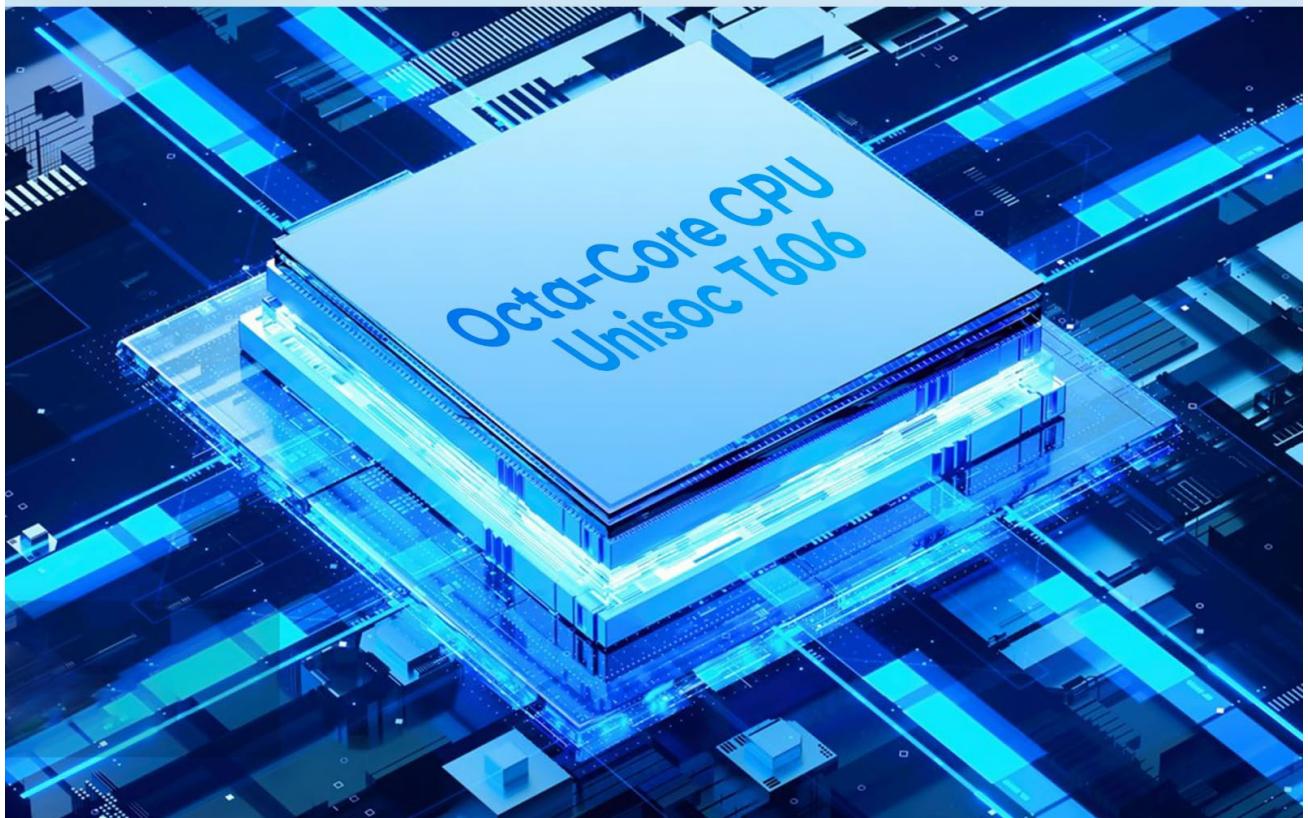


Figure 3.3: 5G WiFi Support. The tablet's screen displays a gaming interface, emphasizing its capability to connect to 2.4G/5G dual-band Wi-Fi networks.

4. OPERATING THE TABLET

4.1 Navigating Android 14

Your weelikeit tablet runs on the Android 14 operating system, offering a user-friendly interface. Swipe up from the bottom of the screen to access the app drawer, swipe down from the top for quick settings and notifications, and use the navigation buttons (Back, Home, Recents) at the bottom of the screen to move between applications and screens.

Support 5G WIFI

2024 Newest Android 14 tablet, equipped with a powerful new octa-core processor, support 2.4G/5G dual-band wifi connection



Figure 4.1: Android 14 Interface. This image illustrates the tablet's display with the Android 14 logo and information about its Octa-Core Unisoc T606 processor, indicating smooth performance.

4.2 Display and Touchscreen

The tablet features an 11-inch Full HD (1920x1200) IPS display, providing clear and vibrant visuals. The multi-touch screen supports gestures such as pinch-to-zoom, swiping, and tapping for intuitive interaction with applications and content.



Figure 4.2: 10.95-inch FHD Display. The tablet's screen showcases a high-resolution image, highlighting its 10.95-inch IPS FHD display with 1200x1920 resolution.

4.3 Camera Usage

The tablet is equipped with dual 13MP rear cameras and a front camera for capturing photos and videos. Open the Camera application from the home screen or app drawer. You can switch between photo and video modes, adjust settings, and use various features like panorama or macro mode. The dual rear cameras enhance photo quality and depth.



Figure 4.3: Dual 13MP Rear Cameras. A detailed view of the tablet's rear camera module, featuring two lenses for enhanced photography.

Video 4.1: weelikeit Tablet Overview. This video, provided by the seller, demonstrates various features of a weelikeit tablet, including its display and general usage. Note: The video title mentions a 10-inch tablet, but this manual is for an 11-inch model.

4.4 Connectivity

The tablet supports 802.11ac Wi-Fi for high-speed internet access and Bluetooth 5.0 for connecting wireless accessories such as headphones, speakers, or keyboards. Access these settings via the Quick Settings panel or the main Settings application.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your weelikeit tablet.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals.

- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not leave the tablet fully charged or completely drained for extended periods.
- **Software Updates:** Regularly check for and install system updates to ensure your tablet has the latest features and security patches. Navigate to Settings > System > System update.
- **Storage Management:** Periodically clear unnecessary files and applications to free up storage space and maintain performance.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

Problem	Solution
Tablet does not turn on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance or freezing.	Close unused applications. Clear cache for frequently used apps. Restart the tablet. Consider performing a factory reset if the issue persists (back up data first).
Apps crashing or not responding.	Clear the app's cache and data (Settings > Apps > [App Name] > Storage). Update the app to the latest version. Reinstall the app.
Screen not responding to touch.	Restart the tablet. Ensure the screen is clean and free of debris. If a screen protector is installed, ensure it is properly applied and not interfering with touch sensitivity.

7. SPECIFICATIONS

Key technical specifications for the weelikeit 11-inch FHD Tablet:

Feature	Detail
Model	1090sc
Operating System	Android 14
Screen Size	10.95 Inches
Screen Resolution	1920 x 1080 pixels (FHD)
RAM	6 GB (with 8GB expandable virtual memory)
Storage	128 GB (expandable via MicroSD)
Rear Camera	Dual 13 MP

Feature	Detail
Battery Capacity	7000mAh
Wireless Type	802.11ac (2.4G/5G dual-band)
Bluetooth	5.0
Item Weight	1.98 pounds
Product Dimensions	10 x 6.57 x 0.3 inches

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your weelikeit tablet is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact weelikeit customer support. Contact information can typically be found on the official weelikeit website or on the packaging materials. When contacting support, please have your tablet's model number (1090sc) and purchase details ready.

© 2024 weelikeit. All rights reserved.

Related Documents - 1090sc

 A thumbnail image of the 'weelikeit Kids Tablet 7" User Manual'. The cover features the weelikeit logo at the top, followed by 'Kids Tablet 7"'. Below that are three stylized tablet icons in blue, pink, and purple, each showing a cartoon animal (a bird, a bear, and a rabbit) on its screen. At the bottom, it says 'USER MANUAL'.	<p><u>weelikeit Kids Tablet 7" User Manual</u></p> <p>A comprehensive user manual for the weelikeit Kids Tablet 7", covering setup, hardware overview, software features, managing Kid's Place, product care, and troubleshooting.</p>
---	--