

XIAOMI 56356

Xiaomi TV A Pro 43" 2025 User Manual

Model: 56356

1. INTRODUCTION

Thank you for choosing the Xiaomi TV A Pro 43" 2025. This user manual provides essential information for setting up, operating, and maintaining your new television. Please read this manual thoroughly before using the product to ensure proper and safe operation. Keep this manual for future reference.

The Xiaomi TV A Pro 43" 2025 features a bright 4K QLED display with accurate color reproduction, 4K HDR display with motion smoothing technology, and a premium metal finish with an ultra-slim bezel design. It delivers vibrant sound with Dolby Audio, DTS:X, and DTS Virtual:X.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package.

- Xiaomi TV A Pro 43" 2025 Unit
- 360° Bluetooth Remote Control
- Power Cable
- User Manual (this document)
- 2 x AAA Batteries (for remote control)
- TV Stands (2 pieces) and Screws (if included for tabletop setup)

4. SETUP

4.1 Installing the TV Stands

If you are placing the TV on a tabletop, attach the included stands. Ensure the stands are securely fastened to prevent the TV from tipping over.

1. Place the TV face down on a soft, flat surface to prevent screen damage.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws.



Figure 4.1: Front view of the Xiaomi TV A Pro 43" 2025 with its stands attached, ready for tabletop placement. The image shows the sleek design and thin bezels of the television.

4.2 Wall Mounting (Optional)

The TV supports VESA wall mounts. A wall mount is not included in the package. Please purchase a compatible wall mount separately and follow its installation instructions carefully. Ensure the wall can support the weight of the TV.



Figure 4.2: Rear view of the Xiaomi TV A Pro 43" 2025, highlighting the VESA mounting points for wall installation. This view also shows the various input ports available on the back panel.

4.3 Connecting Devices

Connect your external devices such as set-top boxes, gaming consoles, or Blu-ray players to the TV's input ports.

- **HDMI:** For high-definition audio and video. The TV supports multiple HDMI inputs.
- **USB:** For connecting USB storage devices.
- **Antenna/Cable:** For connecting an antenna or cable TV signal.
- **Ethernet (LAN):** For a wired internet connection.
- **Optical Digital Audio Out:** For connecting to an external audio system.

After connecting all devices, plug the power cable into the TV and then into a power outlet.

5. OPERATING YOUR XIAOMI TV

5.1 Initial Setup and Google TV

Upon first power-on, the TV will guide you through the initial setup process. This includes connecting to Wi-Fi, signing in with your Google account, and setting up Google TV features.

- **Google Assistant built-in:** Use voice commands to search for content, control smart home devices, and more.
- **Smart home control:** Integrate and manage compatible smart home devices directly from your TV.
- **Pre-installed Apps:** Netflix, Prime Video, and YouTube are pre-installed for immediate access to popular streaming services.

5.2 Using the 360° Bluetooth Remote Control

The included remote control uses Bluetooth technology, allowing for control without direct line-of-sight to the TV. It also features a built-in microphone for Google Assistant voice commands.

1. **Power Button:** Turns the TV on or off.

2. **Google Assistant Button:** Press and hold to activate voice commands.
3. **Navigation Pad:** Use to navigate menus and select items.
4. **Back Button:** Returns to the previous screen.
5. **Home Button:** Returns to the Google TV home screen.
6. **Volume Buttons:** Adjusts the volume.
7. **Channel Buttons:** Changes TV channels (if applicable).
8. **App Shortcut Buttons:** Direct access to pre-installed apps like Netflix and Prime Video.

Insert the two AAA batteries into the remote control, ensuring correct polarity.

6. MAINTENANCE

6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

6.2 Storage

If storing the TV for an extended period, disconnect all cables and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

7. TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues.

| Problem | Possible Cause | Solution |
|----------------------------------|---|---|
| No power | Power cable not connected; Power outlet not working | Ensure power cable is securely connected. Test the outlet with another device. |
| No picture, but sound is present | Incorrect input source selected; Loose HDMI cable | Press the "Input" button on the remote to select the correct source. Check HDMI cable connection. |
| Remote control not working | Batteries are dead or incorrectly inserted; Remote not paired | Replace batteries. Re-pair the Bluetooth remote by following instructions in the TV's settings menu. |
| Slow performance/Apps crashing | Too many apps running; Low memory | Close unused apps. Restart the TV. Consider a factory reset if issues persist (note: this will erase all data). |
| No Wi-Fi connection | Router issue; Incorrect password | Restart your Wi-Fi router. Re-enter the Wi-Fi password carefully. Ensure the TV is within range of the router. |

8. SPECIFICATIONS

| Feature | Detail |
|-------------------------|-----------------------------------|
| Model Name | Xiaomi TV A Pro 43" 2025 |
| Model Number | 56356 |
| Display Size | 43 Inches (110 cm) |
| Display Technology | 4KUHD, QLED, LED |
| Resolution | 3840 x 2160 Pixels (4K) |
| Refresh Rate | 60 Hz |
| Operating System | Google TV |
| Memory Storage Capacity | 8 GB |
| Audio Technology | Dolby Audio, DTS:X, DTS Virtual:X |
| Connectivity | Wi-Fi, HDMI, USB |
| Remote Control | 360° Bluetooth Remote Control |
| Power Supply | 24 Volts (AC) |
| Product Dimensions | 6 x 80.7 x 562.2 cm (D x W x H) |
| Weight | 8.9 kg |

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Xiaomi support website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: Visit [Xiaomi Global Support](#) for FAQs, troubleshooting guides, and contact information.

© 2025 Xiaomi. All rights reserved.

Documents - XIAOMI – 56356

no relevant documents