

[Manuals.plus](#) /

› [coucheta](#) /

› coucheta 61-Key Portable Electric Piano Instruction Manual

coucheta sfp-FC-wmDvqSyx3v3MKZ9EbnbyggYk85

coucheta 61-Key Portable Electric Piano Instruction Manual

Model: sfp-FC-wmDvqSyx3v3MKZ9EbnbyggYk85

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your coucheta 61-Key Portable Electric Piano. Please read this manual thoroughly before using the instrument to ensure proper function and to maximize your musical experience.

SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter or 1.5V AA batteries. Ensure the voltage matches the product requirements.
- **Water and Moisture:** Keep the instrument away from water, moisture, and high humidity to prevent electric shock or damage.
- **Ventilation:** Do not block ventilation openings. Ensure adequate airflow around the instrument.
- **Cleaning:** Clean only with a dry, soft cloth. Avoid liquid cleaners or abrasive materials.
- **Disassembly:** Do not attempt to disassemble or repair the instrument yourself. Refer all servicing to qualified personnel.
- **Placement:** Place the instrument on a stable, flat surface to prevent it from falling.

PACKAGE CONTENTS

Verify that all items are present in the package:

- coucheta 61-Key Portable Electric Piano
- Microphone

- Power Adapter
- Music Stand (detachable)
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and connections of your electric piano.



Image: Top-down view of the Anyre 61-Key Portable Electric Piano. This image displays the full keyboard, control panel, built-in speakers, and the detachable music stand. The control panel features various buttons for tones, rhythms, demo songs, recording, and volume.

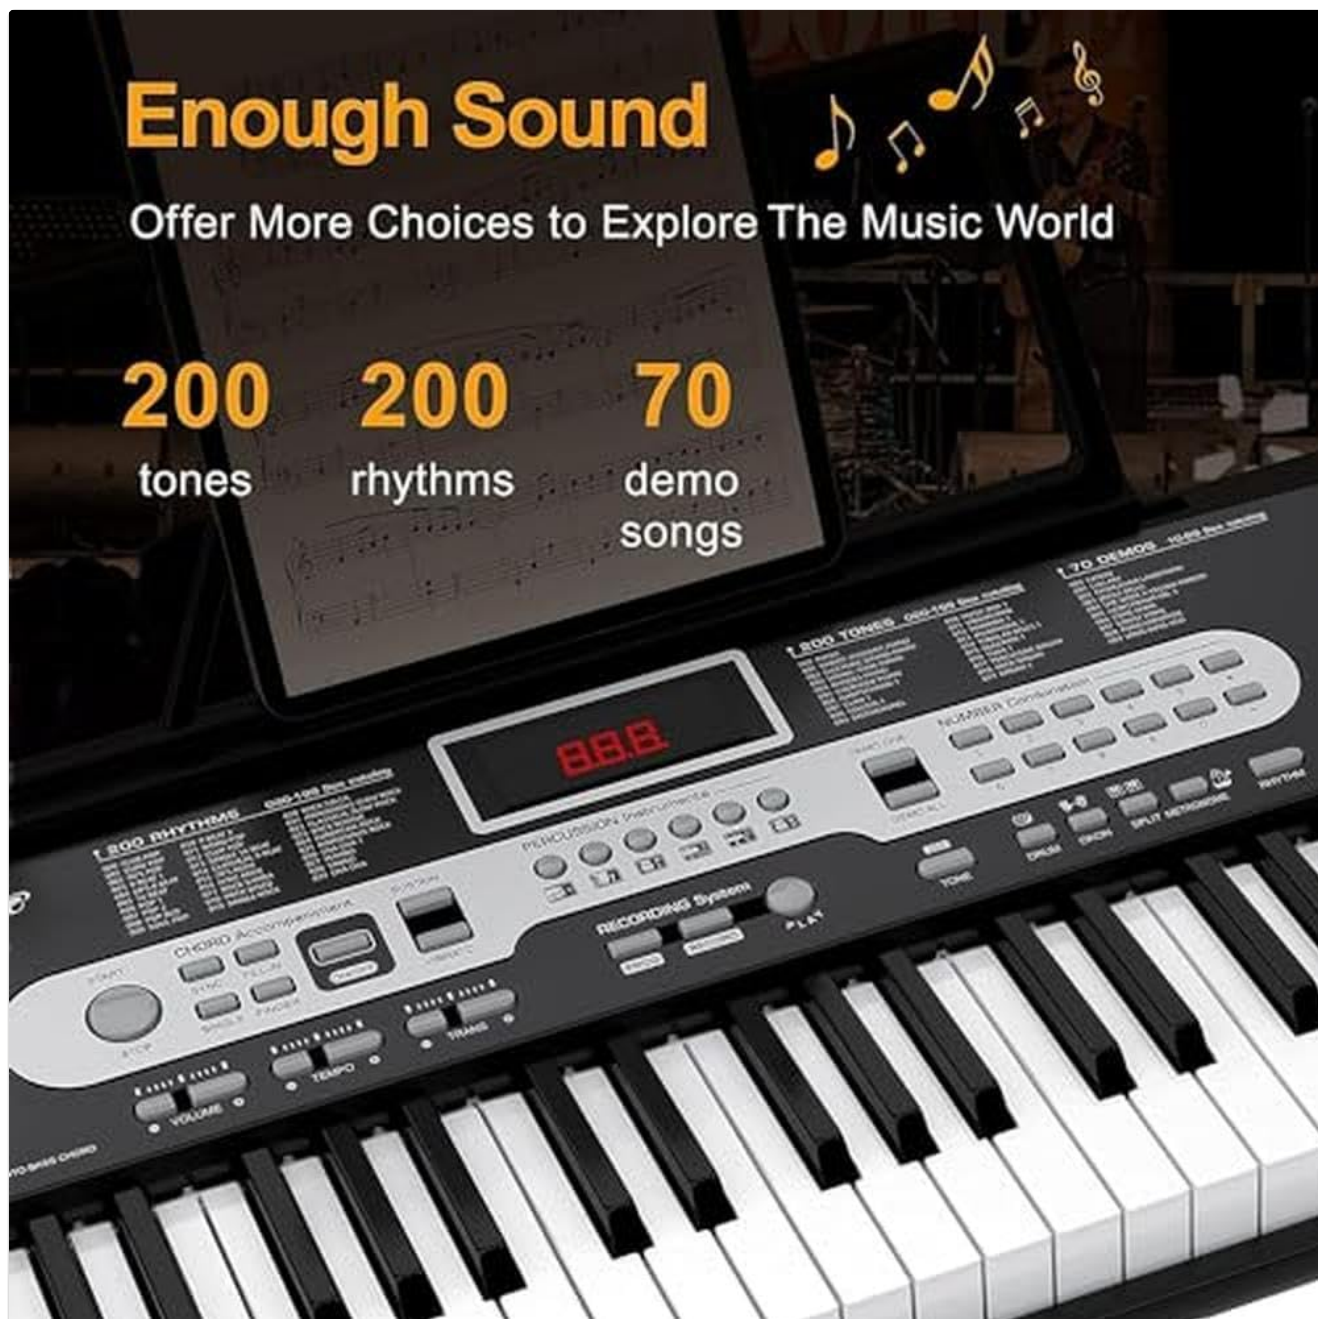


Image: Close-up of the control panel. This image highlights the central display, buttons for selecting tones, rhythms, and demo songs, as well as controls for recording, playback, volume adjustment, and automatic accompaniment features.

Rear Panel Connections



Image: Rear panel connections. This image shows the various input and output ports on the back of the keyboard, including Power In, Audio In, Microphone Out, and Audio Out (Headphone) jacks.

- **Power In:** Connect the provided power adapter here.
- **Audio In:** Connect external audio sources (e.g., MP3 player, phone) to play along.
- **Microphone Out:** Connect the included microphone for vocal input.
- **Audio Out (Headphone):** Connect headphones for private practice or external speakers.

SETUP

1. Power Connection:

- **Using Power Adapter:** Insert the power adapter into the "Power In" jack on the rear panel, then plug the adapter into a standard wall outlet.
- **Using Batteries:** Open the battery compartment on the underside of the keyboard. Insert 6 x 1.5V AA batteries, ensuring correct polarity. Close the compartment securely.

- ### 2. Attach Music Stand:
- If desired, slide the detachable music stand into the slots provided on the top of the keyboard.

3. **Connect Microphone:** Plug the microphone into the "Microphone Out" jack on the rear panel.
4. **Connect Headphones (Optional):** For private practice, plug your headphones into the "Audio Out (Headphone)" jack.
5. **Power On:** Press the **POWER** button to turn on the instrument.

OPERATING INSTRUCTIONS

Basic Playback

Once powered on, the keyboard is ready to play. Adjust the master volume using the dedicated volume controls.

Selecting Tones (200 Tones)

The keyboard offers 200 different instrument sounds (timbres).

1. Press the **TONE** button.
2. Use the number pad or the **+/-** buttons to select a tone number (000-199). The selected tone will be displayed on the screen.

Selecting Rhythms (200 Rhythms)

Choose from 200 built-in rhythms for accompaniment.

1. Press the **RHYTHM** button.
2. Use the number pad or the **+/-** buttons to select a rhythm number (000-199).
3. Press **START/STOP** to begin or end the rhythm.
4. Adjust the tempo using the **TEMPO +/-** buttons.

Automatic Accompaniment

Engage automatic accompaniment to add a full band sound to your playing.

1. Select a rhythm as described above.
2. Press the **CHORD ACCOMPANIMENT** button.
3. Play chords with your left hand in the lower section of the keyboard to trigger automatic accompaniment patterns.

Playing Demonstration Songs (70 Songs)

The keyboard includes 70 pre-recorded demonstration songs.

1. Press the **DEMO SONG** button.
2. Use the number pad or **+/-** buttons to select a song number.
3. Press **PLAY** to start the selected demo song. Press again to stop.

Record Function

Capture your performances using the built-in record mode.

1. Press the **RECORD** button. The display will indicate recording mode.
2. Play your desired melody on the keyboard.
3. Press **PLAY** to stop recording and listen to your recorded performance.
4. To clear the recording, press **RECORD** again.

61 Key Piano Keyboard

Perfect for Beginners of All Skill Levels



Image: A child's hands playing the keys of the 61-Key Portable Electric Piano. This image illustrates the ease of use for beginners and children, highlighting the keyboard layout.

MAINTENANCE

- **Cleaning:** Wipe the surface of the keyboard with a soft, dry cloth. Do not use chemical cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the keyboard in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for a long time to prevent leakage.
- **Transportation:** Handle the instrument carefully during transport to avoid physical damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from the keyboard.	- Power is off. - Volume is too low. - Headphones are connected.	- Ensure power is on and adapter/batteries are working. - Increase the master volume. - Disconnect headphones if using speakers.
Microphone not working.	- Microphone not properly connected. - Microphone volume is low.	- Ensure the microphone is securely plugged into the "Microphone Out" jack. - Check if there's a separate microphone volume control (if applicable) or adjust master volume.
Keyboard powers off unexpectedly.	- Low battery power. - Loose power adapter connection.	- Replace batteries or use the power adapter. - Ensure the power adapter is firmly connected to both the keyboard and the wall outlet.

SPECIFICATIONS

- Model:** sfp-FC-wmDvqSyx3v3MKZ9EbnbyggYk85
- Brand:** coucheta
- Number of Keys:** 61
- Tones:** 200
- Rhythms:** 200
- Demonstration Songs:** 70
- Special Features:** Microphone Input, Headphone Output, Record Function, Automatic Accompaniment, Portable
- Power Supply:** 1.5V AA batteries (x6) or Power Adapter
- Product Dimensions:** 37.4" (L) x 13.78" (W) x 5.51" (H)
- Item Weight:** 8.93 pounds
- Skill Level:** Beginner

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact coucheta customer service through their official channels. Keep your purchase receipt as proof of purchase. For further assistance, you may visit the [coucheta Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question