

E-YOOSO X-45

E-YOOSO X-45 Ergonomic Vertical Mouse

User Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the E-YOOSO X-45 Ergonomic Vertical Mouse. Designed for comfort and versatility, this mouse offers multiple connectivity options and adjustable sensitivity to enhance your computing experience. Please read this manual thoroughly before using the product to ensure proper operation and longevity.



Image 1: E-YOOSO X-45 Ergonomic Vertical Mouse (Red Black)

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x E-YOOSO X-45 Ergonomic Vertical Mouse
- 1 x USB Receiver (2.4G)
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the various components of your E-YOOSO X-45 mouse:

6-BUTTON VERTICAL MOUSE

Improve Your Work Efficiency Greatly



5 Million Button Clicks Life

- | | | |
|----------------------|-------------------|-----------------------------|
| 1. Left Button | 4. Right Button | 7. Backward Button |
| 2. DPI Switch Button | 5. USB Receiver | 8. Power/Mode Switch Button |
| 3. Scroll Wheel | 6. Forward Button | 9. Pairing Button |

Image 2: Labeled components of the E-YOOSO X-45 Vertical Mouse

- 1. Left Button:** Standard left-click function.
- 2. DPI Switch Button:** Adjusts cursor sensitivity (DPI levels).
- 3. Scroll Wheel:** For vertical scrolling and middle-click.
- 4. Right Button:** Standard right-click function.
- 5. USB Receiver:** Stores the 2.4G wireless dongle (located on the bottom of the mouse).
- 6. Forward Button:** Navigates forward in web browsers or file explorers.
- 7. Backward Button:** Navigates backward in web browsers or file explorers.
- 8. Power/Mode Switch Button:** Turns the mouse on/off and switches between connection modes.
- 9. Pairing Button:** Initiates Bluetooth pairing mode.

4. SETUP

4.1 Charging the Mouse

The E-YOOSO X-45 mouse features a rechargeable battery. Use the provided USB-C cable to charge the mouse. A full charge typically takes 2-3 hours and can provide power for 2-3 months of usage, depending on usage patterns.




Image 3: Charging the E-YOOSO X-45 mouse

4.2 Connectivity Modes


The mouse supports three connection modes: 2.4G Wireless, Bluetooth, and Wired.


TRI-MODE CONNECTION



Wired Mode

USB-A to USB-C






BT 5.1


Efficiency Mode






2.4GHz

Performance Mode





Freely choose the connection method

Image 4: Tri-Mode Connection Options

4.2.1 2.4G Wireless Connection

1. Locate the USB receiver stored in the compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the Power/Mode Switch button on the bottom. Select the 2.4G mode.
4. The mouse should connect automatically.

4.2.2 Bluetooth Connection

1. Turn on the mouse using the Power/Mode Switch button on the bottom. Select one of the Bluetooth modes (BT1 or BT2).
2. Press and hold the Pairing Button (9) on the bottom of the mouse until the indicator light flashes, indicating it is in pairing mode.
3. On your device (computer, tablet, smartphone), go to Bluetooth settings and search for new devices.
4. Select "E-YOOSO X-45" (or similar name) from the list of available devices to pair.
5. Once paired, the indicator light will stop flashing.

4.2.3 Wired Connection

1. Connect the USB-C end of the charging cable to the mouse and the USB-A end to your computer.
2. The mouse will automatically switch to wired mode and function without needing a battery or wireless connection.

5. OPERATING INSTRUCTIONS

5.1 DPI Adjustment

The mouse features 5 adjustable DPI (Dots Per Inch) levels, allowing you to customize cursor sensitivity. Press the DPI Switch Button (2) to cycle through the following settings:

- 800 DPI
- 1200 DPI
- 1600 DPI
- 2000 DPI
- 4800 DPI

4800 DPI ULTRA-PRECISE MOVEMENT

5 Adjustable DPI to Meet Your Various Needs

800
DPI



1200
DPI



1600
DPI



2000
DPI



4800
DPI



DPI BUTTON



Image 5: DPI Adjustment Levels

5.2 Button Functions


In addition to standard left and right clicks, the mouse includes:

- **Scroll Wheel (3):** For smooth vertical scrolling. Pressing it acts as a middle-click button.
- **Forward Button (6):** Used for navigating forward in web browsers or file explorers.
- **Backward Button (7):** Used for navigating backward in web browsers or file explorers.

5.3 Ergonomic Design Benefits

The vertical design of the E-YOOSO X-45 mouse promotes a natural 'handshake' wrist and arm posture, which


can help reduce wrist strain and discomfort during prolonged use compared to traditional horizontal mice.

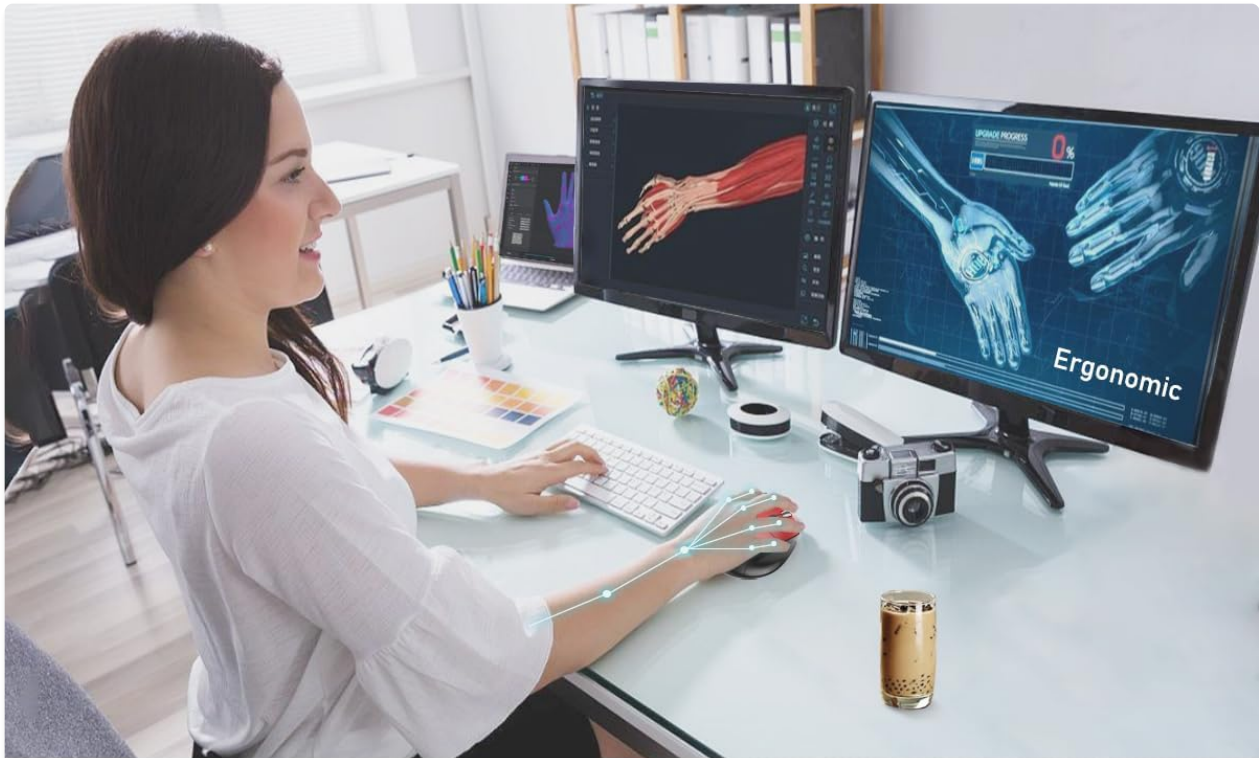

ERGONOMIC DESIGN

Ergonomic Mouse Reduces Wrist Pain

Vertical Mouse

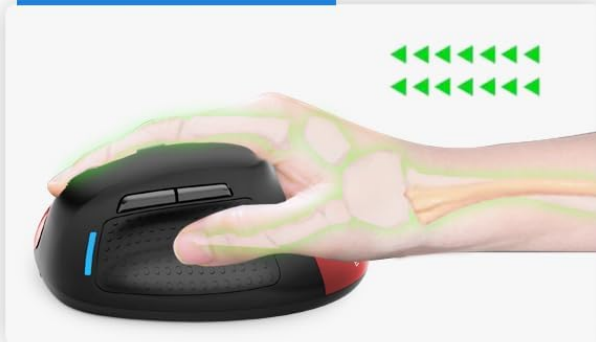

Standard Mouse



Image 6: Ergonomic Design Reduces Wrist Pain

6. MAINTENANCE

To ensure optimal performance and longevity of your E-YOOSO X-45 mouse:

- **Cleaning:** Use a soft, dry cloth to clean the mouse. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, turn off the mouse to conserve battery life. Store in a cool, dry place.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the mouse when the battery

indicator is low.

7. TROUBLESHOOTING

If you encounter issues with your E-YOOSO X-45 mouse, refer to the following common solutions:

| Problem | Possible Cause | Solution |
|----------------------------------|--|---|
| Mouse not responding (2.4G) | Low battery; USB receiver not properly connected; Incorrect mode selected. | Charge the mouse; Re-insert the USB receiver; Ensure the mouse is in 2.4G mode. |
| Mouse not responding (Bluetooth) | Low battery; Not paired; Incorrect mode selected; Device Bluetooth off. | Charge the mouse; Re-pair the mouse; Ensure the mouse is in BT mode; Enable Bluetooth on your device. |
| Cursor erratic or unresponsive | Dirty optical sensor; Unsuitable surface; Low battery. | Clean the optical sensor; Use on a mouse pad or smooth, opaque surface; Charge the mouse. |
| Buttons not functioning | Software conflict; Low battery. | Restart your computer; Charge the mouse. |

8. SPECIFICATIONS







Key technical specifications for the E-YOOSO X-45 Ergonomic Vertical Mouse:

- **Model:** X-45
- **Connectivity:** 2.4G Wireless, Bluetooth (BT 5.1), Wired (USB)
- **DPI Levels:** 800 / 1200 / 1600 / 2000 / 4800 (Adjustable)
- **Buttons:** 6 (Left, Right, Scroll Wheel, DPI Switch, Forward, Backward)
- **Movement Detection:** Optical
- **Special Feature:** Soundless clicks
- **Product Dimensions:** 4.63 x 3.22 x 0.1 inches (Note: The provided dimension 0.1 inches for height seems incorrect for a vertical mouse, typically it would be larger. Please refer to actual product for accurate height.)
- **Item Weight:** 6.4 ounces
- **Manufacturer:** E-YOOSO
- **Compatibility:** Windows, Mac OS, Linux, Android, Chromebook, Laptops, Desktops

9. WARRANTY AND SUPPORT

E-YOOSO products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or the official E-YOOSO website. Keep your purchase receipt as proof of purchase for warranty claims.

Related Documents - X-45

| | |
|---|--|
|  | <p>E-YOOSO X-45 3-Modes Wireless Mouse Quick Start Guide</p> <p>User manual for the E-YOOSO X-45, a versatile 3-modes wireless mouse supporting wired, 2.4GHz, and Bluetooth connectivity. Features ergonomic design, adjustable DPI, power-saving technology, and broad OS compatibility.</p> |
|  | <p>E-YOOSO X-33 Wireless Gaming Mouse User Manual 16000 DPI, RGB, 2.4G</p> <p>User manual for the E-YOOSO X-33 wireless gaming mouse. Features include 16000 DPI, 2.4G wireless connectivity, RGB lighting, and programmable buttons. This guide covers product features, functions, setup, battery, charging, reconnection, warranty, and FCC compliance.</p> |
|  | <p>E-YOOSO X-39 Wired Gaming Mouse User Manual and Specifications</p> <p>Comprehensive user manual for the E-YOOSO X-39 wired gaming mouse, covering features, button functions, software setup, DPI settings, lighting customization, working conditions, troubleshooting, and environmental information.</p> |
|  | <p>E-YOOSO CQ109 Wired Keyboard and Mouse Combo Quick Start Guide</p> <p>This quick start guide provides setup, usage instructions, and troubleshooting for the E-YOOSO CQ109 wired keyboard and mouse combo, including LED lighting modes, multimedia functions, and specifications.</p> |
|  | <p>E-YOOSO E-757 Wireless Keyboard and Mouse Combo: Quick Start Guide and Specifications</p> <p>Get started with your E-YOOSO E-757 2.4GHz wireless keyboard and mouse combo. This guide covers setup, features, specifications, and safety information for this ergonomic, plug-and-play device compatible with Windows and Mac.</p> |
|  | <p>E-YOOSO E-1141 2.4GHz Wireless Mouse Quick Start Guide</p> <p>Quick start guide for the E-YOOSO E-1141 2.4GHz wireless mouse, detailing product features, connection setup, button functions, advanced features, troubleshooting, safety guidelines, warranty, and compliance information.</p> |