

kensen JK-1368

kensen 6D Cordless Bald Head Shaver User Manual

Model: JK-1368

1. OVERVIEW

The kensen 6D Cordless Bald Head Shaver (Model JK-1368) is designed for efficient and comfortable shaving of the head and face. It features 6D rotary floating heads, dual-layer blades, and a magnetic shaver head for easy cleaning. This device supports both wet and dry shaving and is IPX6 waterproof. An integrated LED display provides battery status and other important information.



Image 1.1: The kensen 6D Cordless Bald Head Shaver, showcasing its multi-directional rotary blades.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the kensen 6D Cordless Bald Head Shaver. Failure to follow these instructions may result in injury or damage to the device.

- **Water Usage:** The shaver is IPX6 waterproof and suitable for wet use, including in the shower. However, **do not use the shaver while it is charging**, especially near water sources.
- **Blade Maintenance:** Change blades regularly to maintain optimal shaving performance and prevent skin irritation or cuts.
- **Magnetic Head:** Exercise caution when detaching and reattaching the magnetic shaver head to avoid dropping or losing it during cleaning.
- **Children:** Keep the device out of reach of children.
- **Damage:** Do not use the shaver if it is damaged. Contact customer support for assistance.

3. PRODUCT COMPONENTS

The kensen 6D Cordless Bald Head Shaver includes the following main components:

- Shaver Body with integrated motor and battery.
- 6D Rotary Floating Head with dual-layer blades.
- Magnetic Attachment System for the shaver head.
- LED Display for battery level and status indicators.
- USB-C Charging Port.
- Cleaning Brush (typically included).
- USB-C Charging Cable (typically included).



Image 3.1: The kensen 6D Shaver and its charging base, highlighting the LED display.

BALD HEAD SHAVER

Powerful and Refreshing Shaving

- 
360° Floating Shaving
- 
Increase the Shaving Area
- 
More in line with your facial contours



Image 3.2: Close-up view of the 6D floating shaver heads, designed to adapt to facial contours.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the shaver. Connect the provided USB-C charging cable to the shaver's charging port and a suitable USB power adapter (not included).
2. The LED display will indicate the charging status. A full charge typically takes approximately 2 hours, providing up to 160 minutes of continuous use.
3. Once fully charged, disconnect the shaver from the power source.

4.2 Attaching the Shaver Head

The shaver head attaches magnetically. Align the shaver head with the shaver body and allow the magnets to snap it into place. Ensure it is securely seated before use.



Image 4.1: Illustration of the magnetic shaver head attachment mechanism.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button located on the shaver body to turn the device on or off. The LED display will illuminate when the shaver is active.

5.2 Shaving Technique

The kensen 6D shaver is designed for both head and face shaving.

ONE PRODUCT FOR MULTIPLE USES

Shave Your Face and Head in One Step



Head Shaving



Face Shaving

Image 5.1: The shaver can be used for both head and face shaving.

- **For Head Shaving:** Gently press the shaver against your scalp and move it in small, circular motions. The 6D floating heads will contour to the curves of your head for an even shave.
- **For Face Shaving:** Apply the shaver to your face, moving it in circular motions against the direction of hair growth for a close shave.

6D BALD HEAD SHAVER

Powerful and Refreshing Shaving



360° Floating Shaving



Increase the Shaving Area

More in line with your facial contours,
enjoy a strong and refreshing shaving experience

Image 5.2: Demonstrating the circular motion for effective head shaving.

5.3 Wet and Dry Use

The shaver can be used for both dry shaving and wet shaving with foam or gel, or even in the shower.

SUPPORTS DRY AND WET SHAVING



 **100% Waterproof**
Enjoy shaving while showering

Image 5.3: The shaver supports both wet shaving (in shower) and dry shaving.

5.4 LED Display Indicators

The LED display provides real-time information:

- **Battery Level:** Shows the remaining battery percentage.
- **Charging Indicator:** Illuminates when the device is charging.
- **Low Battery Reminder:** Alerts you when the battery is low.
- **Cleaning Reminder:** May indicate when cleaning is recommended.
- **Travel Lock:** Prevents accidental activation during travel. Activate/deactivate by pressing and holding the power button for a few seconds.

6. MAINTENANCE

6.1 Cleaning the Shaver Head

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver.
2. Gently detach the magnetic shaver head from the body.
3. Rinse the shaver head thoroughly under running water to remove hair clippings and debris. The IPX6 waterproof design allows for easy rinsing.
4. Use the provided cleaning brush to remove any stubborn hair from the blades or inside the head.
5. Allow the shaver head to air dry completely before reattaching it to the shaver body.



Image 6.1: The shaver head is 100% waterproof for easy cleaning under running water.

6.2 Blade Replacement

For best shaving results and to prevent skin irritation, it is recommended to replace the shaver blades every 3-6 months, depending on usage. Replacement heads can be purchased from authorized kensen retailers or the official website.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery; Travel lock activated; Device malfunction.	Charge the shaver; Deactivate travel lock (press and hold power button); Contact customer support.
Poor shaving performance / Does not cut hair effectively.	Blades are dull or clogged; Insufficient battery power; Incorrect shaving technique.	Clean the shaver head thoroughly; Replace blades if dull; Ensure shaver is fully charged; Use circular motions and apply gentle pressure.
Shaver stops during use.	Low battery.	Recharge the shaver.
Skin irritation after shaving.	Blades are dull; Sensitive skin; Dry shaving without preparation.	Replace blades; Try wet shaving with foam/gel; Ensure skin is clean and moisturized.
USB charging port appears exposed/not fully waterproof.	Misunderstanding of IPX6 rating.	The shaver head and body are designed to be rinsed. However, ensure the charging port is dry before charging. Do not charge the device in wet conditions.

8. SPECIFICATIONS

Feature	Detail
Model Number	JK-1368
Power Source	Battery Powered
Special Feature	Rechargeable
Recommended Uses	Beard, Face, Mustache, Scalp
Waterproof Rating	IPX6 (Wet/Dry Use)
Charging Time	Approx. 2 hours (USB-C)
Operating Time	Up to 160 minutes
Dimensions	5.51 x 4.25 x 1.65 inches
Weight	11.68 ounces

9. WARRANTY & SUPPORT

kensen is committed to providing high-quality products and customer service.

- **Warranty:** The kensen 6D Cordless Bald Head Shaver comes with a 12-month replacement warranty.
- **Lifetime Service:** kensen offers lifetime service support for this product.
- **Customer Support:** If you encounter any issues or have questions, please contact kensen customer support.

Our team aims to provide a quick reply within 12 hours.

For further assistance, please refer to the contact information provided with your product packaging or visit the official kensen website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question