



[Manuals.plus](#) /

› [Proscenic](#) /

› Proscenic P13 Vacuum Cleaner User Manual

Proscenic P13

Proscenic P13 Cordless Stick Vacuum Cleaner User Manual

Model: P13 | Brand: Proscenic

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the battery pack, or before performing any maintenance.
- Use only the charger supplied by the manufacturer to recharge.
- Store the appliance indoors in a cool, dry place.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Proscenic P13 vacuum cleaner.



Image: The Proscenic P13 cordless stick vacuum cleaner with its main body, telescopic pipe, floor brush, and various accessories including the crevice tool, 2-in-1 dusting brush, wall mount, power adapter, battery, and HEPA filters.



Image: A detailed diagram labeling the components of the Proscenic P13 vacuum cleaner. Key parts include (1) Main Body, (2) Floor Brush, (3) Telescopic Pipe, (4) Air Outlet HEPA, (5) User Manual, (6) Crevice Tool, (7) 2-in-1 Dusting Brush, (8) Wall Mount, (9) Power Adapter, (10) Battery, and (11) Air Inlet HEPA.

Included Components:

1. Main Body
2. Floor Brush
3. Telescopic Pipe
4. Air Outlet HEPA
5. User Manual
6. Crevice Tool
7. 2-in-1 Dusting Brush
8. Wall Mount
9. Power Adapter
10. Battery (1 Lithium Ion battery included)
11. Air Inlet HEPA (2 included)

3. ASSEMBLY AND SETUP

3.1 Assembling the Vacuum Cleaner

1. **Attach the Telescopic Pipe:** Insert the telescopic pipe into the main body until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the floor brush to the other end of the telescopic pipe, ensuring it locks.
3. **Install the Battery:** Slide the battery pack into the designated slot on the main body until it clicks.



Image: Illustration of how to detach and attach the battery pack to the main vacuum body.

4. **Adjust Telescopic Pipe Length:** Press the release button on the telescopic pipe to adjust its length for comfortable use.



Image: Demonstrates the adjustable length feature of the telescopic pipe for user comfort.

3.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

- Connect the power adapter to the charging port on the battery or the main body.
- Plug the power adapter into a wall outlet.
- The LED display will indicate charging status and battery level. A full charge provides up to 50 minutes of runtime.



Image: The Proscenic P13 vacuum cleaner mounted on its wall bracket, illustrating how it can be stored and charged simultaneously.

4. OPERATION

4.1 Powering On/Off and Suction Modes

- Press the power button to turn the vacuum on or off.
- Use the mode switch button on the LED touch display to cycle through suction modes: Eco, Standard, and Max.

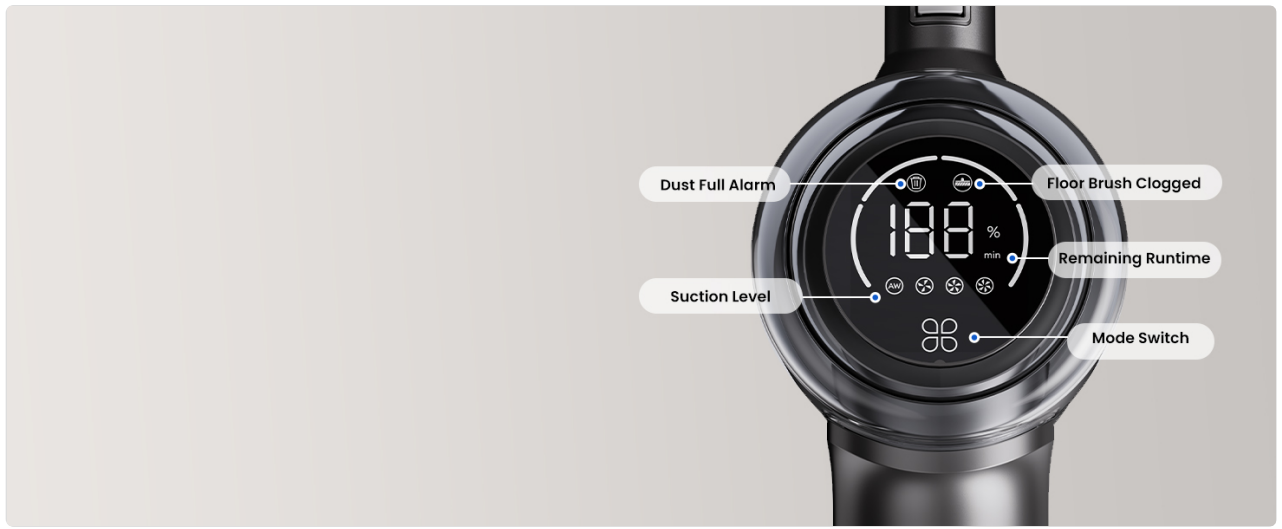


Image: Close-up of the smart LED touch display, indicating battery level, suction performance, remaining runtime, and alerts for brush stuck or suction blockage. The mode switch is also visible.

- The LED display shows the current battery level, suction performance, and remaining runtime. It also provides alerts for a stuck brush or suction blockage.

38000 Pa Powerful Suction

Easily clean any messes, large or tiny



15 kPa
Eco Mode



25 kPa
Standard Mode



38 kPa
Max Mode



Image: The Proscenic P13 vacuum cleaner in action on a hard floor, demonstrating its powerful suction across different modes (Eco, Standard, Max) to clean various debris sizes.

4.2 Using Attachments

The P13 offers versatile cleaning with its included attachments:

- **Floor Brush:** Equipped with a 2-in-1 stiff & soft roller for effective cleaning on carpets, area rugs, and hard floors. It features green LED headlights to illuminate dust.

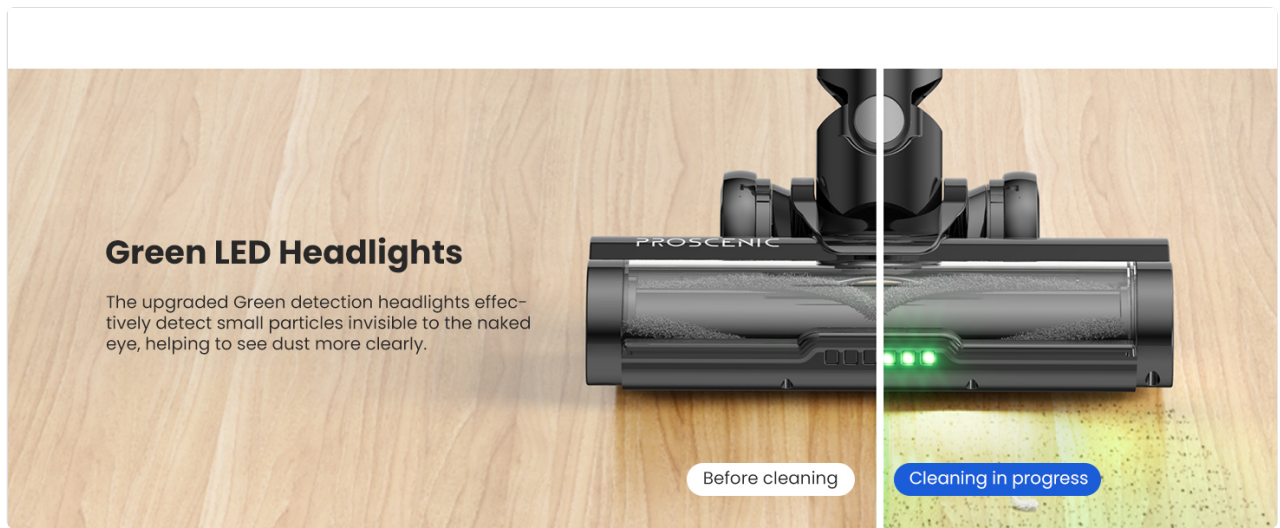


Image: A split image showing the floor before and during cleaning, highlighting how the green LED headlights make invisible dust visible for thorough cleaning.



Image: Diagrams illustrating the flexible movement of the floor brush, capable of 180° swivel and 90° up and down motion for easy maneuverability around obstacles.

- **Crevice Tool:** Ideal for narrow gaps, corners, and edges.
- **2-in-1 Dusting Brush:** Suitable for cleaning delicate surfaces, upholstery, and keyboards.

Versatile 2-WAY Cleaning



Various Brushes Included



Crevice Tool



2-in-1 Dusting Brush



Image: Demonstrates the versatility of the P13, showing it used as a stick vacuum for floors and as a handheld vacuum with the crevice tool for car interiors and the 2-in-1 dusting brush for keyboards.



Image: A collage showing the main floor brush, 2-in-1 brush, crevice brush, and telescopic tube, with examples of their application in various cleaning scenarios.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Cup

- When the dust cup is full, or suction power decreases, empty the dust cup.
- Press the dust cup release button to detach it from the main body.
- Hold the dust cup over a trash bin and press the bottom release latch to open and empty its contents.
- Close the bottom latch and reattach the dust cup to the main body.



Image: A user demonstrating the process of emptying the dustbin by releasing its contents into a trash receptacle.

5.2 Cleaning Filters

The Proscenic P13 uses a multi-stage filtration system including a Cyclone System, Stainless Steel Mesh, Sponge Filter, Air Inlet HEPA, and Air Outlet HEPA.



Image: An exploded view diagram illustrating the multi-layer filtration system of the Proscenic P13, including the cyclone system, stainless steel mesh, sponge filter, and HEPA filters.

- **HEPA Filters (Air Inlet & Air Outlet):** Remove the HEPA filters from the dust cup and air outlet. Tap them gently to remove loose dust. If heavily soiled, rinse under cold running water. Ensure they are completely dry before reinserting.



Image: A person rinsing a HEPA filter under running water, demonstrating the cleaning process.

- **Sponge Filter & Stainless Steel Mesh:** These components can also be rinsed with water. Allow them to air dry completely before reassembly.
- Clean filters regularly (e.g., monthly) depending on usage.

5.3 Cleaning the Floor Brush Roll

- The anti-tangle V-shaped brush is designed to minimize hair wrapping. However, occasional cleaning may be necessary.
- Turn off the vacuum and detach the floor brush.
- Use a coin or screwdriver to unlock the brush roll cover.
- Remove the brush roll and clear any tangled hair or debris.
- Reinsert the brush roll and secure the cover.

Anti-Tangle Floor Brush

V-shaped brush lifts hair and detangles wrapped long hair

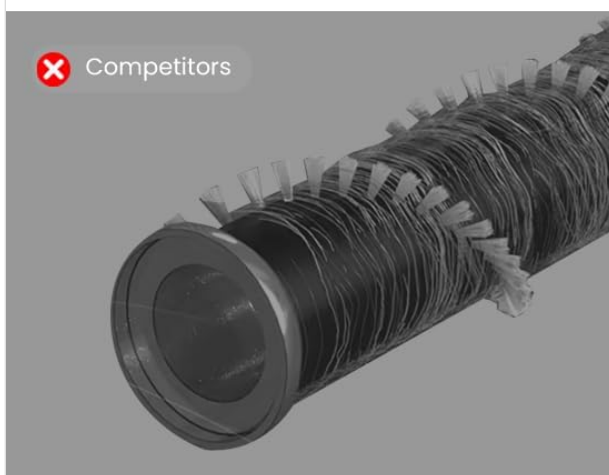


Image: A close-up view of the anti-tangle V-shaped floor brush, designed to lift and detangle long hair and pet hair during cleaning. A comparison shows the P13 brush roll versus a competitor's brush roll with tangled hair.

6. TROUBLESHOOTING

If you encounter issues with your Proscenic P13, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely clicked into place.
Low suction power.	Dust cup is full, filters are clogged, or blockage in the pipe/brush.	Empty the dust cup. Clean all filters. Check the telescopic pipe and floor brush for blockages. The LED display will show a blockage alert.
Brush roll stops rotating.	Hair or debris tangled in the brush roll, or brush roll stuck alert on LED display.	Turn off the vacuum, remove the floor brush, and clear any obstructions from the brush roll.
Short runtime.	Battery not fully charged, or operating in Max mode continuously.	Ensure the battery is fully charged. Use Eco or Standard mode for longer cleaning sessions.

7. SPECIFICATIONS

Feature	Detail
Model Name	P13
Brand	Proscenic
Wattage	550 watts
Suction Power	Up to 45 Kpa
Battery	2,500 mAh Lithium Ion (included)
Runtime	Up to 50 minutes
Dust Cup Capacity	1200 Milliliters
Filter Type	HEPA Filter
Special Features	Cordless, HEPA, Green LED Headlights, High Power, Rechargeable, Anti-Tangle Floor Brush, LED Touch Display
Product Dimensions	9.1"L x 5"W x 14"H
Item Weight	9.66 pounds
Color	Black

8. WARRANTY AND SUPPORT

Proscenic is committed to providing excellent customer service and product support.

- **Warranty:** Your Proscenic P13 Vacuum Cleaner comes with up to a 24-month warranty from the date of purchase. Please retain your proof of purchase for warranty claims.
- **Money-Back Service:** Enjoy a 30-day money-back service from the date of purchase.
- **Customer Support:** A 24/7 rapid responding service team is available to assist with any product-related

inquiries or issues.

- **Service Policy:** For detailed information on warranty, returns, and support, please refer to the official Proscenic website or contact customer service.

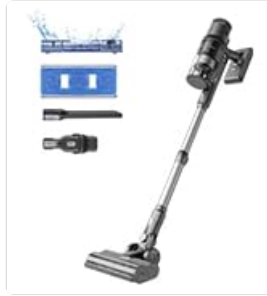


Image: An overview of Proscenic's service policy, highlighting 24/7 support, 30-day money-back guarantee, up to 24-month warranty, and fast shipping.