



[Manuals.plus](#) /

› [Hatteker](#) /

› Hatteker 5-in-1 Professional Hair Trimmer User Manual (Model HT-6072)

Hatteker HT-6072

Hatteker 5-in-1 Professional Hair Trimmer User Manual

Model: HT-6072

INTRODUCTION

Thank you for choosing the Hatteker 5-in-1 Professional Hair Trimmer. This versatile grooming kit is designed for comprehensive hair styling, facial, and body care. It features multiple interchangeable heads and adjustable cutting lengths to meet various grooming needs. Please read this manual carefully before using the device to ensure safe and optimal performance. Keep this manual for future reference.

SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance with a damaged cord or plug, or if it is not working properly, or if it has been dropped or damaged.
- Keep the appliance and its cord away from heated surfaces.
- Do not immerse the charging adapter in water or any other liquid.
- The device is IPX6 waterproof and suitable for wet and dry use. However, ensure the device is completely dry before charging. Do not charge in wet conditions.
- Only use the charging cable and adapter provided with the device.
- Before cleaning, always unplug the appliance from the power outlet.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel for any repairs.

PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, contact customer support.

- Hatteker Trimmer Handle
- Hair Clipper Head

- Precision Trimmer Head
- Nose Trimmer Head
- Shaver Head
- Body Groomer Head
- Adjustable Guide Comb A (1-10mm)
- Adjustable Guide Comb B (11-20mm)
- Cleaning Brush
- USB Charging Cable
- Charging Base



Figure 1: Overview of the Hatteker 5-in-1 Grooming Kit components.

SETUP

1. Charging the Device

1. Before first use, fully charge the trimmer for approximately 2 hours.
2. Ensure the trimmer is switched off before connecting the USB charging cable.
3. Connect the USB cable to the charging base or directly to the trimmer, and plug the other end into a compatible USB power source (e.g., laptop, car charger, power bank, or wall adapter).
4. The LED display will show charging status. A full charge provides up to 100 minutes of cordless use.



Figure 2: USB Charging and LED Display indicating battery status.

2. Attaching and Detaching Trimmer Heads

1. To attach a head: Align the desired head with the trimmer body and push it down until it clicks into place.
2. To detach a head: Press the release button (usually located on the back or side of the head) and pull the head upwards to remove it.

3. Attaching and Adjusting Guide Combs

1. The hair clipper head uses two adjustable guide combs: Comb A (1-10mm) and Comb B (11-20mm).
2. To attach a comb: Slide the desired guide comb onto the hair clipper head until it locks securely.
3. To adjust cutting length: Rotate the dial on the hair clipper head to select your desired length. The dial allows for 41 different length settings in 0.5mm increments.
4. Ensure the comb is firmly attached and the length setting is correct before use.

QUICK ADJUST DIAL FOR UP TO 39 DIFFERENT CUTTING LENGTHS



Figure 3: Adjustable cutting length dial and guide combs.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on: Press the power button once.
- To turn off: Press the power button once.

2. Travel Lock Function

- To activate travel lock: Press and hold the power button for three seconds. The lock icon will appear on the LED display.
- To deactivate travel lock: Press and hold the power button for three seconds. The lock icon will disappear.
- The travel lock prevents accidental activation during transport.

3. Using the Trimmer Heads

Select the appropriate head for your grooming task. Always ensure the blades are clean and free of debris before use.

- **Hair Clipper Head:** Attach the desired guide comb (A or B) and adjust the length using the dial. Move the trimmer against the direction of hair growth for an even cut.
- **Precision Trimmer Head:** Use for detailing beard lines, sideburns, or other precise trimming tasks. Can be used with or without guide combs for specific lengths.
- **Nose Trimmer Head:** Gently insert the trimmer tip into the nostril or ear canal. Move it in a circular motion to trim unwanted hair. Do not insert too deeply.
- **Shaver Head:** For a close shave on smaller areas or to finish edges. Hold the shaver flat against the skin and move in short, gentle strokes.
- **Body Groomer Head:** Use with its dedicated guide comb for trimming body hair. Move smoothly over the skin.



Figure 4: Examples of using the various trimmer heads for different grooming tasks.

4. Wet and Dry Use

The Hattaker trimmer is designed with IPX6 waterproofing, allowing for both wet and dry use. You can use it in the shower or with shaving foam/gel for a comfortable experience. Always ensure the device is dry before charging.

MAINTENANCE

1. Cleaning the Trimmer

1. After each use, turn off the trimmer and detach the head.
2. Rinse the detached head and the trimmer body under running water. The IPX6 rating allows for easy rinsing of the entire device.
3. Use the included cleaning brush to remove any stubborn hair or debris from the blades and inside the head.
4. Allow all parts to air dry completely before reattaching the head or storing the device.

QUICK ADJUST DIAL FOR UP TO 41 DIFFERENT CUTTING LENGTHS



Figure 5: Cleaning the trimmer under running water.

2. Blade Lubrication

For optimal performance and longevity of the blades, it is recommended to apply a small drop of clipper oil to the blades after every few uses, especially after cleaning with water. Turn on the trimmer for a few seconds to distribute the oil evenly.

3. Storage

Store the trimmer and all its accessories in a dry, cool place, away from direct sunlight and out of reach of children. Use the charging base to keep all components organized.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------|---|---|
| Trimmer does not turn on. | Battery is depleted. Travel lock is activated. | Charge the trimmer. Deactivate the travel lock by holding the power button for 3 seconds. |
| Poor cutting performance. | Blades are dull or clogged with hair. Insufficient lubrication. | Clean the blades thoroughly. Apply a drop of clipper oil to the blades. |
| Trimmer stops during use. | Battery is low. | Recharge the trimmer. |
| Charging indicator not working. | Loose connection. Faulty cable/adapter. | Ensure USB cable is securely connected. Try a different USB power source. |

SPECIFICATIONS

| | |
|---------------------------|--------------------------------|
| Brand | Hatteker |
| Model Number | HT-6072 |
| Power Source | Battery Powered |
| Battery Type | 1200 mAh Lithium-ion |
| Charging Time | Approx. 2 hours |
| Run Time | Up to 100 minutes |
| Blade Material | Stainless Steel |
| Waterproof Rating | IPX6 (Washable Body) |
| Max Cutting Length | 20 mm |
| Adjustable Lengths | 41 settings (0.5mm increments) |
| Target Audience | Men |
| Package Dimensions | 20 x 16.4 x 8.1 cm |
| Package Weight | 600 grams |

WARRANTY AND SUPPORT

Hatteker products are manufactured with high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, or visit the official Hatteker website for more information.

For technical support, troubleshooting assistance, or warranty claims, please contact Hatteker customer service through their official website or the contact information provided in your product packaging.

