

[Manuals.plus](#) /

› [IAGREEA](#) /

› IAGREEA 6-in-1 Electric Spin Scrubber User Manual (Model JY9011)

IAGREEA JY9011

IAGREEA 6-in-1 Electric Spin Scrubber User Manual

Model: JY9011 | Brand: IAGREEA

1. INTRODUCTION

Thank you for choosing the IAGREEA 6-in-1 Electric Spin Scrubber. This manual provides essential information for the safe and effective use, assembly, operation, and maintenance of your new cleaning tool. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the appliance away from children.
- Do not immerse the entire unit in water. The brush head is IPX7 waterproof, but the main body should not be submerged.
- Use only the provided charging cable and adapter.
- Do not operate the scrubber if it is damaged or malfunctioning.
- Avoid applying excessive pressure during use, as this may cause the motor to stop automatically to prevent damage.
- Charge the unit fully before first use and if it has not been used for an extended period.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x IAGREEA Electric Spin Scrubber Main Unit
- 1 x Adjustable Extension Handle (3 sections)

- 1 x Large Flat Brush Head
- 1 x Pointed Corner Brush Head
- 1 x Small Flat Brush Head
- 1 x Cleaning Cloth Pad
- 1 x Sponge Pad
- 1 x Fibre Sponge Pad
- 1 x Type-C Charging Cable
- 1 x User Manual



Image 1: The IAGREEA Electric Spin Scrubber main unit, adjustable handle, and various brush heads and pads, along with the charging cable.

4. PRODUCT FEATURES

- **Adjustable Rotation Speed:** Three speed options (290 RPM for daily cleaning, 350 RPM for medium cleaning, 420 RPM for deep cleaning) to suit various tasks.
- **Versatile Brush Heads:** Includes 6 interchangeable brush heads for different cleaning surfaces and

needs.

- **Long-lasting Battery:** Equipped with a 2000mAh battery, providing up to 90 minutes of continuous use on a 3-hour fast charge. Supports Type-C charging.
- **Adjustable Extension Handle:** The handle features a 3-section design, allowing adjustment from 15 inches to 39.5 inches for reaching high or low areas without strain.
- **Waterproof Design:** The brush head is IPX7 waterproof for safe use in wet environments.

5. SETUP AND ASSEMBLY

Follow these steps to assemble your electric spin scrubber:

1. **Attach the Handle:** Align the main scrubber unit with the desired handle section (or directly with the short handle for handheld use). Twist clockwise until securely locked. For extended reach, connect additional handle sections by twisting them together.
2. **Select and Attach Brush Head:** Choose the appropriate brush head for your cleaning task. Align the brush head with the rotating base of the scrubber unit and press firmly until it clicks into place.

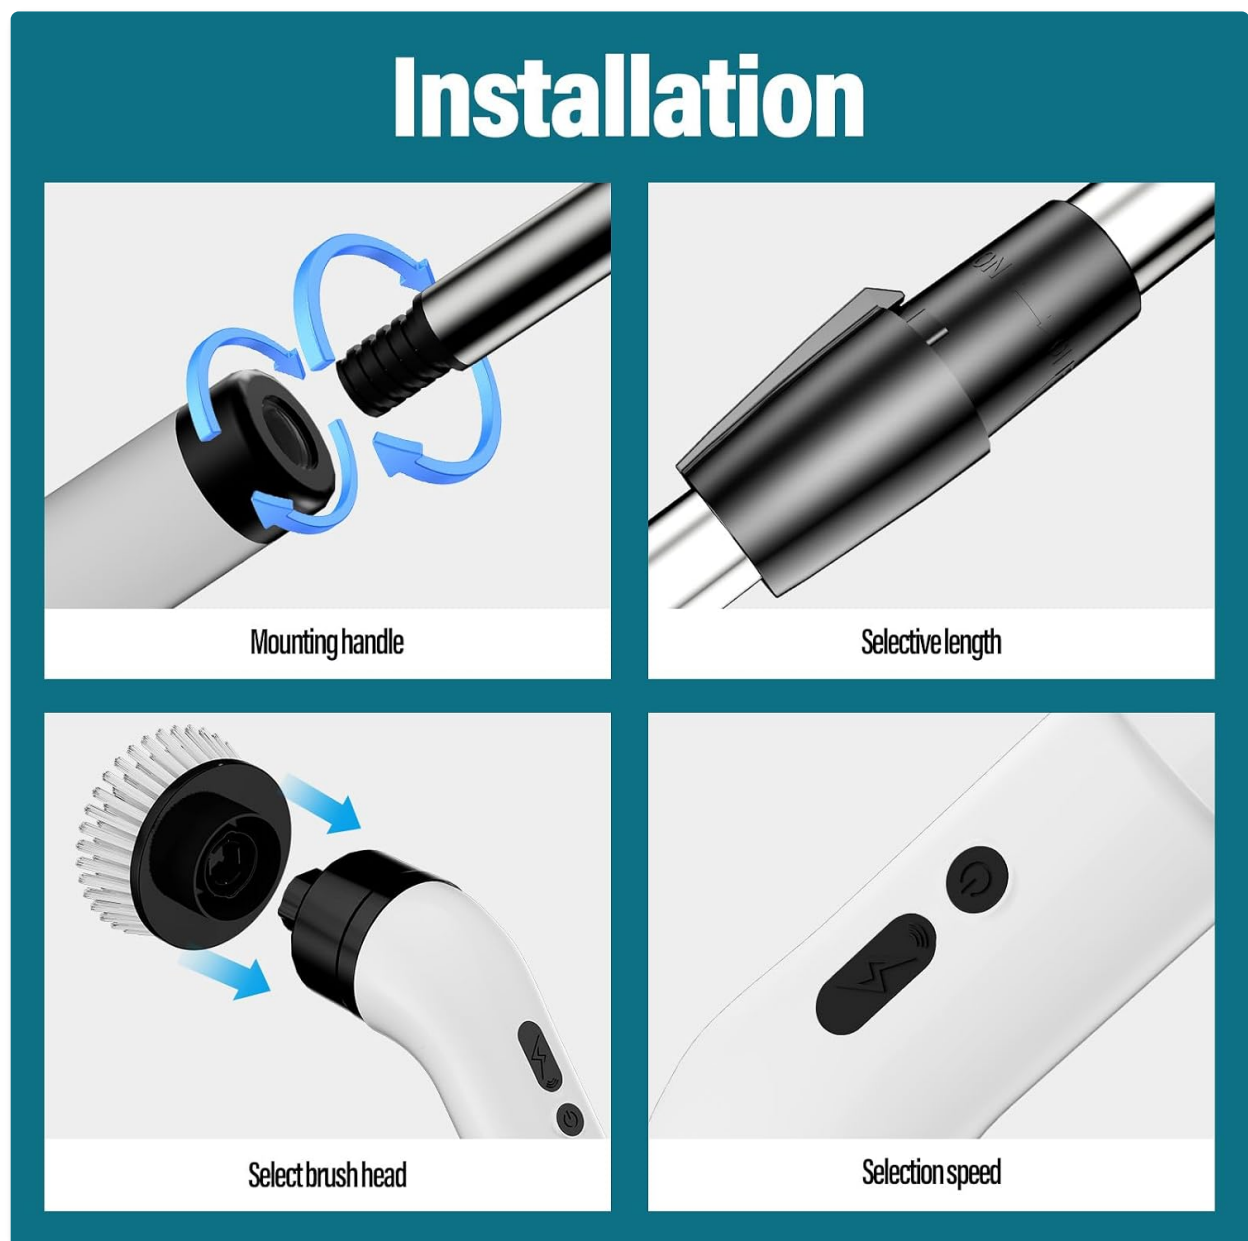


Image 2: Visual guide for mounting the handle and attaching a brush head to the scrubber unit.

6. OPERATING INSTRUCTIONS

To operate your IAGREEA Electric Spin Scrubber:

1. **Power On/Off:** Press the power button once to turn the scrubber on. Press it again to turn it off.
2. **Adjust Speed:** While the scrubber is on, press the speed selection button (often indicated by a lightning bolt or wave icon) to cycle through the three available speeds: 290 RPM (low), 350 RPM (medium), and 420 RPM (high). Select the speed appropriate for your cleaning task.
3. **Cleaning:** Apply a suitable cleaning solution to the surface or brush head. Gently guide the rotating brush over the area to be cleaned. Avoid excessive pressure.



Image 3: The scrubber demonstrating its three speed options: 290 RPM for daily cleaning, 350 RPM for medium cleaning, and 420 RPM for deep cleaning.

7. CHARGING INSTRUCTIONS

Ensure your scrubber is adequately charged for optimal performance.

- **Charging Port:** Locate the Type-C charging port on the main unit.

- **Connect Charger:** Insert the Type-C charging cable into the port and connect the other end to a compatible USB power adapter (not included) or USB port.
- **Charging Indicator:** The indicator light will blink when the power is low, signaling that charging is recommended. The light will change to a solid color when fully charged.
- **Charging Time:** A full charge typically takes approximately 3 hours.
- **Battery Life:** A fully charged battery provides up to 90 minutes of continuous use.



Image 4: Details on the scrubber's 2000mAh battery, Type-C charging port, 3-hour fast charging capability, and 90 minutes of usage time per charge.

8. BRUSH HEAD USAGE GUIDE

The IAGREEA Electric Spin Scrubber comes with 6 different cleaning attachments, each designed for specific tasks:

- **Large Flat Brush:** Ideal for cleaning large flat surfaces such as living room floors, walls, and wide tile areas.
- **Pointed Corner Brush:** Designed to reach into tight corners, grout lines, and other hard-to-access areas like car rims.

- **Small Flat Brush:** Suitable for smaller flat surfaces, such as kitchen sinks, stovetops, and gas hoods.
- **Cleaning Cloth Pad:** Best for delicate surfaces like windows, mirrors, and glass, providing a streak-free clean.
- **Sponge Pad:** Effective for general cleaning of tables, countertops, and other smooth surfaces.
- **Fibre Sponge Pad:** Specifically designed for tackling heavy oil stains and stubborn grime on various surfaces.



Image 5: A visual guide to the different brush heads and pads, illustrating their specific applications for various cleaning tasks.

9. MAINTENANCE

Proper maintenance ensures the longevity and performance of your scrubber.

- **Cleaning the Unit:** After each use, wipe the main unit and handle with a damp cloth. Do not rinse the entire unit under running water or immerse it.
- **Cleaning Brush Heads:** Remove the brush heads and rinse them thoroughly under running water to remove any dirt or cleaning solution residue. Allow them to air dry completely before storing.
- **Storage:** Store the scrubber and its accessories in a clean, dry place, away from direct sunlight and

extreme temperatures.

- **Battery Care:** If the scrubber will not be used for an extended period, charge it periodically (e.g., every 3 months) to maintain battery health.

10. TROUBLESHOOTING

If you encounter any issues with your IAGREEA Electric Spin Scrubber, refer to the following common solutions:

- **Scrubber Not Turning On:** Ensure the unit is fully charged. If it has been stored for a long time, charge it for at least 3 hours.
- **Scrubber Stops During Use:** This may occur if excessive pressure is applied. Reduce pressure on the brush head. The motor has an overload protection feature to prevent damage.
- **Reduced Performance:** Check if the brush head is worn out and needs replacement. Ensure the battery is fully charged.
- **Difficulty Attaching/Detaching Brush Heads:** Ensure proper alignment and apply firm, even pressure when attaching. Twist gently to detach.

If the problem persists after trying these steps, please contact customer support.

11. SPECIFICATIONS

Specification	Detail
Brand	IAGREEA
Model Number	JY9011
Color	White
Handle Material	Stainless Steel
Product Dimensions	17.3"L x 6.6"W x 3.5"H (compact)
Adjustable Handle Length	15 inches to 39.5 inches
Battery Capacity	2000mAh
Charging Time	Approx. 3 hours
Operating Time	Up to 90 minutes
Rotation Speeds	290 RPM, 350 RPM, 420 RPM
Waterproof Rating	IPX7 (brush head)
Item Weight	2.14 pounds
Surface Recommendation	Tile, Porcelain, Wood, Plastic, Glass, Grout

12. WARRANTY AND SUPPORT

IAGREEA products are manufactured to high-quality standards. For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

© 2024 IAGREEA. All rights reserved.