

[Manuals.plus](#) /

› [onerbl](#) /

› Onerbl AC-DC Adapter SAW30A-190-1500U User Manual

onerbl SAW30A-190-1500U

Onerbl AC-DC Adapter SAW30A-190-1500U User Manual

Model: SAW30A-190-1500U

INTRODUCTION

Thank you for choosing the Onerbl AC-DC Adapter SAW30A-190-1500U. This power supply is designed to provide reliable AC-to-DC power conversion for compatible portable power stations, allowing you to operate your device or charge its battery from standard electrical outlets. This manual provides essential information for the safe and efficient use of your adapter.

SAFETY INFORMATION

- Read all instructions before use.
- Do not expose the adapter to moisture or extreme temperatures.
- Ensure the adapter's voltage and current ratings match your device's requirements.
- Do not disassemble or modify the adapter.
- Keep out of reach of children.
- Unplug the adapter from the power outlet when not in use.

PACKAGE CONTENTS

- 1 x Onerbl AC-DC Adapter (Model: SAW30A-190-1500U)
- 1 x AC Power Cord



Image: The included AC power cord, typically used to connect the adapter to a wall outlet.

SETUP

1. **Connect the AC Power Cord:** Insert the female end of the AC power cord into the AC input port on the adapter unit.



Image: The Onerbl AC-DC Adapter unit, showing its overall dimensions and connection points. The AC input port is typically on one side, and the DC output cable is permanently attached.

2. **Connect to Power Outlet:** Plug the male end of the AC power cord into a standard wall electrical outlet (100-240V AC, 50/60Hz).
3. **Connect to Device:** Insert the DC output barrel connector from the adapter into the DC input port of your compatible portable power station. Ensure a secure connection.



Image: The AC-DC adapter in use, with the AC power cord plugged into a wall outlet and the DC output connected to a portable power station (partially visible).

OPERATING INSTRUCTIONS

Once the adapter is properly connected to both the power outlet and your device, it will begin supplying power or charging the device's battery.

- A small LED indicator on the adapter unit may illuminate to show that it is receiving power.
- Refer to your portable power station's manual for specific charging indicators and times.
- Disconnect the adapter from the power station and wall outlet when charging is complete or when the adapter is not in use.

MAINTENANCE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture when not in use. Avoid wrapping the cables too tightly.
- **Inspection:** Periodically inspect the adapter and cables for any signs of damage, such as frayed wires or cracked

casings. If damage is found, discontinue use immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Adapter not supplying power.	- Not properly plugged into wall outlet. - Not properly connected to the device. - Wall outlet is not active. - Adapter or cable is damaged.	- Ensure all connections are secure. - Test the wall outlet with another device. - Inspect adapter and cables for damage. If damaged, replace the adapter.
Device not charging.	- Adapter output specifications do not match device requirements. - Device's charging port is faulty. - Device battery is fully charged or faulty.	- Verify adapter compatibility with your device's specifications. - Consult your device's manual or manufacturer.
Adapter feels hot during use.	- Normal operation under load. - Poor ventilation. - Overload or internal fault.	- Ensure adequate airflow around the adapter. - If excessively hot or emitting smoke/smell, unplug immediately and discontinue use.

SPECIFICATIONS

Feature	Detail
Brand	Onerbl
Model Number	SAW30A-190-1500U
Input Voltage	100-240V AC, 50/60Hz (Typical)
Output Voltage	19 Volts DC
Output Amperage	1.5 A
Output Wattage	28.5 Watts (19V * 1.5A)
Connector Type	Barrel Connector
Color	Black
Manufacturer	Shenzhen Waweis Technology Co., Ltd



Image: Detailed diagram showing the dimensions of the AC-DC adapter unit and its attached cables. The total cable length is approximately 127.8 inches.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Ensure you have your product model number (SAW30A-190-1500U) and purchase details available.

© 2023 Onerbl. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question