

[Manuals.plus](#) /

› [IAGREEA](#) /

› IAGREEA 9-in-1 Electric Spin Scrubber User Manual

## IAGREEA 8011

# IAGREEA 9-in-1 Electric Spin Scrubber User Manual

Model: 8011

## 1. INTRODUCTION

Welcome to the IAGREEA 9-in-1 Electric Spin Scrubber user manual. This guide provides detailed instructions for the safe and effective use, assembly, maintenance, and troubleshooting of your new cleaning device. Please read this manual thoroughly before first use and keep it for future reference.

### Important Safety Information

- Do not immerse the entire electric spin scrubber in water. Only the brush heads are designed for contact with water during cleaning.
- Ensure the charging port is dry before connecting the Type-C charging cable.
- Keep out of reach of children.
- If excessive force is applied during operation, the motor overload protection function will automatically stop the device to prevent damage. Press the switch again to resume operation.

## 2. PRODUCT OVERVIEW

The IAGREEA 9-in-1 Electric Spin Scrubber is designed to simplify your cleaning tasks with its powerful motor, adjustable speeds, and versatile brush heads.

### Package Contents

- Electric Spin Scrubber Main Unit (with integrated liquid storage handle)
- 9 Replaceable Brush Heads:
  - Dome Brush
  - Large Flat Brush
  - Small Flat Brush
  - Corner Brush

- Cloth Brush
- Hair-like Brush
- Fibrous Sponge
- Sponge Brush
- Large Fabric (Wool Cloth)
- Type-C Charging Cable
- Adapter (for certain brush heads)

## Component Identification



Figure 2.1: Overview of the Electric Spin Scrubber and its accessories.

The main unit consists of the handle with integrated liquid storage, the power unit with control buttons, and the brush attachment point. Various brush heads are included for different cleaning needs.



Figure 2.2: Electric Spin Scrubber main unit with liquid storage and controls.

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge the electric spin scrubber. Connect the Type-C charging cable to the charging port on the main unit and plug the other end into a compatible USB power adapter (not included). A full charge takes approximately 3 hours and provides up to 120 minutes of working time.



Figure 3.1: Charging the Electric Spin Scrubber. It features a 1500mAh battery, 3-hour charge time, and 120 minutes of battery life.

### 3.2 Assembling Brush Heads

To attach a brush head, align the brush head with the attachment point on the main unit and twist until it clicks securely into place. Some brush heads, such as the main cleaning brush, require an adapter for proper attachment. Ensure the adapter is securely fitted before attaching the brush head.



Figure 3.2: Attaching the cleaning brush head using the adapter.

For brush heads that use Velcro, ensure the black Velcro disc is firmly glued to the black disc on the scrubber before attaching other parts of the brush head.



Figure 3.3: Proper attachment of Velcro-based brush head components.

### 3.3 Filling the Liquid Storage Bottle

To fill the integrated liquid storage bottle, open the handle and pour in your desired cleaning solution. Close the handle securely. The liquid storage allows for convenient dispensing during cleaning.



# Liquid Storage Design Convenient To Use

Comes with a storage bottle,  
can be added once and used  
multiple times

Figure 3.4: Filling the liquid storage bottle in the handle.

## 4. OPERATING INSTRUCTIONS

### 4.1 Powering On and Speed Adjustment

Press the power button once to turn on the scrubber. The device features two adjustable speeds:

- **Standard Speed (170 RPM):** Ideal for regular cleaning tasks.
- **High Speed (200 RPM):** Suitable for stubborn stains and deep cleaning.

To switch between speeds, press the power button again. The device will cycle between Standard, High, and Off with subsequent presses.

# A Good Helper For Household Cleaning



Figure 4.1: Two speed modes for versatile cleaning.

## 4.2 Using Different Brush Heads

Select the appropriate brush head for your cleaning task:

- **Large Brush:** Suitable for living room floor use.
- **Pointed Brush:** Designed for cleaning corners and tight spaces.
- **Small Brush:** Ideal for cleaning gas hoods and smaller areas.
- **Fibre Sponge:** Effective for cleaning heavy oil stains.
- **Sponge:** Can be used for general cleaning of tables and other surfaces.
- **Wool Cloth:** Recommended for cleaning car interiors.
- **Cloth:** Suitable for cleaning windows.
- **Cleaning Brush:** A versatile brush for all-around cleaning.



Figure 4.2: Examples of brush head applications (Part 1).

# 2 Speed Mode Options



**170RPM**  
for daily cleaning



**200RPM**  
for deep cleaning

Figure 4.3: Examples of brush head applications (Part 2).

## 4.3 Motor Overload Protection

The scrubber is equipped with a motor overload protection function. If excessive pressure is applied during cleaning, the device will automatically stop to prevent damage to the motor. To resume operation, release the pressure and press the power switch again.

## 5. MAINTENANCE

### 5.1 Cleaning the Scrubber

After each use, remove the brush head and rinse it thoroughly under running water. It is important to note that the entire cleaning brush unit cannot be soaked in water. Only the removable brush heads are designed to be cleaned with water.



Figure 5.1: Do not immerse the entire scrubber in water for cleaning.

## 5.2 Storage

Store the electric spin scrubber in a dry place, away from direct sunlight and extreme temperatures. Ensure the device is clean and dry before storing.

## 6. TROUBLESHOOTING

| Problem                          | Possible Cause                                                 | Solution                                                                                    |
|----------------------------------|----------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| Scrubber stops during operation. | Motor overload protection activated due to excessive pressure. | Release pressure and press the power switch again to resume. Avoid applying too much force. |
| Scrubber does not turn on.       | Battery is low or depleted.                                    | Charge the device fully (refer to Section 3.1).                                             |

| Problem                           | Possible Cause                                       | Solution                                                                                                   |
|-----------------------------------|------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| Brush head is loose or falls off. | Brush head not properly attached or adapter missing. | Ensure the brush head is twisted securely into place. If required, use the adapter (refer to Section 3.2). |
| Liquid dispenser not working.     | Liquid storage empty or clogged.                     | Refill the liquid storage (refer to Section 3.3). Check for any blockages in the dispensing mechanism.     |

## 7. SPECIFICATIONS

- **Brand:** IAGREEA
- **Model Number:** 8011
- **Color:** White
- **Handle Material:** Alloy Steel
- **Product Dimensions:** 13.3"L x 5.5"W x 3.7"H
- **Included Components:** Electric Spin Scrubber, 9 Brush Heads, Type-C Charging Cable, Adapter
- **Surface Recommendation:** Tile, Glass, Porcelain, Ceramic, Linoleum, Vinyl
- **Number of Items:** 1
- **Item Firmness Description:** Soft
- **Battery Capacity:** 1500mAh
- **Charging Time:** Approximately 3 hours
- **Working Time:** Up to 120 minutes
- **Speeds:** 2 (170 RPM for daily cleaning, 200 RPM for deep cleaning)
- **Item Weight:** 1.52 pounds

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact IAGREEA customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.