

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Furmax](#) /

> [Furmax Ergonomic High-Back Office Chair with Footrest \(Model MY0240486001AA\) User Manual](#)

Furmax MY0240486001AA



Furmax Ergonomic High-Back Office Chair with Footrest

Model: MY0240486001AA

INTRODUCTION

Thank you for choosing the Furmax Ergonomic High-Back Office Chair with Footrest. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read these instructions carefully before assembly and retain them for future reference. This chair is designed to provide comfort and support for extended periods of use in an office or home environment.

SAFETY INFORMATION

WARNING: Always assemble the chair according to the provided instructions. Do not exceed the maximum weight capacity of 400 lbs. Use the chair on stable, even surfaces. Keep fingers and other body parts away from moving parts when adjusting the chair. Always engage the locking mechanism when not in use to prevent unexpected reclining.

- Ensure all bolts and screws are securely tightened before use.
- Periodically check all fasteners to ensure they remain tight.
- Do not stand on the chair.
- Avoid exposing the chair to direct sunlight or extreme temperatures to prevent material degradation.
- Keep children and pets away from the chair during assembly.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Backrest
- Seat Cushion with Armrests
- Footrest Assembly
- Gas Lift Cylinder
- Base (5-star)

- Casters (5 pieces)
- Mechanism Plate
- Hardware Pack (screws, washers, Allen wrench)

SETUP AND ASSEMBLY

Assembly typically takes 20-25 minutes. It is recommended to have a second person assist with certain steps.

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the 5-star base. Push firmly until they click into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the assembled 5-star base.
3. **Attach Mechanism Plate to Seat:** Align the mechanism plate with the pre-drilled holes on the underside of the seat cushion. Ensure the front of the mechanism faces the front of the seat. Secure with screws and washers using the provided Allen wrench.
4. **Attach Backrest to Seat:** Align the backrest with the mounting brackets on the seat cushion. Secure with screws and washers.
5. **Attach Footrest:** Slide the footrest assembly into the designated slots under the seat cushion.
6. **Connect Seat to Gas Lift:** Carefully place the assembled seat onto the gas lift cylinder, ensuring it is centered.



Image: The Furmax Office Chair with its footrest extended, showcasing its design and features. This image provides a visual reference for the fully assembled product.

PRODUCT DIMENSION



Image: A diagram illustrating the key dimensions of the Furmax Office Chair, including height, width, depth, and footrest extension. This helps in understanding the chair's physical footprint and adjustability.

OPERATING INSTRUCTIONS

Your Furmax office chair offers several adjustment features for personalized comfort.

- **Seat Height Adjustment:** To raise the seat, lift the lever on the right side while taking your weight off the seat. To lower the seat, lift the lever while seated. Release the lever at the desired height.
- **Backrest Recline (90°-135°):** Pull the lever on the left side to unlock the backrest. Lean back to your desired angle (between 90° and 135°). Push the lever back down to lock the backrest in position.
- **Footrest Extension:** Pull the footrest handle located under the front of the seat to extend the footrest. Push it back in to retract.
- **Swivel Function:** The chair features a 360° swivel for easy movement and access to your workspace.
- **Linkage Armrests:** The armrests are designed to move with the backrest when reclining, providing continuous arm support.



ERGONOMIC HIGH BACK OFFICE DESK CHAIR



Superior Comfort



High-End Appearance



Excellent Functionality

Image: A visual representation of the chair's 90-135 degree adjustable backrest, illustrating different modes like working, relaxation, and nap. This highlights the versatility of the recline function.



135° ADJUSTABLE BACKREST

Adjust to a comfortable angle



Adjustable Seat Back



Adjustable Height



Working Mode



Relaxation Mode



Nap Mode

Image: An illustration detailing the ergonomic design elements of the chair, including the thickened padded headrest, shaped adjustable backrest, and lumbar support. This explains how the chair supports spinal health.

MAINTENANCE

Proper care will extend the life and appearance of your chair.

- **Cleaning:** For general cleaning, wipe the leather surface with a soft, damp cloth. For tougher stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary.
- **Lubrication:** If the chair develops squeaks, apply a small amount of silicone-based lubricant to moving parts, such as the gas lift or mechanism plate.
- **Avoid Damage:** Do not drag the chair across rough surfaces. Lift it when moving to prevent damage to the casters or base.

SOFT & WIDE ARMRESTS

Relax into soft and expansive support

 


Image: A close-up showing the texture and properties of the chair's high-quality leather, emphasizing its waterproof and easy-to-clean nature, as well as its strength and elasticity. This illustrates the material's durability and ease of care.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not adjust height	Gas lift not engaged or faulty.	Ensure the lever is fully pulled. If still unresponsive, the gas lift may need replacement.
Chair squeaks	Loose connections or lack of lubrication.	Tighten all screws and bolts. Apply silicone lubricant to moving parts and joints.
Backrest does not recline or lock	Recline mechanism jammed or faulty.	Check for obstructions. Ensure the recline lever is fully engaged or disengaged.
Chair feels unstable	Loose base connections or damaged casters.	Verify all base screws are tight. Inspect casters for damage and replace if necessary. Ensure chair is on a flat surface.

SPECIFICATIONS

Feature	Detail
Brand	Furmax
Model Number	MY0240486001AA
Color	Black
Product Dimensions	18.9"D x 21.26"W x 48"H
Maximum Weight Recommendation	400 Pounds
Back Style	Solid Back
Special Features	Adjustable Backrest, Adjustable Height, Foot Rest

Feature	Detail
Reclining Position Count	Multiple (90°-135°)
Furniture Finish	Leather (Faux Leather)
Fill Material	Foam
Item Weight	40.1 pounds
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Furmax customer service. Details regarding specific warranty periods and coverage are typically provided with your purchase documentation or can be obtained directly from the manufacturer. If you encounter any issues or have questions about your product, please reach out to the seller or manufacturer through the platform where you made your purchase. Have your model number (MY0240486001AA) and purchase date ready for faster assistance.