



Manuals.plus /

› VINABTY /

› Replacement Remote Control BN59-01358B User Manual

VINABTY BN59-01358B

VINABTY Replacement Remote Control User Manual

Model: BN59-01358B

[Product Overview](#) [Specifications](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The VINABTY Replacement Remote Control, model BN59-01358B, is designed as a direct substitute for various Samsung Smart TV, Crystal UHD 4K TV, and NEO QLED LED Televisions. This remote control is compatible with a wide range of Samsung TV models, including but not limited to those originally supplied with remote models BN59-01388A, BN59-01388B, BN59-01388C, BN59-01358D, BN59-01357L, BN59-01357F, BN59-01357A, BN59-01363A, BN59-01363C, BN59-01363J, BN59-01363L, and BN59-01380A.

It requires no programming and is ready to use immediately after battery installation, offering a simple and convenient solution for controlling your compatible Samsung television.



Figure 1.1: Front view of the VINABTY Replacement Remote Control BN59-01358B. This image displays the sleek black design of the remote, highlighting its primary buttons including power, number pad access, color buttons, navigation pad, back, home, play/pause, volume, channel, Netflix, Prime Video, and Samsung TV Plus dedicated buttons.

Key Features:

- Direct replacement for specified Samsung TV remote models.
- No programming or pairing required; ready to use out of the box.
- Ergonomic design for comfortable handling.
- Dedicated buttons for popular streaming services (Netflix, Prime Video, Samsung TV Plus).

- Operates on 2 x AAA batteries (not included).

2. SPECIFICATIONS



Figure 2.1: Dimensions of the VINABTY Replacement Remote Control. This image illustrates the remote control with measurements, showing a length of approximately 6.3 inches and a width of approximately 1.38 inches.

Product Specifications

Feature	Detail
Model Number	BN59-01358B
Brand	VINABTY
Compatible Devices	Samsung Smart TV, Crystal UHD 4K TV, NEO QLED LED Televisions
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6 x 2 x 0.5 inches (approximately 15.24 x 5.08 x 1.27 cm)
Item Weight	1.9 ounces (approximately 53.86 grams)
Color	Black
Special Feature	Ergonomic design

3. SETUP

3.1 Battery Installation

To begin using your VINABTY Replacement Remote Control, you must first install the batteries. This remote requires two (2) AAA batteries.

1. Locate the battery compartment cover on the back of the remote control. It typically has a small arrow or indentation indicating where to push or slide.
2. Gently slide the battery compartment cover downwards or push the tab and lift to remove it.
3. Insert two (2) AAA batteries into the compartment, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3.1: Battery compartment of the remote control with the cover removed, showing the slots for two AAA batteries. This image clearly illustrates how to access the battery area for installation or replacement.

3.2 Initial Use

This replacement remote control is designed for immediate use with compatible Samsung TVs without the need for any programming or pairing. Once the batteries are correctly installed, point the remote control towards your Samsung TV and begin operating it.

4. OPERATING INSTRUCTIONS

The VINABTY Replacement Remote Control provides full functionality for your compatible Samsung Smart TV. Below are the primary functions of the buttons:



Figure 4.1: Angled view of the remote control, showcasing its ergonomic design and button layout. This perspective highlights the comfortable grip and accessible button placement for ease of use.

- **Power Button (⏻):** Turns the TV on or off.
- **123 Button:** Accesses the on-screen numeric keypad for direct channel input or other numerical functions.
- **Color Buttons (Red, Green, Yellow, Blue dots):** Used for specific functions within menus or applications, as indicated on the TV screen.

- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus, selects options, and confirms choices.
- **Back Button (↶):** Returns to the previous screen or menu.
- **Home Button (△):** Opens the Smart Hub or main home screen of the TV.
- **Play/Pause Button (⏮):** Controls media playback (play, pause).
- **Volume Buttons (+/-):** Increases or decreases the TV volume.
- **Channel Buttons (Up/Down arrows):** Changes TV channels.
- **Netflix Button:** Direct access to the Netflix streaming application.
- **Prime Video Button:** Direct access to the Amazon Prime Video streaming application.
- **Samsung TV Plus Button:** Direct access to the Samsung TV Plus streaming service.

Ensure there are no obstructions between the remote control and the TV's infrared receiver for optimal performance.

5. MAINTENANCE

5.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt or grime, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's finish or internal components.
- Ensure no liquid enters the remote control, especially around the buttons or battery compartment.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation.

Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

If you experience issues with your VINABTY Replacement Remote Control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly installed batteries.	Check battery orientation. Replace with fresh AAA batteries.
Remote range is poor or intermittent.	Obstruction between remote and TV's IR receiver; low batteries.	Ensure a clear line of sight to the TV. Replace batteries.
Specific buttons are not working.	Dirt or debris under the button; internal malfunction.	Clean the remote surface. If problem persists, contact customer support.
Remote works for some functions but not others.	Compatibility issue with a specific TV model or function.	Verify your TV model is listed as compatible. Refer to your TV's manual for specific remote functions.

If the issue persists after attempting these solutions, please refer to the [Warranty & Support](#) section for further assistance.

7. WARRANTY & SUPPORT

7.1 Warranty Information

This VINABTY Replacement Remote Control is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms, duration, and conditions, please refer to the product packaging or contact the manufacturer directly.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact VINABTY customer support. Contact information can typically be found on the product packaging, the seller's website, or through the platform where the product was purchased.

When contacting support, please have your product model number (BN59-01358B) and purchase details readily available.