



Manuals.plus /

- › LUCKDANO /
- › LUCKDANO Sports MP3 MP4 Music Player User Manual

## LUCKDANO LUCKDANOpggcky5for-11

# LUCKDANO Sports MP3 MP4 Music Player User Manual

Model: LUCKDANOpggcky5for-11

---

## 1. INTRODUCTION

---

Thank you for choosing the LUCKDANO Sports MP3 MP4 Music Player. This device is designed for portable audio and video playback, featuring a lightweight design and long battery life, ideal for sports and travel. This manual provides essential information for setting up, operating, and maintaining your player.

### Key Features:

- **Long-lasting Battery:** Built-in 450mAh lithium-ion battery provides up to 30 hours of playback.
- **Ample Storage:** 8GB internal memory, expandable up to 64GB with a Micro Storage card (not included).
- **Portable Design:** Compact and lightweight, suitable for various activities.
- **User-Friendly:** Classic button interface for easy navigation and simple drag-and-drop file transfer.
- **Wide Format Support:** Compatible with MP3, WMA, OGG, WAV, APE, FLAC, AAC LC, ACELP audio formats.

## 2. PACKAGE CONTENTS

---

Please verify that all items are present in the package:

- 1 x MP3 MP4 Player
- 1 x Charging Cable
- 1 x Earphone
- 1 x Instruction Manual
- 1 x Plastic Box

## 3. SETUP

---

### 3.1 Charging the Device

Before first use, fully charge the player. Connect the provided charging cable to the player's USB port and to a USB power source (e.g., computer USB port or a USB wall adapter). A full charge typically takes 2-3 hours.

### 3.2 Powering On/Off

Locate the ON/OFF switch on the device. Slide it to the 'ON' position to power on the player. To power off, slide it to the 'OFF' position.





Image 3.2.1: Back view of the player, highlighting the ON/OFF switch and ports.

### 3.3 Transferring Music and Files

Connect the player to your computer using the USB charging cable. The player will appear as a removable disk drive. You can then drag and drop music files, videos, e-books, or images directly into the player's storage folders.

### 3.4 Expanding Storage (Micro SD Card)

The player supports Micro Storage cards up to 64GB (not included). Insert the Micro SD card into the designated slot on the device to expand your storage capacity for more files.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Navigation

The player features classic buttons for navigation:

- **M (Menu):** Access the main menu or go back to the previous screen.
- **Play/Pause:** Start or pause playback.
- **Previous/Next:** Navigate through tracks or menu options.
- **VOL (Volume):** Adjust the volume level.





Image 4.1.1: Front view of the player with screen and control buttons.

## 4.2 Music Playback

From the main menu, select 'Music' to browse your audio files. Use the navigation buttons to select a track

and press the Play/Pause button to begin playback. Adjust volume using the VOL button.

### 4.3 Key Combination Lock Screen

To prevent accidental touches during activities, you can lock the screen using a key combination.

- **To Lock:** Press the designated key combination (as shown on the screen) to lock the screen.
- **To Unlock:** Press the same key combination again. If the lock screen does not disappear, repeat the operation.



Image 4.3.1: Visual guide for the key combination lock screen feature.

### 4.4 Other Functions

The player also supports:

- **FM Radio:** Tune into your favorite radio stations.
- **Recording:** Use the built-in microphone for voice recordings.
- **Games:** Enjoy pre-loaded games.
- **E-books:** Read TXT format e-books.
- **Movies:** Play compatible video files.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your LUCKDANO MP3 MP4 Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods, to maintain battery health.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Protection:** Avoid dropping the device or exposing it to strong impacts.

## 6. TROUBLESHOOTING

---

If you encounter issues with your player, refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect to a power source and try again. Check the ON/OFF switch is in the 'ON' position.
- **Cannot transfer files:** Ensure the USB cable is securely connected to both the player and the computer. Try a different USB port or cable. Verify the player is recognized as a removable disk.
- **No sound:** Check the volume level. Ensure earphones are properly plugged in. Test with different earphones if possible. Verify the audio file format is supported.
- **Screen unresponsive:** If the screen is locked, follow the unlock procedure (Section 4.3). If the device is frozen, try holding the power button for an extended period to force a restart.
- **Micro SD card not recognized:** Ensure the card is inserted correctly. Try reinserting it. Test with a different compatible Micro SD card.

## 7. SPECIFICATIONS

---

| Feature                 | Specification  |
|-------------------------|--|
| Item Model Number       | LUCKDANOpaggcky5for-11                                 |
| Screen Type             | 1.8-inch TFT high-definition screen                    |
| Resolution              | 128 x 160 pixels                                       |
| USB Port                | High speed 2.0 interface                               |
| Internal Memory         | 8 GB   |
| External Memory         | Supports up to 64 GB Micro Storage card (not included) |
| Battery                 | Built-in 450 mAh lithium battery                       |
| Playback Time           | Up to 30 hours   |
| Charging Time           | 2-3 hours  |
| Supported Audio Formats | MP1, MP2, MP3, WMA, WAV, APE, FLAC, AAC LC, ACELP      |
| Supported Image Formats | JPEG, BMP, GIF   |
| Supported E-book Format | TXT  |
| Other Functions         | FM radio, recording, games, e-books, movies            |
| Supported Language      | English and other languages display                    |
| Package Dimensions      | 3.94 x 2.76 x 1.18 inches                              |
| Item Weight             | 3.25 ounces  |

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official LUCKDANO website. Keep your purchase receipt as proof of purchase for warranty claims.