

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [One Fire](#) /

› [One Fire Galaxy Projector Star Projector Night Light User Manual \(Model WH-E14A\)](#)

## One Fire WH-E14A

# One Fire Galaxy Projector Star Projector Night Light User Manual

Model: WH-E14A

Brand: One Fire

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and effective operation of your One Fire Galaxy Projector. This versatile device combines a star projector, night light, and Bluetooth speaker with built-in white noise options to create a relaxing and immersive environment. Please read this manual thoroughly before use and retain it for future reference.

## 2. WHAT'S IN THE BOX

---

- Galaxy Projector
- Remote Control
- Charging Cable
- User Manual

# It Seems to be in the Splendid Galaxy

Perfect Children's Room Decoration Gift



Image: Contents of the One Fire Galaxy Projector package.

## 3. SETUP INSTRUCTIONS

1. **Power Connection:** Connect the provided charging cable to the projector's power input and plug the other end into a compatible USB power adapter (not included).
2. **Placement:** Place the projector on a stable, flat surface. For optimal projection, position it in the center of the room or area where you desire the light effects. The projector has 2 adjustable projection angles.
3. **Power On:** Press the power button on the projector or the remote control to turn on the device.

## 4. OPERATING INSTRUCTIONS

### 4.1. Light Modes and Effects

The projector offers 15 color combinations and 360-degree dynamic light effects, including green stars. You can customize the colors and effects using the remote control.

- **Color Selection:** Use the color buttons (Red, Green, Blue, White) on the remote to select individual colors or combinations.
- **Star Projection:** Toggle the green stars on or off using the dedicated button on the remote.
- **Dynamic Speed:** Adjust the flowing speed of the nebula effects with 4 available settings (0%, 30%, 60%, 100%).
- **Brightness:** Select from 7 brightness levels to suit your preference.

## 15 Colors & 360 Light Modes Galaxy Projector & Room Decor



Image: Example of 15 color and 360-degree light modes projected by the device.

# Remote Control, Control Everything



Image: Remote control for adjusting timer, brightness, and speed settings.

## 4.2. White Noise and Bluetooth Speaker

The projector features 15 built-in white noise sounds and a Bluetooth 5.3 HiFi speaker.

- **White Noise:** Choose from 15 calming sounds including lullabies, white noises, and nature sounds (rain, sea wave, fan, bird singing).
- **Bluetooth Pairing:** Activate Bluetooth on your mobile device and connect to the projector (device name usually 'WH-E14A' or similar). You can then play music or stories through the projector's speaker.
- **Volume Control:** Adjust the volume using the remote control or the buttons on the projector.
- **Music Sync:** The light effects can flash rhythmically with the music played via Bluetooth.



# 15 White Noise Options

Nature's Symphony at Your Fingertips

Image: The projector's white noise feature creating a calming atmosphere.

# 15 White Noise Options

Nature's Symphony at Your Fingertips

## Voice of Nature



Creek



Wave



Thunderstorm



Rain



Birds



Cicadas



Frogs

## White Noise



White Noise



Pink Noise



Brown Noise



Fan

## Piano Music



Meditation



Sunrise




Cloud



Star

Image: A visual representation of the 15 white noise options.

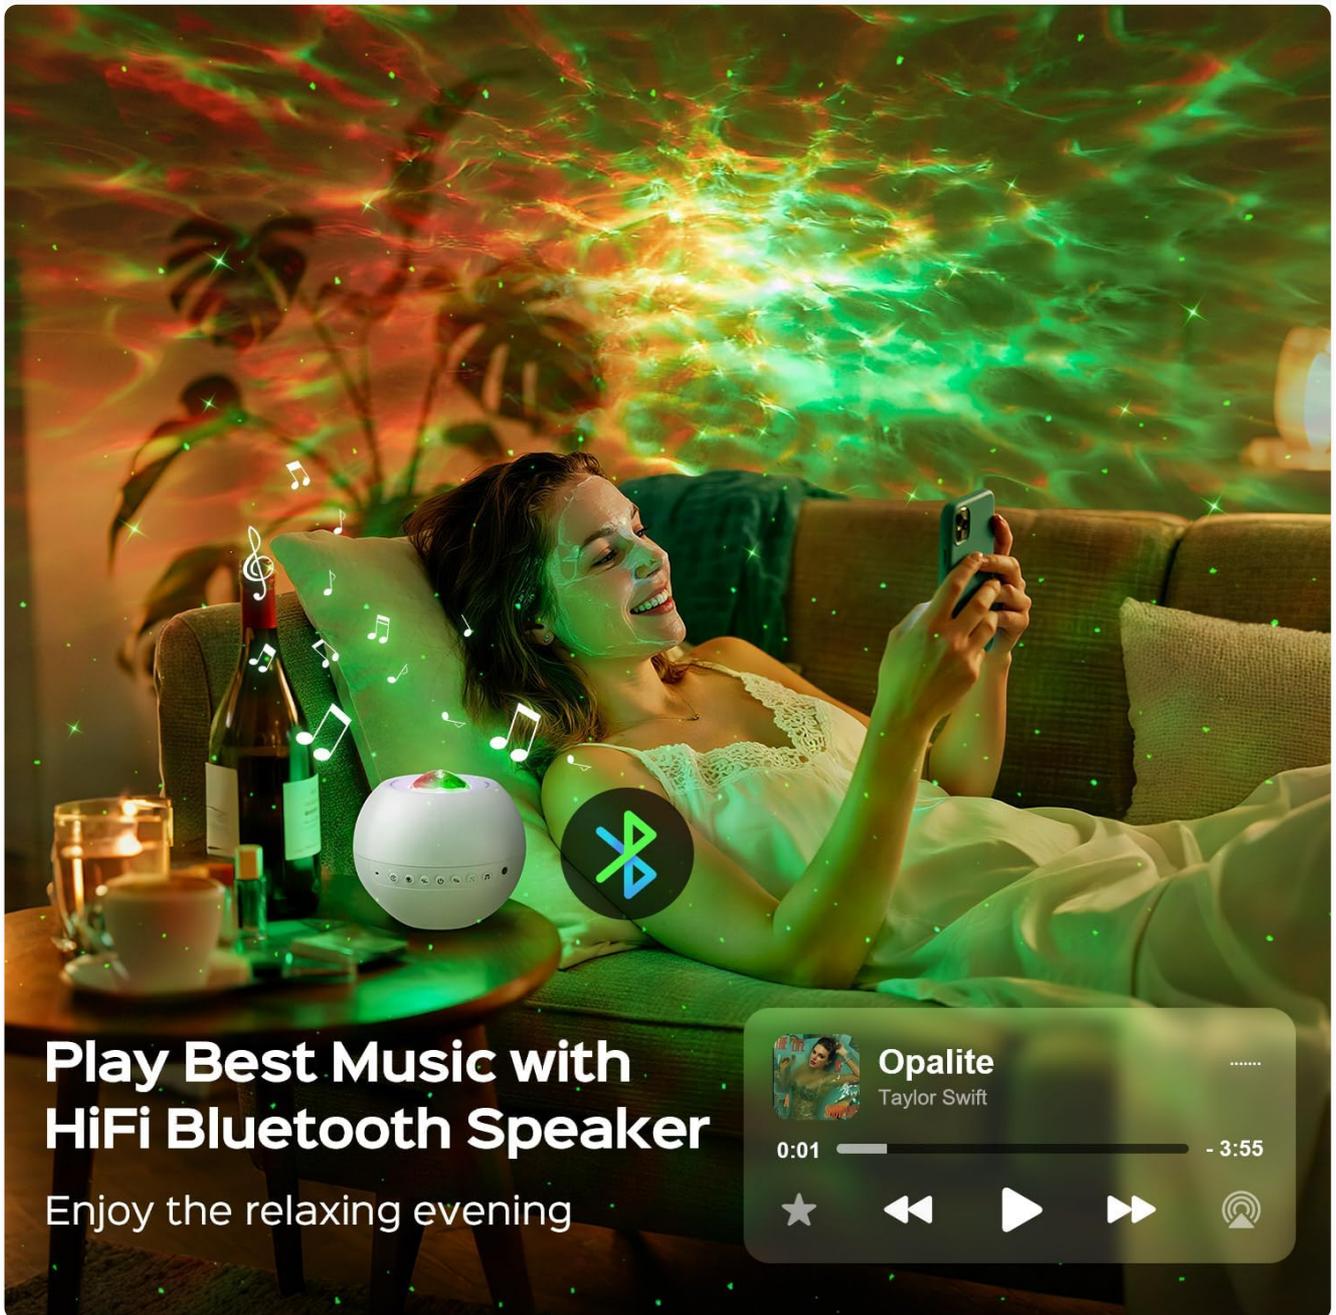

## Play Best Music with HiFi Bluetooth Speaker

Enjoy the relaxing evening



Image: Bluetooth speaker functionality for playing music.

### 4.3. Timer Function

Set an automatic shut-off timer for 2, 4, 6, or 8 hours using the remote control.

Video: Demonstration of the One Fire Galaxy Projector's light effects and features in a room setting.

## 5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the projector's surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the projector in a cool, dry place when not in use.
- **Safety:** Avoid direct eye exposure to the laser light. Keep the device away from water and high temperatures.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power or loose connection.	Ensure the charging cable is securely connected and the power adapter is working.
No light projection.	Light effects are turned off or brightness is too low.	Check remote settings to ensure light effects are enabled and brightness is adjusted.
Bluetooth not connecting.	Device not in pairing mode or out of range.	Ensure Bluetooth is enabled on your device and the projector is within range. Re-enter pairing mode if necessary.
Remote control not working.	Low battery or obstruction.	Replace remote control batteries. Ensure no obstructions between the remote and the projector.

## 7. SPECIFICATIONS

Feature	Detail
Model Name	WH-E14A
Product Dimensions	4"D x 4"W x 5"H
Item Weight	9.1 ounces (0.57 Pounds)
Material	Plastic
Light Source Type	LED
Light Color	15 Color Matches
Special Features	15 Color Match + Stars + 360 Lighting Effects, 15 White Noises, Bluetooth 5.3, Remote Control + 7 Brightness + 4 Timer + 4 Speed
Power Source	Corded Electric
Control Method	Remote
Room Type	Bathroom, Bedroom, Kids Room, Living Room, Playroom
Indoor/Outdoor Usage	Indoor

## 8. WARRANTY AND SUPPORT

One Fire provides a 3-year quality promise for this product. For any inquiries or support needs, please contact the manufacturer directly. The brand is committed to world-class quality and customer-first service.