

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [XINGLINSHOE](#) /

› XINGLINSHOE TF-T31 Wireless Earbuds User Manual

XINGLINSHOE TF-T31

XINGLINSHOE TF-T31 Wireless Earbuds User Manual

Model: TF-T31 (TFT3101)

1. INTRODUCTION

Welcome to the user manual for your XINGLINSHOE TF-T31 Wireless Earbuds. These earbuds are designed to provide a high-quality audio experience with advanced Bluetooth 5.4 technology, powerful bass, and a comfortable fit. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new device.



Image 1: The XINGLINSHOE TF-T31 Wireless Earbuds and their charging case, showcasing their retro-inspired design.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- XINGLINSHOE TF-T31 Wireless Earbuds (Left and Right)
- Charging Case
- Charging Cable
- User Manual (this document)

3. PRODUCT FEATURES

- **Retro-Inspired Aesthetic:** Alloy casing with a battle-worn, distressed finish.
- **Advanced Bluetooth 5.4:** Stable connection, fast pairing, and wide compatibility with JL6973D4 chipset.
- **Comfortable Fit:** Engineered for secure fit, suitable for sports and fitness.
- **Extended Battery Life:** Up to 60 hours of total playtime with the charging case.
- **Impressive Sound Quality:** Large 13mm dynamic drivers for powerful bass and clear high frequencies, supporting AAC and SBC audio codecs.

4. SETUP

4.1 Charging the Earbuds and Case

1. Connect the charging cable to the charging port on the case and to a USB power source.
2. The indicator light on the charging case will show charging status. A full charge typically takes approximately 1.5-2 hours for the case.
3. Place the earbuds into the charging case. They will automatically begin charging. The earbuds have a 30mAh battery each, and the case has a 300mAh battery.

4.2 Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds.
3. On your device (smartphone, tablet, computer), go to Bluetooth settings and turn on Bluetooth.
4. Search for available devices. Select "TF-T31" or "XINGLINSHOE Earbuds" from the list.
5. Once connected, the earbud indicator lights will stop flashing, and you will hear a confirmation tone.
6. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

5. OPERATING INSTRUCTIONS

The TF-T31 earbuds feature touch controls for easy operation. The control method is primarily touch-based.

5.1 Music Playback

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

5.2 Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.3 Voice Assistant

- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds (e.g., Siri, Google Assistant).

6. MAINTENANCE

6.1 Cleaning

To maintain optimal performance and hygiene:

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Keep charging contacts clean and free of debris.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage. Store in a cool, dry place away from extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing.	<ul style="list-style-type: none">• Ensure earbuds are charged.• Place earbuds back in the case, close, then open again to re-enter pairing mode.• Turn off and on Bluetooth on your device.• Forget "TF-T31" from your device's Bluetooth list and try pairing again.
No sound from one earbud.	<ul style="list-style-type: none">• Ensure both earbuds are charged.• Try resetting the earbuds (refer to advanced troubleshooting if available, or place back in case).• Clean the charging contacts on both earbuds and inside the case.
Charging issues.	<ul style="list-style-type: none">• Check the charging cable and power adapter.• Ensure the charging contacts on the earbuds and case are clean and free of debris.• Try a different charging cable or power source.
Poor sound quality / static.	<ul style="list-style-type: none">• Ensure earbuds are fully charged. Low battery can affect sound quality.• Move closer to your connected device to avoid interference.• Check for physical obstructions between earbuds and device.• Clean any earwax or debris from the earbud nozzles.

8. SPECIFICATIONS

Feature	Detail
Model Name	TFT3101
Brand	XINGLINSHOE
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Chipset	JL6973D4
Earbud Battery Capacity	30mAh (each)
Charging Case Battery Capacity	300mAh
Total Playtime (with case)	Up to 60 Hours
Audio Driver Size	13mm
Audio Driver Type	Dynamic Driver

Feature	Detail
Audio Codec Support	AAC, SBC
Control Method	Touch
Frequency Range	20 Hz - 20,000 Hz
Impedance	32 Ohm
Material	Metal (Alloy Casing)
Color	Black
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

XINGLINSHOE products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official XINGLINSHOE website.

If you encounter any issues or have questions not covered in this manual, please contact our customer support team.

Details for contacting support can typically be found on the product packaging or the official brand website.

Website: [XINGLINSHOE Official Page \(Amazon\)](#)