

## VIVOHOME VH1635

# VIVOHOME VH1635 1500W 3D Oscillating Ceramic Space Heater User Manual

Model: VH1635 | Brand: VIVOHOME

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this space heater. Failure to follow these instructions may result in fire, electric shock, injury, or property damage. Keep this manual for future reference.

- **Placement:** Always place the heater on a firm, level surface. Do not place on soft surfaces like beds or rugs where openings may be blocked.
- **Clearance:** Maintain a minimum distance of 3 feet (0.9 meters) from combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains.
- **Power Source:** Connect heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- **Overheat Protection:** The heater is equipped with an automatic overheat protection system. If the heater overheats, it will automatically shut off. Unplug the heater, allow it to cool for 30 minutes, then plug it back in.
- **Tip-Over Protection:** This heater features a safety tip-over switch that automatically shuts off the unit if it is knocked over. Ensure the heater is on a stable surface.
- **V0 Flame-Retardant Materials:** Constructed with V0 flame-retardant materials for enhanced safety.
- **Safety Plug:** Includes an enhanced safety plug to prevent electrical hazards.
- **Moisture:** Do not use the heater in wet or moist locations like bathrooms or laundry areas.
- **Supervision:** Close supervision is necessary when any heater is used by or near children or invalids, and whenever the heater is left operating and unattended.

# Multi-protecting



Tip-over  
Protection



ETL  
Listed



Overheating  
Protection



V-0 Flame  
Retardant



Enhanced  
Safety Plug



Image: The VIVOHOME Space Heater highlighting its multi-protecting features, including tip-over and overheat protection, V-0 flame retardant materials, and an enhanced safety plug. A child is shown crawling nearby, emphasizing safety.

## 2. PRODUCT OVERVIEW

The VIVOHOME VH1635 is a portable 1500W ceramic space heater designed for indoor use, offering efficient and quiet heating with advanced features for comfort and safety.

### Key Features:

- **Fast Heating:** 1500W PTC ceramic technology with a high-speed fan for rapid heat generation (heats up in 3 seconds).
- **3D Oscillation:** Adjustable heat output up and down (60°) and automatic left/right rotation (70°) for wide heat distribution.
- **4 Heating Modes:** High (1500W), Low (900W), ECO, and Fan Only.
- **Energy-Saving ECO Mode:** Maintains desired temperature (41°F to 95°F) by switching to low heat once set temperature is reached.

- **Remote Control:** Conveniently adjust settings from a distance.
- **12-Hour Timer:** Program operation time for energy saving and convenience.
- **LED Display & Touchscreen:** Clear display for real-time temperature and timer settings, with easy-to-use touch controls.
- **Quiet Operation:** Operates at less than 32dB for an undisturbed environment.
- **Portable Design:** Features a built-in carrying handle for easy transport.



Image: The VIVOHOME Space Heater in a living room, illustrating its 3-second instant heating capability and 1500W power output.



Image: A person easily transporting the VIVOHOME Space Heater using its convenient carrying handle.

### 3. SETUP

Setting up your VIVOHOME VH1635 space heater is quick and easy.

1. **Unpack:** Carefully remove the heater from its packaging and ensure all components are present and undamaged.
2. **Placement:** Place the heater on a stable, flat, and heat-resistant surface. Ensure it is at least 3 feet (0.9 meters) away from walls, furniture, and other objects.
3. **Power Connection:** Plug the heater directly into a 110-Volt AC electrical outlet. Do not use extension cords or power strips.
4. **Initial Use:** During the first few minutes of operation, you may notice a slight odor. This is normal and will quickly disappear.

## 4. OPERATING INSTRUCTIONS

Your VIVOHOME VH1635 heater can be operated using the touchscreen controls on the unit or the included remote control.

### Controls:



Image: Detailed view of the heater's touch control panel and LED display for easy operation and reading.

# Remote Control

No need to walk over to control



Image: The VIVOHOME Space Heater remote control, showing buttons for power, mode, timer, oscillation, and temperature adjustments.

## Functions:

1. **Power On/Off:** Press the **Power** button to turn the heater on or off.
2. **Mode Selection:** Press the **Mode** button to cycle through the 4 operating modes:
  - **High (1500W):** Provides maximum heat output.
  - **Low (900W):** Provides reduced heat output.
  - **ECO Mode:** Energy-saving mode. The heater will adjust its power output (High/Low) to maintain the set temperature. You can set the temperature between 41°F and 95°F in 1°F increments using the **Up/Down** buttons.
  - **Fan Only:** Operates as a fan without heat.

# 4 Heating Modes



Image: The heater illustrating its four operational modes: High (1500W), Low (900W), Fan, and ECO mode, with the ECO mode showing a temperature range of 41°F to 95°F.

3. **Temperature Adjustment (ECO Mode):** In ECO mode, use the **Up (+)** and **Down (-)** buttons to set your desired room temperature between 41°F and 95°F.
4. **Oscillation Control:** Press the **Oscillation** button to activate the 3D oscillation feature. The heater will automatically rotate left and right (70°) and adjust its tilt up and down (60°).

# Broad Oscillation



Image: The heater showcasing its broad oscillation capabilities, with 60 degrees of up/down movement and 70 degrees of left/right rotation.

5. **Timer Function:** Press the **Timer** button to set an automatic shut-off time from 1 to 12 hours. Each press increases the timer by one hour. The LED display will show the remaining time.

# 32dB Low Noise

Ensuring an undisturbed peace sleep



Image: The heater demonstrating its quiet operation (under 32dB) and the 12-hour timer function, ideal for use in a bedroom.

## Official Product Video:

Your browser does not support the video tag.

Video: An official VIVOHOME video demonstrating the 3D oscillating space heater with remote control and 12-hour timer features.

## 5. MAINTENANCE

Regular maintenance helps ensure the efficient and safe operation of your heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles.
- **Storage:** If storing the heater for an extended period, clean it thoroughly and store it in a cool, dry place.

- **No User-Serviceable Parts:** Do not attempt to open or repair the heater yourself. Refer all servicing to qualified service personnel.

## 6. TROUBLESHOOTING

If you encounter issues with your VIVOHOME VH1635 heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, tip-over switch activated, or overheat protection activated.	Ensure the power cord is securely plugged into a working outlet. Check if the heater is on a stable surface. Unplug the heater, wait 30 minutes for it to cool down, then plug it back in.
Heater stops working unexpectedly.	Overheat protection or tip-over switch activated.	Refer to the solutions for "Heater does not turn on." Ensure air intake/exhaust are not blocked.
No heat output in heating modes.	Heater is in Fan Only mode, or thermostat setting is too low.	Press the <b>Mode</b> button to select High, Low, or ECO mode. In ECO mode, increase the set temperature using the <b>Up (+)</b> button.
Remote control not working.	Dead batteries or obstruction.	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the heater.
Oscillation not working.	Oscillation function not activated.	Press the <b>Oscillation</b> button on the unit or remote.

## 7. SPECIFICATIONS

Feature	Specification
Brand	VIVOHOME
Model Number	VH1635
Special Features	3D Oscillating, Adjustable Temperature, Electronic Thermostat, Energy Efficient
Color	Black
Form Factor	Tower

Feature	Specification
Indoor/Outdoor Usage	Indoor
Product Dimensions	7.4"D x 7.4"W x 16.5"H
Recommended Uses	Home, Office
Mounting Type	Floor Mount
Room Type	Bedroom, Dining Room, Garage, Home Office, Study Room
Heating Coverage	160 sq ft
Fuel Type	Electric
Voltage	110 Volts
Amperage	12.5 Amps
Min Temperature Setting	41 Degrees Fahrenheit
Max Temperature Setting	95 Degrees Fahrenheit
Item Weight	4.2 pounds

## 8. WARRANTY AND SUPPORT

VIVOHOME stands behind the quality of its products. For warranty information, technical support, or any questions regarding your VH1635 space heater, please contact VIVOHOME customer service. Please refer to the product packaging or the official VIVOHOME website for the most up-to-date warranty details and contact information.

**Website:** [VIVOHOME Official Store](#)