



[Manuals.plus](#) /

> [kwiwis](#) /

> [kwiwis 12L 60W Portable Mini Washing Machine User Manual](#)

kwiwis 12L 60W Portable Mini Washing Machine

kwiwis 12L 60W Portable Mini Washing Machine User Manual

Model: 12L 60W Portable Mini Washing Machine

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your kwiwis 12L 60W Portable Mini Washing Machine. Please read these instructions carefully before use and retain for future reference.

The kwiwis portable mini washing machine is designed for washing small loads of laundry such as underwear, socks, baby clothes, and towels. Its foldable design makes it suitable for travel, dormitories, RVs, and small apartments.

2. SAFETY INSTRUCTIONS

- Always ensure the power supply matches the voltage specified on the appliance.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Do not operate the machine if the power cord or plug is damaged. Contact customer support for assistance.
- Avoid washing heavy items like thick coats or quilts, as this may damage the machine or reduce cleaning effectiveness. Refer to the capacity guidelines.
- Ensure the drain hose is properly positioned to prevent water leakage during operation.
- Do not touch the spinning basket or clothes during the spin-drying cycle to prevent injury.

3. PRODUCT OVERVIEW

3.1 Components

- Main Washing Unit (Foldable Tub)
- Lid
- Drain Hose
- Power Cord

- Spin Drying Basket (Dehydration Basket)

3.2 Key Features

- **12-Liter Capacity:** Suitable for small loads like underwear, socks, baby clothes, and towels.
- **Foldable Design:** Compact for easy storage and portability.
- **Three Washing Modes:** 10-minute standard wash, 5-minute quick wash, and 3-minute spin dry.
- **Semi-Automatic Operation:** Simple push-button controls.
- **Blue Light Sterilization:** Integrated blue light during spin drying for enhanced hygiene.
- **Non-slip Suction Cups:** For stable placement during operation.
- **Energy and Water Efficient:** Designed for reduced consumption.

4. SETUP

1. **Unpack the Machine:** Carefully remove the washing machine and all accessories from its packaging.
2. **Expand the Unit:** Gently pull up the top rim of the washing machine to expand the foldable tub until it locks into place.
3. **Secure Placement:** Place the washing machine on a flat, stable surface. The non-slip suction cups on the base will help secure it.
4. **Connect Drain Hose:** Attach the drain hose to the designated outlet on the side of the machine. Ensure it is securely fastened to prevent leaks. Position the other end of the drain hose into a sink or drainage area.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet.



Image: The control panel with wash modes and the compact dimensions of the kwiwis portable mini washing machine.

5. OPERATING INSTRUCTIONS

5.1 Washing Cycle

- 1. Load Laundry:** Open the lid and place your laundry items into the washing tub. Do not overload the machine. The 12L capacity is ideal for items like 5 pairs of underwear, 5 pairs of socks, or a few baby clothes/towels. Avoid heavy items.
- 2. Add Water and Detergent:** Fill the tub with an appropriate amount of water, ensuring clothes are submerged. Add a small amount of liquid detergent.
- 3. Select Wash Mode:** On the control panel, choose your desired washing mode:
 - **Routine (10 minutes):** Standard wash cycle for general cleaning.
 - **Express Laundry (5 minutes):** Quick wash for lightly soiled items.
- 4. Start Washing:** Press and hold the "Start/Stop" button for two seconds to begin the selected wash cycle. The machine will agitate the clothes.

Large Capacity



✓ Underwear



✓ Towels



✓ Underwear



✓ Socks



✓ Baby Clothes



✓ Shawls



✗ Heavy Coat



✗ Quilt



✗ Thick Coat



✗ Jumpers



Image: Visual guide indicating suitable laundry items (underwear, towels, socks, baby clothes, shawls) and unsuitable items (heavy coats, quilts, thick coats, jumpers) for the 12L capacity.

Double Layer Deep Cleaning



Image: Illustration of the pulsator design for double-layer deep cleaning within the kwiwis portable mini washing machine.

5.2 Draining Water

1. Once the wash cycle is complete, ensure the drain hose is positioned to direct water into a sink or drain.
2. The machine will automatically drain the water. If not, you may need to manually position the drain hose lower than the machine's base.

5.3 Spin Drying (Dehydration)

1. After draining the wash water, place the spin drying basket inside the tub.
2. Transfer the washed clothes into the spin drying basket. Distribute them evenly to ensure balance during spinning.
3. Close the lid.
4. On the control panel, select **Dehydration (3 minutes)**.
5. Press and hold the "Start/Stop" button for two seconds to begin the spin-drying cycle. A blue light will activate during this cycle, which aids in hygiene.

6. Once the cycle is complete, carefully remove the clothes.

Your browser does not support the video tag.

Video: Demonstration of the kwiwis portable mini washing machine's setup, washing, draining, and spin-drying functions. Note: The video title refers to a 9L Grey model, but the operational steps are applicable to this 12L Blue model.

6. MAINTENANCE

- **Cleaning the Tub:** After each use, rinse the tub with clean water and wipe it dry with a soft cloth.
- **Cleaning the Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or solvents.
- **Drain Hose:** Ensure the drain hose is clear of any blockages.
- **Storage:** When not in use, fold the machine down to its compact size and store it in a dry, cool place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start.	Power cord not properly plugged in; power outage; "Start/Stop" button not held for 2 seconds.	Check power connection; ensure power is available; press and hold "Start/Stop" button for 2 seconds.
Water does not drain.	Drain hose is kinked or blocked; drain hose is not positioned lower than the machine.	Straighten the drain hose and check for blockages; ensure the drain hose outlet is lower than the machine's base.
Poor washing performance.	Overloading the machine; insufficient water or detergent; washing unsuitable heavy items.	Reduce laundry load; add appropriate amount of water and detergent; only wash recommended items.
Spin drying basket comes off during operation.	Clothes are unevenly distributed in the spin basket; basket not properly seated.	Ensure clothes are evenly distributed in the spin basket; verify the basket is securely placed before starting.
Excessive noise or vibration.	Machine is not on a stable, flat surface; uneven load during washing or spinning.	Place the machine on a stable surface; redistribute laundry evenly.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (D x W x H)	4"D x 4"W x 5"H (Note: This dimension appears to be for a very compact, possibly folded state, or an error in the source data. Visuals suggest an expanded size closer to 11.5"W x 10.5"H.)
Brand	kwiwis
Special Feature	High Efficiency
Access Location	Top Load

Feature	Detail
Color	Blue
Cycle Options	Normal (Standard Wash), Quick Wash, Dehydration (Spin Dry)
Item Weight	2 Pounds
Material	Plastic ABS
Controls Type	Push Button
Operation Mode	Semi Automatic
Max Rotational Speed	1500 RPM
Installation Type	Under Counter (Portable)
Model Name	12L 60W Portable Mini Washing Machine

Note on dimensions: The provided product dimensions (4"D x 4"W x 5"H) appear to be for a very compact, possibly folded state, or an error in the source data. Visuals suggest an expanded size closer to 11.5"W x 10.5"H. Please refer to product packaging for precise measurements.

9. WHAT'S IN THE BOX

- 1 x kwiwis 12L 60W Portable Mini Washing Machine (Main Unit)
- 1 x Lid
- 1 x Drain Hose
- 1 x Power Cord
- 1 x Spin Drying Basket

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.