

VINABTY RM-C3604

VINABTY RM-C3604 Replacement Remote Control User Manual

For JVC LED TV Models

1. PRODUCT OVERVIEW

The VINABTY RM-C3604 is a high-quality infrared replacement remote control designed for various JVC LED TV models. It requires no programming or setup, functioning directly out of the box once batteries are installed. Its ergonomic design ensures comfortable handling and precise control.

Key Features:

- **No Programming Required:** Ready to use with compatible JVC TVs.
- **Infrared Technology:** Advanced IR sensor for reliable long-distance transmission (up to 10 meters / 33 feet).
- **Ergonomic Design:** Lightweight and comfortable to hold, preventing slips.
- **Durable Construction:** Made from high-quality ABS material with soft, responsive buttons.

Compatible JVC LED TV Models:

This remote control is compatible with, but not limited to, the following JVC LED TV models:

- LT-43VU2255
- LT-43VU2201
- LT-50K8100(A)
- LT-43VU8156
- LT-32VAF3001
- LT-40VF3001
- LT-55VU3101
- LT-58VU6255
- LT-32VF5105
- LT-43VF5105
- LT-43VU3100



Image 1.1: Front view of the VINABTY RM-C3604 replacement remote control, showing all buttons and its ergonomic shape.

2. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure safe operation and prolong the life of your remote control:

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquids.
- Keep batteries out of reach of children. If swallowed, seek medical attention immediately.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

3. PACKAGE CONTENTS

Your package should contain the following item:

- 1 x VINABTY RM-C3604 Replacement Remote Control

Note: AAA batteries are required for operation and are not included in the package.

4. SETUP

Installing Batteries:

To begin using your remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image 4.1: Back view of the remote control with the battery compartment open, illustrating where to insert AAA batteries.

Your remote control is now ready for use. No additional pairing or programming is required for compatible JVC LED TVs.

5. OPERATING INSTRUCTIONS

Point the remote control directly at your JVC LED TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

Basic Functions:

- **Power Button (U):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (V+/V-):** Adjusts the TV's volume level.
- **Channel Up/Down (P+/P-):** Changes the TV channel sequentially.
- **Mute Button (M):** Mutes or unmutes the TV's audio.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button:** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.
- **Home Button (H):** Accesses the TV's main home screen or smart TV interface.

Special Function Buttons:

The remote control includes dedicated buttons for quick access to popular streaming services:

- **NETFLIX Button:** Launches the Netflix application.
- **Prime Video Button:** Launches the Amazon Prime Video application.
- **YouTube Button:** Launches the YouTube application.
- **Twitch Button:** Launches the Twitch application.
- **Rakuten TV Button:** Launches the Rakuten TV application.



Image 5.1: Detailed front view of the remote control, highlighting the layout of all buttons, including dedicated streaming service buttons.

6. MAINTENANCE

Cleaning:

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

Battery Replacement:

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Refer to Section 4 for battery installation instructions.

7. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote control has short range or intermittent response.	Low batteries, obstruction, or remote not pointed at TV.	Replace batteries. Ensure a clear line of sight between the remote and the TV's IR receiver. Move closer to the TV.
Specific buttons are not responding.	Dirty contacts or button malfunction.	Clean the remote control. If the issue persists, the button may be faulty.
Remote control does not work with my JVC TV model.	TV model is not compatible.	Verify your TV model against the compatible list in Section 1. If your model is not listed, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	VINABTY
Model	RM-C3604
Dimensions (L x W x H)	18 x 3 x 1.5 cm (7.09 x 1.18 x 0.59 inches)
Weight	70 g (2.47 oz)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Maximum Range	10 meters (33 feet)
Number of Buttons	20

Feature	Specification
Special Feature	Ergonomic design
Compatible Devices	JVC LED Televisions

9. WARRANTY AND SUPPORT

VINABTY is committed to providing excellent after-sales service for its remote controls. While this manual lists known compatible models, new models may be released or specific regional variations may exist.

If your device model is not explicitly listed in this manual, or if you encounter any issues with the remote control's functionality, please do not hesitate to contact our customer support. We are dedicated to assisting you in finding the correct solution and ensuring your satisfaction.

For support, please refer to the contact information provided with your purchase or visit the VINABTY official website.

