

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YESHOMY](#) /

› [YESHOMY Fireplace TV Stand for Televisions up to 65+ Inch with Storage and Farmhouse Sliding Barn Doors, Entertainment Center with Cabinet and Shelves, Media Console, Dark Brown \(Model YH-TS23-213-8NEW\)](#)

YESHOMY YH-TS23-213-8NEW

YESHOMY Fireplace TV Stand Instruction Manual

Model: YH-TS23-213-8NEW

1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your YESHOMY Fireplace TV Stand. Please read these instructions thoroughly before beginning assembly or operation to ensure safe and correct usage. Keep this manual for future reference.

2. SAFETY INFORMATION

Your safety and the safety of others are very important. Please follow all safety instructions carefully.

- Always follow the assembly instructions carefully.
- Keep children and pets away from the assembly area.
- Do not operate the fireplace without proper assembly and ventilation.
- Do not place heavy objects on the top of the TV stand to prevent tipping.
- Ensure the power cord is not pinched or routed under the unit.
- Do not use the fireplace near water or in damp locations.
- Unplug the fireplace from the power outlet before cleaning or maintenance.

3. PACKAGE CONTENTS

The YESHOMY Fireplace TV Stand is delivered in two separate packages. Please ensure you have received both packages and all components are present before starting assembly. Refer to the included parts list in your packaging for detailed component identification.

Typical components include:

- Wooden panels for the TV stand structure
- Hardware kit (screws, dowels, cam locks, etc.)

- Sliding barn door hardware and doors
- Electric fireplace insert
- Remote control for fireplace
- Instruction manual (this document)

4. ASSEMBLY INSTRUCTIONS

Assembly requires careful attention to detail. It is recommended that two adults assemble this unit. Please follow the step-by-step instructions provided in the separate assembly guide included in your package. Ensure all parts are correctly oriented before tightening fasteners.

Key Assembly Features:

- **Detachable Fireplace:** The electric fireplace can be installed or removed. A wooden board is provided to cover the opening if the fireplace is not used.
- **Adjustable Shelves:** The internal shelves are adjustable to accommodate various media devices or decorative items.
- **Cable Management:** Integrated cable holes are present on the back panel for organized wiring.
- **Sliding Barn Doors:** The doors operate on a smooth slide track for easy access to storage compartments.



Figure 4.1: Detachable fireplace feature, allowing for versatile use of the TV stand.

26" Large Electric Fireplace with Remote

The fireplace can be used as a space heater with temperatures ranging from 65F-100F.



Heating Fireplace
(65F-100F)



Timer Control
(1-8 hours)



Flame Effect
(Simulated 3D Flame)



CSA/UL Listed



The fireplace and TV stand are divided into two packages. So the delivery time may be different.

Figure 4.2: Key design features including adjustable shelving, sliding door mechanism, and cable management.

5. OPERATING THE ELECTRIC FIREPLACE

The integrated electric fireplace provides both aesthetic flame effects and supplemental heating. It can be operated via the control panel on the unit or the included remote control.

Fireplace Features:

- Heating:** Provides warmth with adjustable temperature settings (65°F-100°F).
- Timer Control:** Set the fireplace to operate for a specific duration (1-8 hours).
- Flame Effect:** Simulated 3D flame effect can be used independently of the heating function.
- Safety:** CSA/UL Listed for safety. The front glass remains cool to the touch.

Basic Operation:

1. Ensure the fireplace is properly installed and plugged into a grounded 120V AC outlet.
2. Press the 'Power' button on the control panel or remote to turn the unit on/off.
3. Use the 'Heater' button to activate the heating function and adjust temperature.

4. Use the 'Flame' button to cycle through different flame brightness settings or turn off the flame effect.
5. Use the 'Timer' button to set the desired operating duration.



Figure 5.1: Electric fireplace features and remote control functions.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and fireplace.

- **Cleaning the Stand:** Wipe the wooden surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Use a dry cloth to wipe the exterior. Do not spray water or cleaning solutions directly onto the unit.
- **Dust Removal:** Periodically dust the air intake/output vents of the fireplace to maintain proper airflow.
- **Hardware Check:** Occasionally check all assembly hardware to ensure it remains tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter issues with your YESHOMY Fireplace TV Stand, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fireplace does not turn on	No power supply; Unit is off; Remote battery low	Check power cord connection and wall outlet; Press power button on unit or remote; Replace remote batteries.

Problem	Possible Cause	Solution
No heat output	Heater function not activated; Temperature setting too low	Activate heater function; Increase temperature setting.
Flame effect not working	Flame effect turned off	Press the 'Flame' button to activate or adjust.
Unit is wobbly after assembly	Loose hardware; Uneven floor	Retighten all screws and fasteners; Place shims under the stand if the floor is uneven.
Sliding doors stick or are difficult to move	Track obstruction; Misalignment	Check for debris in the track; Ensure doors are correctly seated on the track.

If problems persist, please contact customer support.

8. SPECIFICATIONS

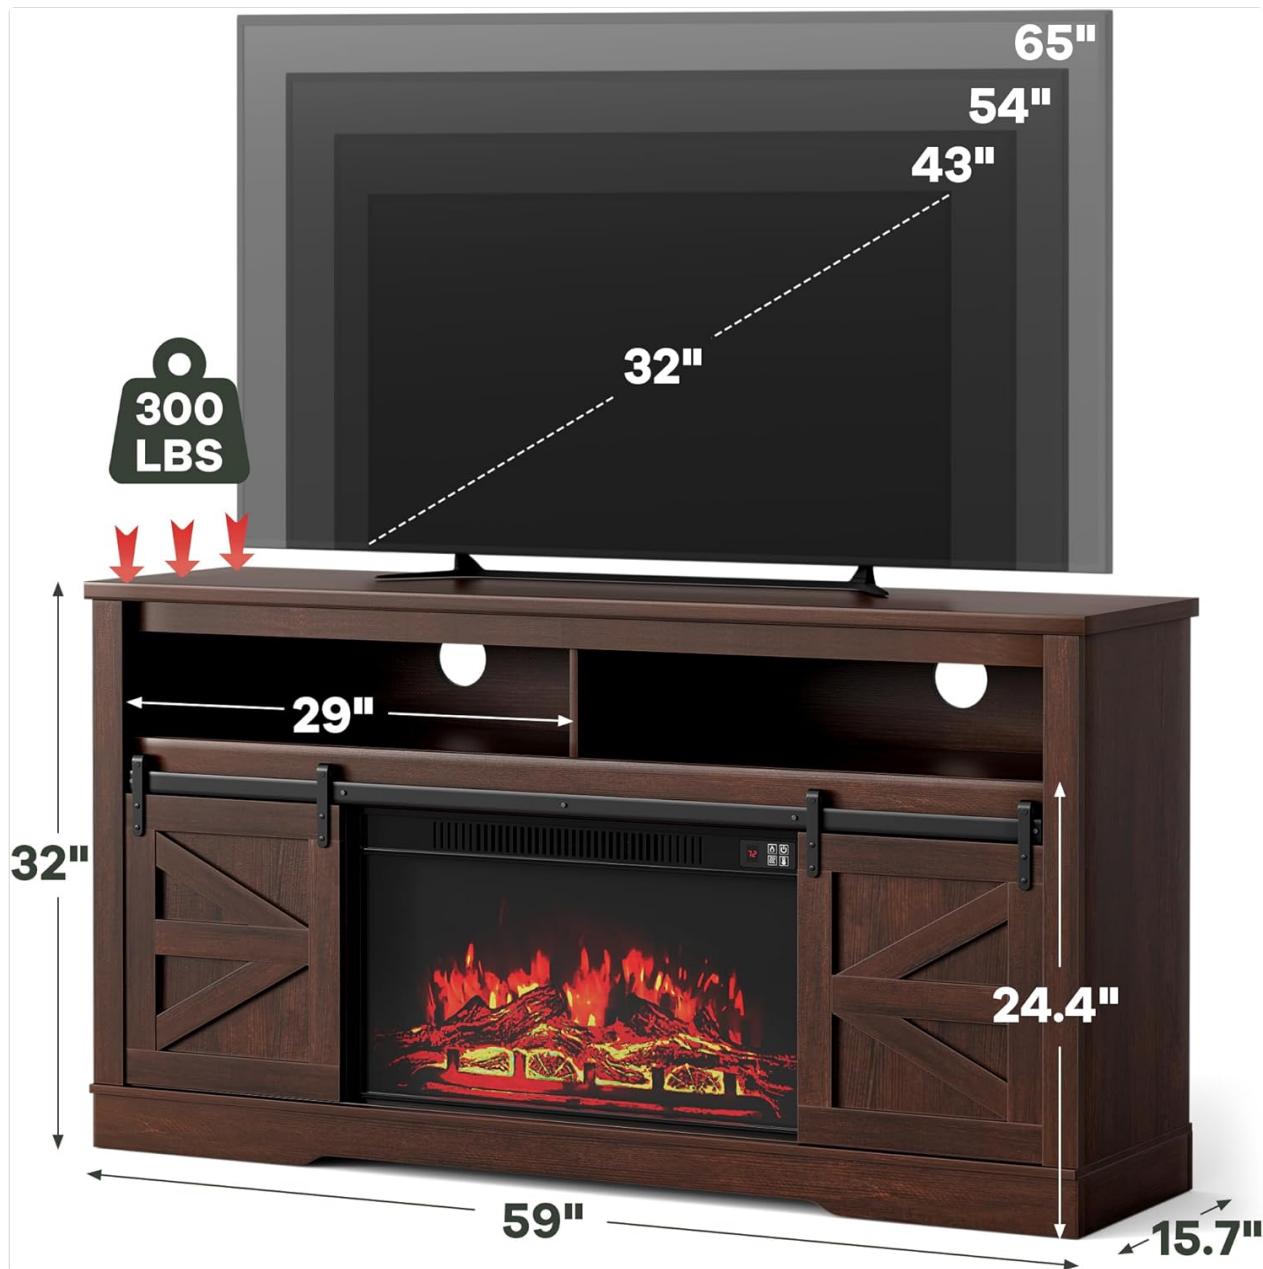


Figure 8.1: Product dimensions and TV size compatibility.

Feature	Detail
Brand	YESHOMY
Model Number	YH-TS23-213-8NEW
Product Dimensions	59 x 15.74 x 32 inches (L x W x H)
Item Weight	107 pounds
Material	Wood
Color	Dark Brown
TV Size Compatibility	Up to 65+ inches
Fireplace Heating Range	65°F - 100°F
Fireplace Timer	1-8 hours

Feature	Detail
Certifications	CSA/UL Listed (Fireplace)
Product Care Instructions	Wipe with Dry Cloth
UPC	774816297342

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official YESHOMY website. Please have your model number (YH-TS23-213-8NEW) and purchase date available when contacting support.